

WINTERIZING YOUR FINN EQUIPMENT

BARK BLOWERS

- A. Blow all material out of machine, turn off engine & disconnect battery cable
- B. Inspect discharge hose for wear or cracks. Replace if necessary
- C. Clean out all material in discharge airlock assembly. Coat internals of airlock with rust preventative such as "WD-40". Do not allow water to accumulate. Freezing can cause major damage.
- D. Inspect airlock assembly closely. Replace knives & end seals if necessary. If air lock leaks air & shows signs of wear, contact Finn for possible repair or replacement.
- E. Remove the inlet elbow to the blower (unit drive coupled to engine) & coat internals with rust preventative. Reconnect piping to prevent foreign debris from entering blower. Repeat process monthly or conditions require.
- F. Check gearboxes for proper oil level
- G. Raise hydraulic cylinder all the way up for storage
- H. Change battery in the hand held remote
- I. Adjust & spray lubricant on floor drag chains.



Bark Blower Winterizing