



9281 LeSaint Drive • Fairfield, Ohio 45014  
Phone (513) 874-2818 • Fax (513) 874-2914  
**Sales: 1-800-543-7166**



# LF120 Landfill Machine

## Parts Manual

Model ML

# ADDENDUM



# IMPORTANT!

This manual should be used in conjunction with the standard Operation and Parts Manual.

The information provided in this document only covers the parts/components not covered in the standard manual.

## SAFETY FIRST

With any piece of equipment, new or used, the most important part of its operation is **SAFETY!**





FINN Corporation encourages you and your employees to familiarize yourselves with your new equipment and stresses safe operation.

The first section of the standard Operation and Parts Manual includes a summary of all the main safety aspects associated with this unit. Read this section thoroughly before attempting to operate the equipment.

## OPERATION

The operation and maintenance section presented in the standard parts and operator's manual provides step-by-step instructions for the operation and maintenance of the unit.

Follow this section carefully to get the best results and to ensure a long life for your Finn product.

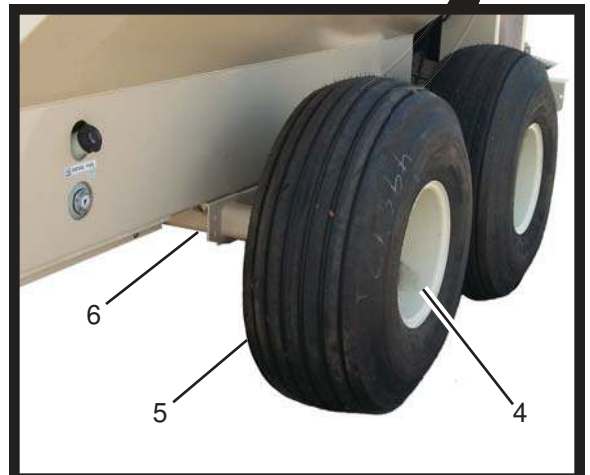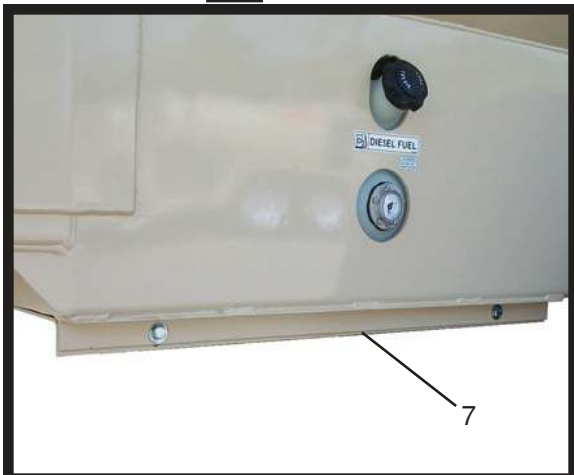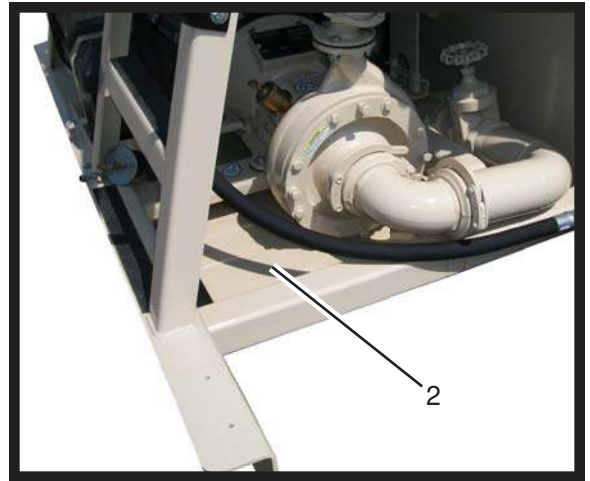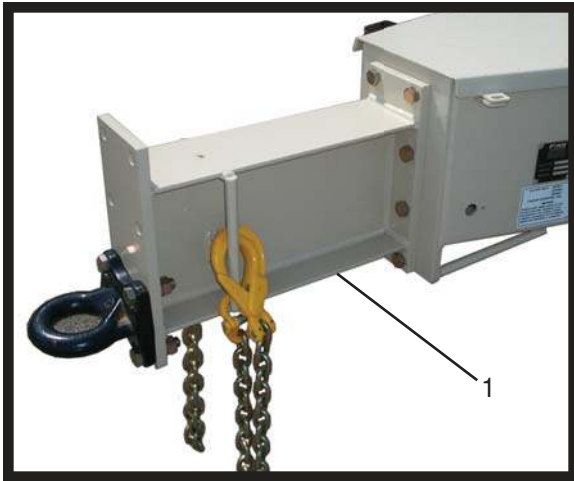

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## LF120 LANDFILL MACHINE

Ref. No.	Part Number	Description	No. Req'd
1	005806	20 in. Long Hitch Extension	1
2	041380-00	Engine Protection Plate	1
	041381-01	Engine Protection Access Panel	1
3	041359	LF120 Decal	2
4	041361	Ag. Wheel	4
5	041362	Hi Floatation Tire	4
6	041376	Axle With Idle Ag. Hubs - 22.5° Down	2
7	SE0149-01	Fuel Tank Guard	1
8	41358	Finn Landfill Solutions Decal	2

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**