

# **FINN** **CORPORATION®**

9281 LeSaint Drive • Fairfield, Ohio 45014  
Phone (513) 874-2818 • Fax (513) 874-2914

**Sales: 1-800-543-7166**



## **T60 II HydroSeeder®** **Parts and Operator's Manual**

Model **SR** Serial No. \_\_\_\_\_

## NOTES



## **ACTIVATE YOUR FINN EQUIPMENT WARRANTY**

### **IMPORTANT INFORMATION ON ACTIVATING YOUR FINN EQUIPMENT WARRANTY!!!**

IT IS IMPERATIVE THAT YOU, THE PURCHASER, COMPLETE THE FOLLOWING STEP IN ORDER TO  
ACTIVATE THE FINN CORPORATION LIMITED WARRANTY.

**COMPLETE THE “EQUIPMENT REGISTRATION” FORM ON  
THE NEXT PAGE AND MAIL TO THE FINN CORPORATION.**

**IF FINN CORPORATION DOES NOT HAVE YOUR COMPLETED REGISTRATION  
FORM ON FILE, YOUR WARRANTY CLAIM WILL BE DENIED.**

**Once your Finn equipment has been registered, your Finn Limited Warranty will  
be activated per the warranty statement on the other side of this notice.**

**<<What should you do if you need repairs or parts under Warranty?>>**

**1. NOTIFY FINN CORPORATION OF THE FAILURE OF MATERIAL OR WORKMANSHIP**  
1-800-543-7166 Extension (246)  
**WARRANTY@FINNCORP.COM**

**2. AFTER YOU OR YOUR SERVICE DEALER NOTIFY FINN, FINN WILL:**

- VERIFY THAT WE HAVE YOUR “REGISTRATION” ON FILE
- VERIFY THAT THE WARRANTY PERIOD IS IN EFFECT
- VERIFY THAT THE RELATED PART(S) ARE INCLUDED IN THE SCOPE OF WARRANTY (PENDING FINN'S INSPECTION OF DEFECTIVE PARTS)
- SEND YOU REPLACEMENT PART(S) AND A “WARRANTY INFORMATION PACKET”
- REQUEST YOU FOLLOW ALL INSTRUCTIONS AS NOTED IN THE “PACKET”
  - Fill out the Parts Tag. (Completely)
  - Attach the Parts Tag to the defective part(s).
  - Return the part(s) and the completed Warranty Claim Form to Finn Corporation using the return shipping label. (Within 2 weeks)
  - Tape the Orange identifier sheet, marked with the W / RMA# on the outside of the box you are shipping the defective part(s) to Finn in.

**OUR WARRANTY TO YOU:**

Finn Corporation warrants to you, the original purchaser, for use (or rental to others for use) all new construction machinery, parts and attachments (except those referred to herein) that are manufactured by Finn to be free from defects in material and workmanship for a period of 12 months from date of purchase or 1200 hours of use, whichever comes first. Replacement parts provided under the terms of this warranty are warranted for the remainder of the warranty period applicable to the product to which parts are installed, as if parts were original components of the product.

**WHAT FINN WILL DO:**

Upon notification of Finn concerning a failure of material or workmanship in accordance with the above stated Warranty, Finn Corporation will:

- Verify claim falls within the valid warranty time frame.
- Verify the product and equipment has been **registered** with Finn in order to be eligible for warranty coverage.
- Upon affirmation of warranty period and registration, Finn will send to you a new or repaired replacement part(s), whichever Finn elects and a "Warranty Claim Information packet" containing instructions for processing the warranty claim.
- Evaluate the part when defective part is returned. Note: Failure to return defective part within **two weeks** will result in an invoice being sent to the customer. In addition, if damage to a part is determined not to be covered under the warranty, the customer will be billed for the replacement part.
- Reconcile costs with customer for parts and shipping, as determined by our inspection of failed parts, and confirmation of warranty coverage, per the terms of this warranty.
- Correction of nonconformities, in the manner provided above, shall constitute fulfillment of all liabilities of Finn Corporation under this warranty.

**WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE:**

- As the purchaser covered under the above limited warranty you must **REGISTER** the equipment with Finn as such owner. Should registration not be on file with Finn Corporation, your **warranty will be void**. (See Operators manual for Registration Form)
- All warranty labor must be pre-approved by providing Finn with an estimate of labor costs. Once approved, Finn will issue you a **Work Authorization Number**, prior to work being performed.
- The labor costs reimbursement will be based on the **Labor Allowance Schedule** established by Finn and where not applicable, on a reasonable number of hours as determined by Finn.
- Notify Finn Corporation of any failure of material or workmanship as described under this warranty.
  - Web notification: [Warranty@Finncorp.com](mailto:Warranty@Finncorp.com)
  - Phone 1-800-543-7166 extension 246
- Complete the required steps in the "Warranty Claim Information packet" (which Finn will send you) and return the defective part(s) as directed in the packet to Finn Corporation.
- Should the failed part be a hydraulic component, Finn may send you an "**Oil Analysis Kit**", requesting that a sample of oil from the hydraulic system be taken, and mail it to a lab. Follow the instruction sheet, on how to use your Finn Oil Analysis Kit that comes with the Kit. Failure to comply when requested will void the warranty.

**WHAT THE WARRANTY DOES NOT COVER:**

1. Normal wear parts and Allied Equipment or trade accessories not manufactured by it, such as but not limited to items such as various filters, fluids, brakes, clutch linings, belts, hoses, light bulbs, mechanical seal, over center clutches, tires, ignitions, starters, batteries, magnetos, carburetors, engines and labor, or like or unlike equipment or accessories. (Such being subject to the warranty, if any, provided by their respective manufacture).
2. Secondhand, used, altered, or rebuilt machines or parts.
3. Defects, malfunctions or failures resulting from accidents, abuse, misuse, improper servicing, or neglect of required operational guidelines and maintenance service, as outlined in the Finn Corporation's Operators Manual(s).

4. The warranty shall be null and void to the extent any defect or failure of the products warranted arises out of or is caused by accessories or component parts not manufactured or supplied by Finn Corporation, whether same are supplied by purchaser, dealers, or any other party.
5. This Warranty does **NOT** cover any costs associated with transporting the equipment for warranty service, such as mileage, fuel, or man hours; such is the responsibility of the equipment owner.
6. Dealers & Customers are responsible to follow all guidelines related to Seasonal & Long Term Storage of Equipment, as advised in operation & equipment manuals. i.e. Finn, Engine, Clutch, Pump, Motor, etc. Equipment failures caused by neglect of these guidelines are not warrantable.

**THIS IS THE ONLY EXPRESS WARRANTY ON OUR PRODUCTS:**

We neither assume nor authorize anyone to assume for us any other express warranty. The Distributor/Dealer has no authority to make any representation or promise on behalf of Finn Corporation or to modify the terms or limitations of this warranty in any way.

THIS WARRANTY THEREFORE SHALL BE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**LIMITATIONS ON OUR RESPONSIBILITY WITH RESPECT TO PRODUCTS PURCHASED:**

THE REMEDIES OF THE USER SET FORTH HEREIN ARE EXCLUSIVE, WITHOUT REGARD TO WHETHER ANY DEFECT WAS DISCOVERABLE OR LATENT AT THE TIME OF DELIVERY OF THE PRODUCT TO THE PURCHASER.

ALL WARRANTY REPAIR MUST BE DONE BY A FINN AUTHORIZED SERVICE PROVIDER OR AUTHORIZED REPAIR SHOP OF FINN'S CHOICE.

TRANSPORTATION, HAULING, STORAGE, OR OTHER SIMILAR COSTS ARE NOT PART OF FINN'S OBLIGATION UNDER THE LIMITED WARRANTIES AND IS THE RESPONSIBILITY OF THE EQUIPMENT OWNER.

THE ESSENTIAL PURPOSE of this exclusive remedy shall be to provide the original purchaser with repair or replacement of parts that prove to be defective within the period and under the conditions previously set forth. This exclusive remedy shall not have failed of its essential purpose (as that term is used in the Uniform Commercial Code) provided Finn remains willing to repair or replace defective parts within a commercially reasonable time after it obtains actual knowledge of the existence of a particular defect.

IN NO EVENT shall Finn be liable for any special, consequential, incidental or indirect damages, including lost profits or lost commercial opportunities, with respect to the sale of the above warranted product or anything done in connection therewith, or for property damage sustained by a person claiming to be a third party beneficiary of a surviving warranty under the law of any jurisdiction.

**NOTICE:**

FINN CORPORATION URGES the use of only Finn corporation supplied parts and attachments to assure proper performance and safe operation of Finn corporation equipment. Insist on parts and attachments manufactured or supplied by Finn corporation when you purchase, repair or replace your Finn equipment and attachments. Because Finn corporation cannot assure that parts and attachments not manufactured or supplied by Finn meet Finn corporation's quality standards, specifications, or operating requirements, our warranty is not effective to the extent any failure of or defect in a Finn corporation product arises from or is caused by parts, attachments or components not originating with Finn corporation. Use of Finn corporation equipment with parts and attachments not manufactured or supplied by Finn could result in personal injury.

**Effective August 23, 2010**

# INDEX

---

SAFETY FIRST .....	1
SAFETY SUMMARY SECTION .....	2-5
OPERATION AND MAINTENANCE SECTION .....	6 - 30
Definition of Hydroseeding .....	6
The FINN HydroSeeder® and How It Works .....	6
Towing Vehicle .....	6-7
Attachments .....	7-8
Pre Start Check .....	8
Equipment Check .....	8-9
2 Valve Operation (Base Unit) .....	10
Valve Operation (Platform/Boom Option) .....	11
Starting Procedure .....	12
Area Coverage - Material Capacity .....	12-13
Tank Capacity Chart .....	14
Loading .....	15-16
Prior to Application .....	16
Platform Option .....	16
Discharge Nozzle Selection .....	16
Application of Slurry .....	17-18
I. General Application Techniques .....	17
II. Procedures When Using Hoses .....	17-18
III. Discharge Through The Boom (Platform Option) .....	18
Reloading Procedure .....	18
Cleaning and Maintenance .....	18-19
After The First 40 Hours Of Operation .....	18
Daily Maintenance .....	18-19
Weekly or After Every 40 Hours of Operation .....	19
Seasonal and Winter Storage Maintenance .....	19
Hydraulic System .....	20
Machine Lubrication Diagram .....	20
Lubrication and Fluids Chart .....	21
Pump Maintenance .....	22-24
Pump Assembly and Parts List .....	22
Factory Tolerances .....	23
Impeller Clearance .....	23
Cleaning .....	23
Installing New Seal Assembly .....	24
Trouble Shooting Your HydroSeeder® .....	24-28
Notes .....	29-30

*Continued . . .*

## INDEX CONTINUED

---

PARTS SECTION .....	31-55
Suction, Discharge, And Recirculation Piping .....	32-33
Clump Assembly .....	34-35
Hydraulic System .....	36-37
Hydraulic Pump Drive Assembly .....	38
Hydraulic Agitator Drive Assembly .....	39
Agitator and Bearing Assembly .....	40-41
Discharge Boom .....	42
Hatch Assembly .....	43
Common Loose Parts and Engine .....	44-45
Trailer Assembly Parts .....	46-47
Guard Rails .....	48
Control Panel Wiring .....	49
Trailer Wiring .....	50
Tool Kit / Seal Repair Kits .....	51
Decals .....	52-53
Hose Reel .....	54-55

# SAFETY FIRST

With any piece of equipment, new or used, the most important part of its operation is **SAFETY!**

Finn Corporation encourages you and your employees to familiarize yourselves with your new equipment and to stress safe operation.

The first six pages of this manual are a summary of all the main safety aspects associated with this unit. Be sure to read completely before operation of machine.



This symbol is used throughout the operation and maintenance sections of this manual to call attention to safety procedures.

**- Pay Attention -**



**DANGER:**

Immediate hazards which **WILL** result in severe personal injury or death.



**WARNING:**

Hazards or unsafe practices which **COULD** result in severe personal injury or death.



**CAUTION:**

Hazards or unsafe practices which **COULD** result in minor personal injury or product or property damage.

**IMPORTANT:**

Indicates that equipment or property damage could result if instructions are not followed.

**NOTE:**

Gives helpful information.

## Finn Corporation

### CALIFORNIA

#### Proposition 65 Warning

The engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

### CALIFORNIA

#### Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.


# HYDROSEEDER® SAFETY SUMMARY SECTION

It is important that all operators of this machine are familiar with all of the safety aspects mentioned below and have read the entire Operator's Manual before operating the machine. Always keep a copy of this manual with the machine. It is the responsibility of the operator of the machine to fully understand this safety sheet. Remember that YOU are the key to safety. Good safety practices protect not only you but also the people working with and around you. Keep in mind that this safety sheet is written for this type of machine only. Practice all other usual and customary safe working precautions; and above all, remember that safety is up to you.

The FINN HydroSeeder® is designed to mix and apply water, seed, fertilizer, agricultural lime and hydraulic mulch to the prepared seedbed. The resultant slurry from mixing one or more of the above materials may react causing harmful or deadly gasses within the tank. Heat, evaporation or extended emptying period can/will accelerate the formation of these gasses. Please contact your supplier(s) of these slurry components regarding their potential reactivity.

## I. PRE-START EQUIPMENT CHECK (equipment check is to be made with the engine off):


1. If you have a chassis mounted unit, check devices securing HydroSeeder® to the truck or trailer frame.

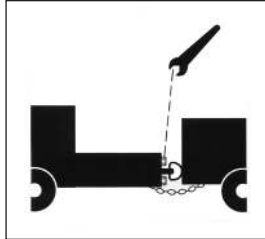


2. If HydroSeeder® is a trailer unit, check hitch and hitch bolts, lights, brakes and all safety components.
3. Make sure loading hatch bag cutter is in place and secure.
4. Check that all guard railing is in place and secure.
5. Verify that all guards are in place.
6. With the ignition switch on, verify that the signal horn is operating correctly.
7. By carefully looking down through the loading hatch, inspect the slurry tank for foreign objects. Never enter the tank without following the procedures described in #3 of the Maintenance section in this sheet.
8. Remove unnecessary objects (or material) from the tank top.
9. Make sure no one is working on or inside the machine. Signal "All Clear" before starting the engine.
10. Inspect all hydraulic hoses for cracks, bulges or damage. If hoses are bad replace immediately.
11. Inspect all discharge hoses for cracks, bulges or damage. If hoses are bad replace immediately.

## II. MACHINE OPERATION:

1. Always wear safety goggles when operating the machine. Other safety attire such as safety shoes, ear protection, gloves, hard hats, dust masks, etc. should be worn as required by warning decals on machine, operator's manuals or job site requirements. Remove rings, watches, etc. Avoid loose fitting clothing that may get caught in rotating machinery.

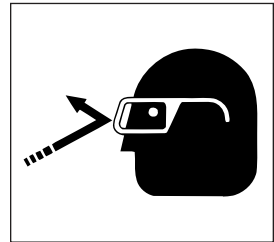


2. Do not operate the machine without all guards in place.

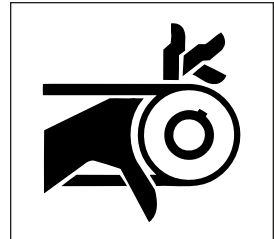


3. Do not load unit while in transit. Load only when parked and unit is as level as possible. Take care not to drop pens, lighters, etc. or pieces of paper or plastic bags into the tank, as these objects might plug the slurry system. Should any object be dropped into the tank, do NOT reach into the tank to retrieve the foreign object. See #3 under Maintenance before allowing any personnel to enter the tank.
4. Make sure area to be sprayed is clear of all persons, animals, etc.
5. The driver of the carrying or towing vehicle is responsible for the safety of the operator(s) of the machine. Make sure the driver is aware and avoids all possible hazards to the operator(s) of the machine, such as low tree limbs, low power lines, etc. Vehicles on which equipment is mounted or towed must be stopped and started gradually. Avoid abrupt starts

or stops. Never operate on a slope or a hill that may endanger the driver and/or the operator(s). All personnel should review and be familiar with stop/start signals between the driver and operator(s) before going into operation. Only the operator should be located on the platform during operation.

6. Operator(s) of equipment should never ride on the machine at speeds of greater than 5 MPH (8 kmh).

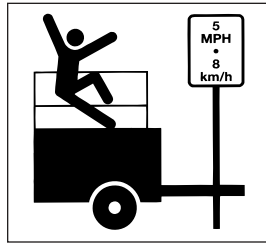

7. Never operate machine in an enclosed area without venting the engine exhaust of both the equipment and vehicle on which the equipment is mounted. Deadly carbon monoxide fumes can accumulate.

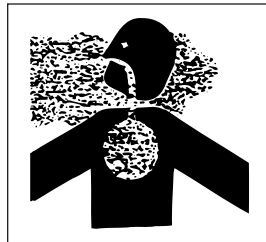


8. Never operate this or any other machinery when fatigued, tired, under the influence of alcohol, illegal drugs or medication. You must be in good physical condition and mentally alert to operate this machine.
9. Never modify the machine. Never remove any part of the machine (except for service and then reinstall before operating).

10. Use proper means (steps, ladder) for mounting and dismounting of the machine. Never mount or dismount a moving machine.




### III. SLURRY APPLICATION:

1. Do not aim discharge spray toward power-lines, transformers, or other high voltage electrical conductors. Also do not aim discharge spray towards people, animals or anything other than the intended application area.

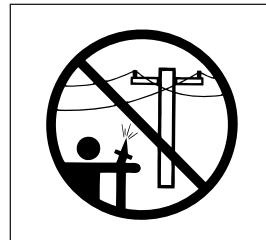


2. Never engage the clutch when both the recirculation and discharge valves are closed. Operation with both valves closed will result in extreme heat generation that could cause severe bodily injury and damage to the equipment.

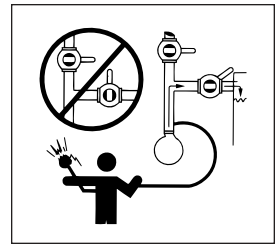

3. Recirculation valve must be open and material flowing back into the tank when using the remote valve. A closed or plugged recirculation line will cause extreme heat in the pump or discharge lines which will result in severe bodily injury and damage to the equipment.
4. During application through a hose, high pressure can be exerted at the end of the hose. Hose holding personnel must establish good footing. The operator should apply gradual pressure to the hose only after hose holding personnel are firmly positioned and have firm control of the hose. Additional personnel to direct hose may be necessary if working on slopes. The proper technique for hose holding personnel is to firmly grasp the hose over the shoulder or under both arms. Never hold the hose so it goes between the legs. If the hose holding personnel finds that it is uncomfortable for him to handle the hose by himself additional hose holders should be positioned at the end of the hose.
5. Plan application so that the furthest area is covered first; working back toward the HydroSeeder®, so that the individuals are not walking back over slippery ground.


6. Before opening any valves or pipe clamps shut machine down and check if material in the pipe is hot. If hot, do NOT open valve or pipe clamps as the hot material may cause severe personal injury. Allow to cool and open with caution.

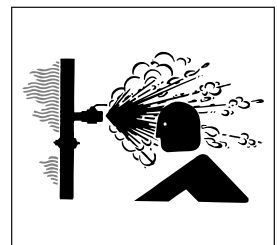

7. Except when loading materials keep loading hatch lid closed to protect operator and prevent splashing of wet material onto the tank top.
8. Wash off spillage of slippery mulch or slurry additive from the tank top and platform before operating equipment.


## MAINTENANCE:

1. Before servicing the machine, turn off engine and allow all moving parts to stop. To prevent accidental starting disconnect battery cables. Tag the engine operating area to show that the machine is being serviced. Use lockout/tagout procedure (OSHA 29 CFR 1910.147).

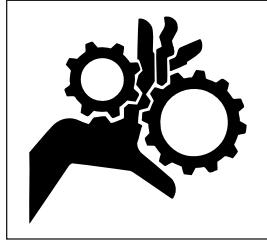


2. Certain hydroseeding amendments, when combined with or without the addition of water or heat or the element of time, may react causing harmful or deadly gasses! Consult your material suppliers regarding reactivity information. The slurry tank must be flushed and drained after each day of operation.

3. Your slurry tank may be considered a confined space by OSHA under 29 CFR 1910.146. Before entering any confined space, your company must develop a procedure for safe entry. Make sure your company's plan meets all the requirements of 29 CFR 1910.146. Including the following:

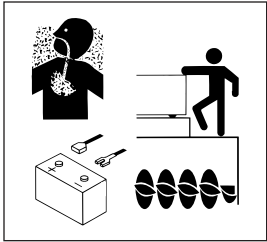

- a) Drain, flush and ventilate tank interior.
- b) Turn off engine and disconnect battery cables and perform lockout/tagout procedures. (29 CFR 1910.147)
- c) Provide continuous ventilation or proper breathing apparatus.
- d) If tank must be entered, personnel entering the tank must be tethered to a lifeline.
- e) Provide stand-by individual outside of tank able to communicate with person inside and able to haul him out with lifeline if necessary.

4. Before loosening any clamps or opening any valves, determine if material in the line is hot by feeling the pipe. Do NOT allow material to come in contact with personnel. Severe bodily injury could result.

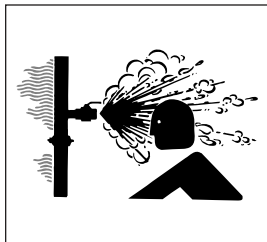



5. On trailer units perform general maintenance such as checking the safety chains, hitch and hitch bolts, tires, brakes. Repair or replace if worn or broken. Never operate machine on improperly inflated or damaged tires. Always use a safety cage or cable restraints when re-inflating a repaired tire.
6. Radiator maintenance: Liquid cooling systems build up pressure as the engine gets hot. Before removing radiator cap, stop the engine and let the system cool. Remove radiator cap only after the coolant is cool.
7. Battery maintenance: Lead-acid batteries contain sulfuric acid, which damage eyes of skin on contact. Always wear a face shield to avoid acid in the eyes. If acid contacts the eyes, flush immediately with clean water and get medical attention. Wear rubber gloves and protective clothing to keep acid off skin. Lead acid batteries produce flammable and explosive gasses. Keep arcs, sparks, flames and lighted tobacco away.
8. Filling of fuel: Never fill the tank with the engine running, while smoking or when near an open flame. Never smoke while handling fuel or working on the fuel system. The fumes in an empty container are explosive. Never cut or weld on fuel lines, tanks or containers. Move at least 10 feet (3 meters) away from fueling point before starting engine. Wipe off any spilled fuel and let dry before starting engine.




**NOTE:** Be careful not to allow fuel, lubricant, hydraulic fluid or cooling fluids to penetrate into the ground or be discharged into the water system. Collect all fluids and dispose of them properly.

9. It is recommended that only authorized genuine FINN replacement parts be used on the machine.
10. Do not use either cold start fluid if engine is equipped with glow plug type preheater or other intake manifold type preheater. It could cause an explosion or fire and severe injury or death.
11. Diesel fuel or hydraulic fluid under pressure can penetrate the skin or eyes and cause injury, blindness or death. Pressure may build up in the hydraulic system; use caution when removing the cap.
12. Make certain that all decals on the machine are maintained in good legible condition. Replacement decals are available through Finn Corporation by specifying part number shown in the lower right hand corner of the decal. See page 5 for the current safety decals mounted on the unit. See pages 52-52 in the Parts Manual for the location and quantity of all decals on this unit.

## CURRENT SET OF SAFETY DECALS

 <b>WARNING</b>	
	<p><b>RUNAWAY VEHICLE HAZARD!</b> Always inspect tow vehicle and equipment hitch before towing. Tighten all hitch bolts and properly connect wiring and safety chains.</p> <p><b>BREAKAWAY SWITCH</b> DO NOT use for parking. Attach cable to towing vehicle with enough slack for turning. Engine battery on trailer must be charged and hooked-up for proper breakaway function.</p> <p><b>SAFETY CHAIN INSTALLATION</b> Both the single and double chains must be crossed under tongue. They must be oriented in such a manner as to prevent tongue from dropping to ground in event of failure to hitch, coupler or ball. Chains must be connected to towing vehicle so slack for each length of chain, between trailer and towing vehicle, is the same and must have no more slack when in use than necessary to permit proper turning of vehicles. Forward end of chain must be attached to towing vehicle, not to ball, but to hitch or other frame member. Chain must be looped around member and hooked back into itself. Failure to comply could result in death or serious injury.</p>


P/N 31461

 <b>WARNING</b>	
	<p><b>SEVER HAZARD!</b> Keep hands clear! Rotating fan and gears. DO NOT operate without guards or doors in place. Shut off engine, disconnect battery and allow all moving parts to stop before servicing.</p>
	<p><b>FLYING DEBRIS!</b> Wear eye protection around equipment. Failure to comply could result in death or serious injury.</p>

P/N 31463

 <b>WARNING</b>	
	<p><b>FALL HAZARD!</b> DO NOT ride on equipment when moving at speeds in excess of 5 MPH (8 km/h). Failure to comply could result in death or serious injury.</p>

P/N 32873

 <b>CAUTION</b>	
<p><b>FALL HAZARD!</b> ALWAYS face ladder when mounting and dismounting. Failure to comply may result in moderate or minor injury.</p>	



P/N 32818

 <b>WARNING</b>	
	<p><b>FALL HAZARD!</b> DO NOT ride on hitch when vehicle is moving. ALWAYS use step when mounting and dismounting. Failure to comply could result in death or serious injury.</p>



P/N 32872

 <b>WARNING</b>	
	<p><b>BURN HAZARD!</b> Hot exhaust! Stay back! Failure to comply could result in death or serious injury.</p>




012278

 <b>DANGER</b>	
	
<p><b>CONFINED SPACE HAZARD!</b> Before entering tank: 1. Drain, flush and ventilate tank interior. 2. Turn off engine and disconnect battery cables. 3. Continuously ventilate area or wear appropriate breathing apparatus. 4. Provide standby individual outside tank able to communicate with person inside and able to remove him with a lifeline if necessary.</p> <p><b>FLYING MATERIAL HAZARD!</b> Wear eye protection around operating equipment. Failure to comply will result in death or serious injury.</p>	

P/N 13204

 <b>WARNING</b>	
	
<p>Wear proper eye protection when operating machine. Failure to comply could result in death or serious injury.</p>	

P/N 23519

 <b>DANGER</b>	
	
<p><b>ELECTROCUTION HAZARD!</b> DO NOT aim stream toward electrical lines. Avoid spraying toward bystanders. Failure to comply will result in death or serious injury.</p>	

P/N 11567

# OPERATION AND MAINTENANCE MANUAL FOR THE FINN T60 SERIES II HYDROSEEDER®

This manual gives you step by step instructions for the operation and maintenance of the Finn HydroSeeder®. For best results and to insure longer life of the equipment, please follow the instructions carefully. For your safety read the entire manual before operation of this unit.

## DEFINITION OF HYDROSEEDING:

Hydroseeding is the process whereby seed, fertilizer and/or lime and fiber mulch (using water as a carrying medium) are applied on the soil to establish vegetation.

## THE FINN HYDROSEEDER® AND HOW IT WORKS:

The Finn HydroSeeder® will apply seed, fertilizer and/or lime, fiber mulch, or stabilizing materials in any prescribed or desired combination. The materials placed in the HydroSeeder® slurry-tank are mixed with water and kept in suspension by a dual agitation process, recirculation of slurry and mechanical agitation, thus forming a slurry that is pumped to the discharge assembly and directed onto the seed bed by the operator. This equipment is designed to accomplish hydroseeding in one easy operation with maximum efficiency.

## TOWING VEHICLE

The trailer mounted HydroSeeder®, is to be pulled with a truck which is built to take 1,400 lbs. (635 kg.) vertical hitch load. The truck must be able to pull 7,700 lbs. (3,490 kg.). The trailer has electric operated brakes, an electric breakaway switch, a standard tread of 60" (152.4 cm.) and is available with either a ball hitch\* or lunette eye.

HYDROSEEDER		TRUCK REQUIREMENTS
Type	Maximum Weight (Loaded)	
T-60 Trailer	7,700 lbs (3,490 kg)	Truck must be able to support 1,400 lbs. (635 kg) down on its hitch and safely tow 7,700 lbs. (3,490kg)
T-60 Skid	6,200 lbs. (2,810 kg)	13,000 lbs. (5,900 kg) Approx. GVWR** (CA dimension 72"+)

\* 2-5/16" Ball rated 25000 Lbs.

\*\* Since truck weight will vary, insure that vehicle's GVWR is sufficient for the particular application.

This information can be obtained from the truck manufacturer or dealer.

Once the proper carrier has been selected, the HydroSeeder® must be securely mounted to it.



**CAUTION:** Your FINN HydroSeeder® should be mounted by a qualified truck body installer.

When mounting the HydroSeeder® to the truck, any one of the following methods of mounting is acceptable:

- A. Bolt the HydroSeeder® directly to the truck bed. Installer must insure that the bed to truck and HydroSeeder® to bed connections are adequate for the full load weights that are shown on page 6.
- B. Mount the HydroSeeder® to the truck frame. The T60 II Skid HydroSeeder® is provided with an adapter frame which also allows the unit to be mounted directly to the truck's 34" wide frame using U-Bolts.

**IMPORTANT:** Mounting the HydroSeeder® to the truck must allow for tire clearance as well as frame twist. Place hard wood spacers along the length of truck rails or use Finn spring mounting kit (#011562) or equivalent.

- C. Place chains over the HydroSeeder® and around truck bed and secure with binders. Secure the HydroSeeder® with blocks tied to the truck bed.

**IMPORTANT:** When using a truck with a tilt bed be sure to chain the truck bed down to prevent the bed from being accidentally hoisted.

## ATTACHMENTS:

1. Discharge hoses: Discharge hoses are available in 50 ft. (15 m) and 100 ft. (30 m) lengths up to a total of 150 ft. (45 m). Hose of a greater length may adversely affect the discharge distance, and the discharge time of the HydroSeeder®. All connections are camlock quick operating fittings, including the connection to the end of the discharge piping. A nozzle is connected to the end of the hose next to the remote discharge valve. Once the hose is connected, the HydroSeeder® is ready to operate. Flow through the hose and the nozzle is controlled by the remote discharge valve. When using this valve, the recirculation valve on the HydroSeeder® **MUST BE OPEN** to allow flow at times when the remote valve is closed. See Figure 2 on page 10.



**DANGER:** The recirculation valve must be open when using a remote valve. If valve is not open, extreme heat will occur resulting in damage and/or bodily injury.

2. Operator's Platform: A bolt-on package is available to convert the base unit to include an operator's platform complete with: a discharge boom, guard rails, ladder, and all controls necessary to operate the unit (throttle, clutch control, signal horn, agitator control).
3. Hose Reel: The live hose reel mounts on top of the unit. The 150 foot (45 m.) capacity electric rewind reel will wind up and store empty hose. It is wired to the unit's battery.
4. Radio Remote Control: A radio remote control is available that allows the operator to control material flow by turning the clutch off and on from the end of the discharge hose.

## PRE-START CHECK:

Safety check to insure operator safety:

1. A. Skid Unit - Check condition of all mounting hardware securing HydroSeeder® to truck bed and frame rails.  
B. Trailer Unit - Inspect hitch, safety chains, lights, brakes and breakaway switch.
2. Insure that all guards are in place.
3. Inspect that all railings are in place and secure (Platform Option only).

## EQUIPMENT CHECK:




**CAUTION:** Equipment check is made with the engine off and all rotating parts stopped.

1. See that tool kit contains all the prescribed items (see tool kit list on Page 51).
2. Inspect the "slurry-tank" for foreign objects. See numbers 2 and 3 in Maintenance Section (IV) of the Safety Summary Section page 4.
3. Check fuel level.
4. Check the hydraulic oil level (see hydraulic system for oil specifications).
5. Check engine oil level . . . for oil type refer to the engine manual.
6. Inspect air cleaner for dust and dirt, clean if necessary.
7. Secure the tank drain plug in the drain pipe located in the center of the bumper.
8. Check to be certain pump drain plug is in place.
9. Lubricate equipment - See Lube Chart on pages 20-21.
  - A. Each lubrication point is marked.
  - B. Check automatic pressure lubricator at pump. If the stem is fully extended with thumb nut

all the way up, the pressure lubricator contains lubricant - if not, lubricant must be replaced by the following procedure:

- a) Turn thumb nut clockwise until stem rises to maximum height.
- b) Remove cap and fill cap with sodium (water soluble) base grease. (FINN part number 000698). Do not use lithium base (chassis lube) grease.
- c) Replace cap.
- d) Turn thumb nut counter-clockwise until the thumb nut is at the top of the stem. The spring and pressure disc in the lubricator forces the grease, under pressure, to the pump seal.

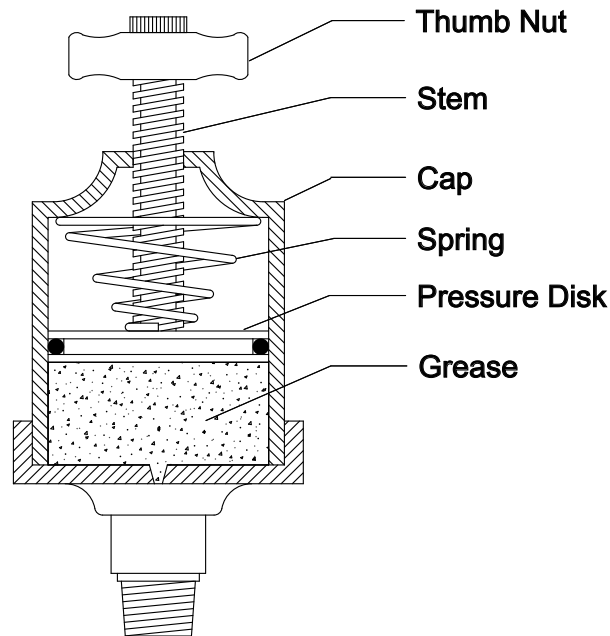

**FIGURE 1**

**IMPORTANT:** When the thumb nut has moved down to within  $\frac{1}{2}$ " (1.25 cm) of touching the cap, reservice the automatic lubricator.

10. Check and clean the nozzles and hoses of any obstructions.
11. Check pump discharge, recirculation, and remote valve handles for free movement.

## VALVE OPERATION:

### A: VALVE OPERATION (BASE UNIT):

The base HydroSeeder® is equipped with three (3) independently operated ball valves to control slurry flow (see Figure 2). The first valve is the recirculation valve. An open recirculation valve allows flow back into the tank. The second valve is the pump discharge valve. An open pump discharge valve allows slurry to flow through the discharge hose. The third valve, located at the end of the discharge hose is the remote valve. An open remote valve allows discharge of the slurry onto the area being covered.



**WARNING:** Never engage (turn on) the slurry pump clutch when the recirculation valve and either the pump discharge or remote valve is closed. Pump is running with slurry flow closed-off which will result in extreme heat generation causing damage and/or bodily injury. The recirculation valve must always be open and material flowing back into the tank when using the remote valve. A closed remote valve in conjunction with a closed or plugged recirculation will cause extreme heat resulting in damage and/or bodily injury.

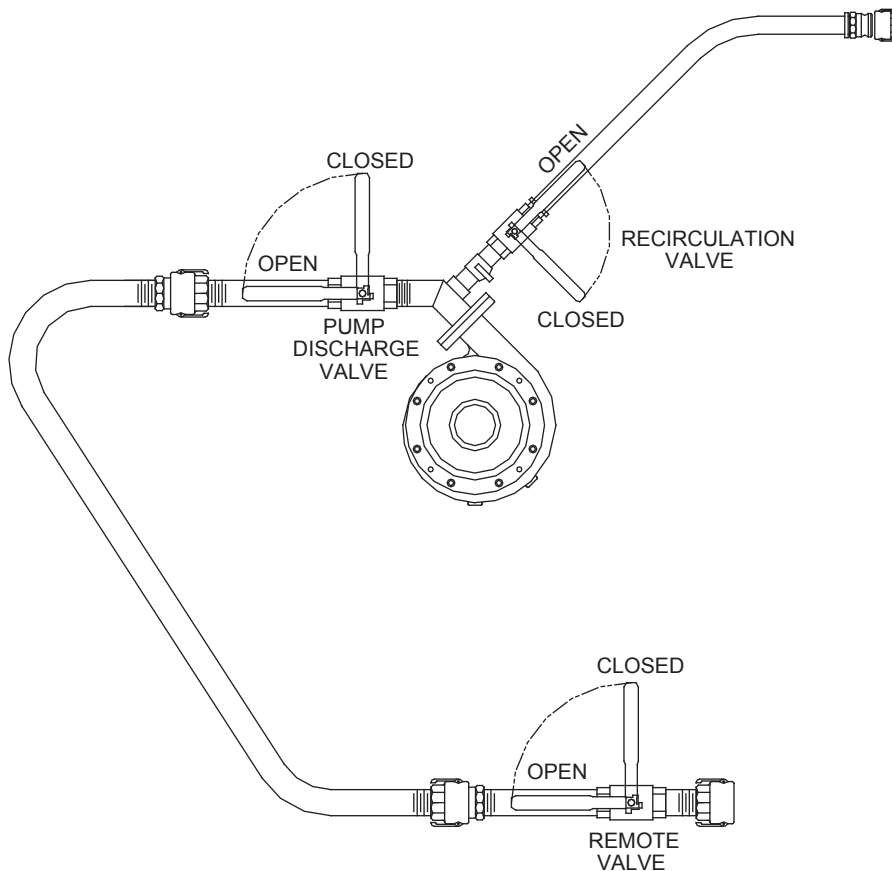


FIGURE 2

## B: VALVE OPERATION (PLATFORM/BOOM OPTION):

The platform option is equipped with two (2) independently operated ball valves to control slurry flow (see Figure 3). With the platform option, discharge of the slurry is accomplished two different ways; either through the discharge boom or through a discharge hose which is coupled to the end of the discharge boom.


Through the boom - Since the operator controls engagement of the pump with the foot switch when discharging through the boom, the recirculation valve may be left open or closed. With the recirculation valve close full pump flow is directed through the boom resulting in additional distance and a decrease in discharge time.

Through the discharge hose - When discharging through the discharge hose both ball valves are used to control slurry. The recirculation valve is always open. The remote valve at the end of the discharge hose is the control device to allow application of the slurry. An open remote valve allows discharge of the slurry onto the area being covered.



### **WARNING:**

**Never engage (turn on) the slurry pump clutch when the recirculation valve and the remote valve are closed. Pump is running with slurry flow closed-off which will result in extreme heat generation causing damage and/or bodily injury. The recirculation valve must always be open and material flowing back into the tank when using the remote valve. A closed remote valve in conjunction with a closed or plugged recirculation will cause extreme heat resulting in damage and/or bodily injury.**

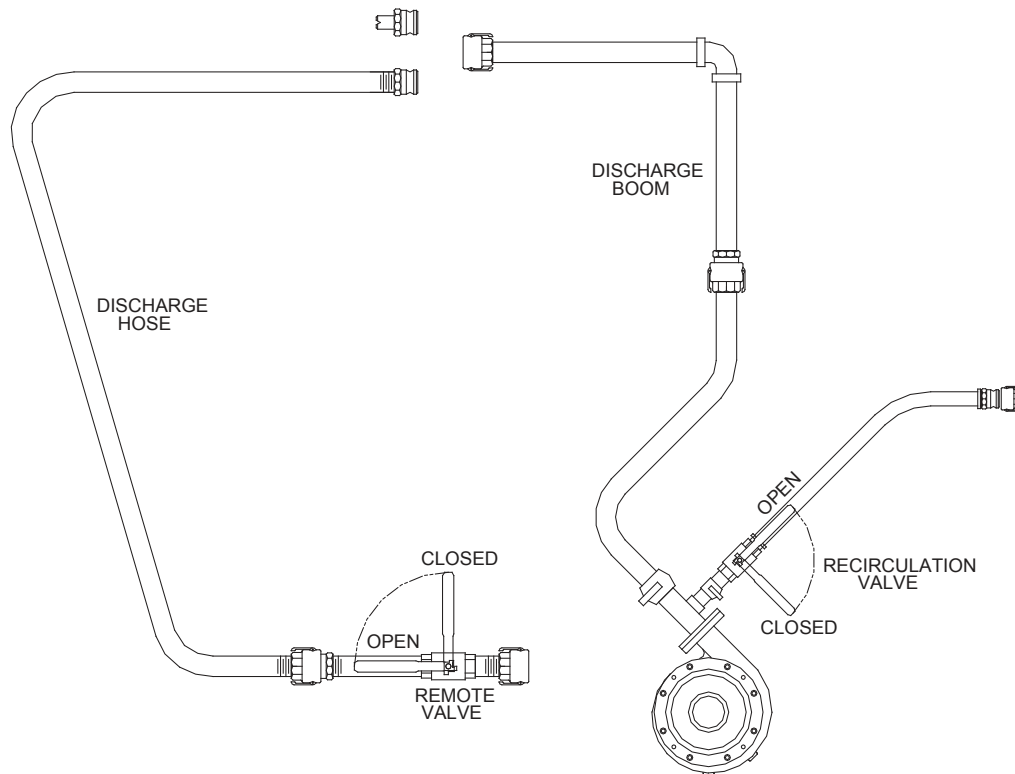

**FIGURE 3**

## STARTING PROCEDURE:



**CAUTION:** See safety section of the manual (pages 2-5) before operating the machine.

Before starting, open the recirculation valve, close discharge valve, disengage (turn off) the clutch, and place the agitator control in the neutral position.

1. Set throttle about  $\frac{1}{4}$  open.
2. Pull Choke control out.
3. Turn the key clockwise until the starter catches and engine fires.
4. Push the Choke control in for even running.

**NOTE:** This engine has a safety system which will shut the engine off if the engine temperature goes above or if the oil pressure decreases below an acceptable level.

## AREA COVERAGE - MATERIAL CAPACITY:

To determine the coverage per load for any HydroSeeder®, three questions must be answered prior to the application. First, is the job to be done “one step” (which is when the seed, fertilizer and mulch are applied proportionally per load) or “two step” (which is when the seed and fertilizer are applied alone and then covered by mulch as a second operation)? Second, at what rates (usually in pounds per 1000 square feet, or pounds per acre) are the seeding materials to be applied? Finally, what are the loading capacities of the HydroSeeder®?

Application rates vary for different geographic locations, but in general, seed is applied at 6-10 pounds per 1000 square feet; fertilizer is applied at a rate of approximately 400 pound per acre; and fiber mulch is applied at 1500 to 2000 pounds per acre. (Note: There are 43,560 square feet in an acre). Local agronomists, agricultural extension agents, or soil and water conservation officials should be contacted for more specific information on application rates for a given area.

The following tables show loading versus coverage rates for the Finn T60 II. Table A shows rates for “one step” applications. The coverage area is determined by the fiber mulch capacity of the HydroSeeder®, and the rate at which it is applied. Table B shows the area coverage when seeding only, where little or no mulch is applied. The coverage area is determined by the granular solids capacity of the HydroSeeder®, and the rate at which the solids are applied.

**TABLE A****USING SEED, FERTILIZER AND MULCH**

<u>Unit</u>	<u>Amount of Material in Tank (pounds(kilograms))</u>			<u>Coverage Area</u>
	<u>Seed</u>	<u>Fertilizer</u>	<u>Mulch</u>	<u>Sq. Ft. (Sq. m.)</u>
T60	46 (21)	53 (24)	200 (91)	5,790 (535)

Above Table is based on 1500 pounds of mulch, 400 pounds of fertilizer and 345 pounds of seed (8 pounds/1000 square feet) per acre.

**Table A Example: For T60**

200 pounds Mulch per Tank

$$\frac{200 \text{ pounds Mulch per Tank}}{1,500 \text{ Pounds Mulch per Acre}} = .133 \text{ Acre per Load}$$

400 Pounds Fertilizer per Acre x .133 Acre = 53 Pounds Fertilizer per Load

345 Pounds Seed per Acre x .133 Acre = 46 Pounds Seed per Load

**TABLE B****SEED AND FERTILIZER ONLY**

<u>Unit</u>	<u>Amount of Material in Tank (pounds(kilograms))</u>			<u>Coverage Area</u>	
	<u>Seed</u>	<u>Fertilizer</u>	<u>Total</u>	<u>(sq. ft.(sq. m.))</u>	<u>Acreage (Hectare)</u>
T60	522 (237)	600 (272)	1,122 (509)	65,340 (6,070)	1.5 (.61)


Above Table is based on rates of 8 pounds seed and 9.2 pounds fertilizer per 1000 square feet.

**Table B Example: For T60**

$$\frac{1122 \text{ Pound Tank Capacity (Solids)}}{8 \text{ Pounds (Seed) + 9.2 Pounds (Fertilizer) per 1,000 Sq. Ft.}} = 65,340 \text{ Square Feet per Load}$$

$$\frac{8 \text{ Pounds Seed}}{1,000 \text{ Sq. Ft.}} \times 65,340 \text{ Square Feet} = 522 \text{ Pounds Seed per Tank}$$

## TANK CAPACITY CHART:

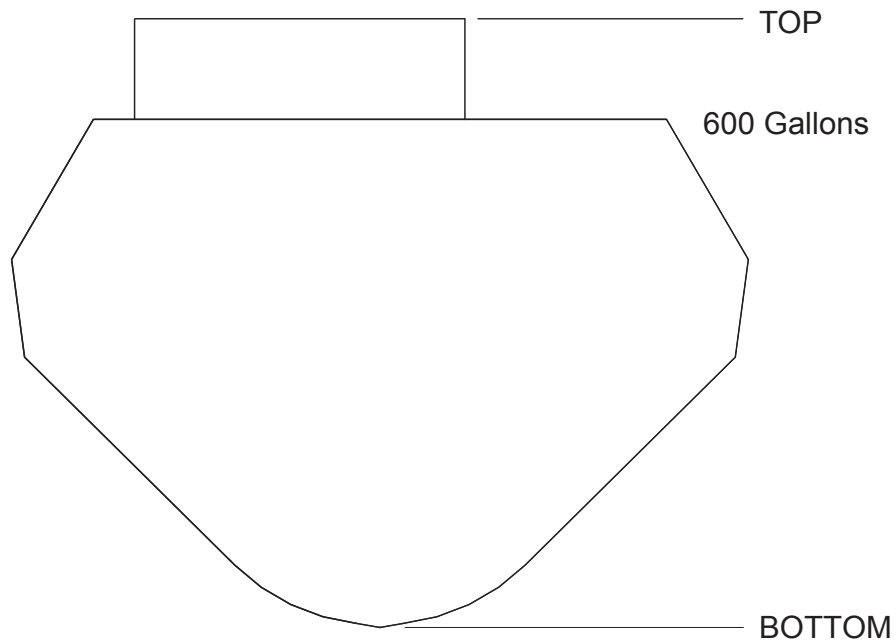

<b>T-60 II</b>					
Gallons (liters)		in. (cm) From Top		in. (cm) From Bottom	
600	(2271)	8	(20.3)	40.5	(102.9)
550	(2082)	11.25	(28.6)	37.25	(94.6)
500	(1893)	14.25	(36.2)	34.25	(87.)
450	(1703)	16.75	(42.5)	31.75	(80.6)
400	(1514)	19.5	(49.5)	29	(73.7)
350	(1325)	22	(55.9)	26.5	(67.3)
300	(1136)	24.5	(62.2)	24	(61.)
250	(946)	27	(68.6)	21.5	(54.6)
200	(757)	29.5	(74.9)	19	(48.3)
150	(568)	32.52	(82.6)	16	(40.6)
100	(379)	36.25	(92.1)	12.25	(31.1)
50	(189)	40.75	(103.5)	7.75	(19.7)

## LOADING:



**CAUTION:** Take care not to lose pens, lighters, etc. from shirt pockets or drop pieces of paper or plastic bags into the tank, as these might plug the slurry system.

1. With clutch disengaged (off) and agitator control in the neutral position, start engine and allow it to warm up (See "Starting Procedure" on page 12).
2. Start filling the unit with water. When water reaches the top of the agitator shaft, move agitator control to full reverse position.

Fill the tank with water from any stream or pond using a fill pump. When filling from a pond or stream be sure to use a suction strainer to filter out contaminants which could damage the pump and unit. Other sources of water:

1. Any pressure source, eg. fire hydrant. This unit is supplied with an air gap fill port but it is necessary to consult with local authorities before using water main in order to abide to all local ordinances.
2. Water tanker.
3. Piping System Cleanout Procedure (Purging Line):
  - A. Remove discharge nozzle and coupler gasket from the remote valve coupler at the end of the discharge hose (or from boom on the platform option).
  - B. Aim discharge hose (or boom on the platform option) into an open area away from any persons, obstructions or high voltage power lines.
  - C. Open discharge and remote valves and close recirculation valve.
  - D. Increase engine speed to approximately  $\frac{1}{2}$  to  $\frac{3}{4}$ .
  - E. Engage (turn on) the clutch.
  - F. When discharge stream is clear, open recirculation valve and close discharge valve. After recirculation stream is clear disengage (turn off) the clutch.
  - G. Replace coupler gasket in the remote valve coupler (or in boom on the platform option).
4. Continue filling tank with water.
5. Increase engine speed to full RPM.
6. Start loading dry material, loading the lightest material first. Agitator control should be in full reverse for mixing.
  - A. Seed - Cut the seed bag and dump contents into the slurry tank. (When using inoculant, add it in the tank along with the seed.) When using quick swelling seeds load them just prior to application.
  - B. Fiber mulch - Empty the entire bag in or cut bag and drop in the sections of fiber. The amount of mulch to be used should be loaded by the time the water level is at  $\frac{3}{4}$  full. If agitator stalls or a high pitch squeal comes from the hydraulic system, reverse agitation to forward for a moment to clear the obstruction, then return agitation to reverse.



**CAUTION:** Hydraulic system will overheat if agitator shaft is jammed for extended period. This will damage hydraulic oil and system components.

- C. Fertilizer - Cut the fertilizer bag and dump the contents into the slurry tank.
  - D. All other additives - Consult with manufacturer for proper loading technique.
7. When all materials are loaded and in suspension, and the tank is full, move the agitator to neutral then full speed forward to insure all material is mixed. It may be necessary to change the agitator direction more than once to insure a thorough mixture.
  8. After material is thoroughly mixed, slow agitator in forward direction to  $\frac{1}{2}$  to  $\frac{3}{4}$  speed or enough to create movement in all of the corners of the tank. Do not over agitate the slurry. Always discharge the material with the agitator control in forward position.
  9. Close the hatch lid on the slurry tank.

**NOTE:** If foaming occurs, reduce agitator speed.

## PRIOR TO APPLICATION:


1. Operator should familiarize self with area to be seeded and develop a plan to insure uniform application.

## PLATFORM OPTION:

2. Develop a plan for communication between operator and driver of the carrying or towing vehicle to signal for start, stop, turn, etc. through the use of the signal horn.
3. Operator switches clutch control toggle switch (on the control panel) to “Stand-By” and then takes up position on the platform. From this point application will be controlled by the use of the clutch, discharge assembly and throttle.

## DISCHARGE NOZZLE SELECTION:

Nozzles are stored in the tool box. This HydroSeeder® is equipped with 3 nozzles - one long distance and two ribbon fan nozzles. The following chart tabulates the approximate distance, width, and discharge time of the nozzles when used with the platform option. When using the base unit these factors will vary according to the type and length of hose being used.

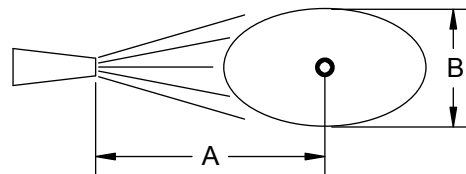

Nozzle	Distance (A)	Width (B)	Discharge Time
Long Distance	Up to 100 ft. (30m)	-	16 min.
Narrow Ribbon	Up to 60 ft. (18m)	10 ft. (3m)	12 min.
Wide Ribbon	Up to 50 ft. (15m)	20 ft. (6m)	12 min.

## APPLICATION OF SLURRY:

### I. GENERAL APPLICATION TECHNIQUES



**DANGER:** Do not spray toward power lines, transformers or other high voltage conductors.



**CAUTION:** The driver of the carrying vehicle should remain alert for hazards to the operator, such as low power lines, hanging branches, etc. Driver should never start or stop abruptly.

1. Determine which nozzle would best suit application needs per nozzle selection section on page 16.
2. Application of seed and fertilizer: Elevate discharge nozzle no less than 10° above the area to be sprayed, allowing the slurry to gently rain onto the seed bed.
3. Application of wood and paper fiber: Whenever possible aim the stream towards the ground to create a surface with small pock marks which help get seed in contact with ground. Do not allow the stream to blast away the surface of the seed bed.
4. Generally the most remote area of the seed bed should be covered first. Distance is controlled by engine speed and nozzle selection. Do NOT partially close the valve to control the distance.
5. While moving along area to be seeded, the operator should move the nozzle back and forth in a slow, even arc.
6. If application is to be interrupted for a short period of time, leave the valves open and disengage (turn off) the clutch. Re-engage the clutch to continue application.
7. It may be necessary to slow the agitator as the tank empties to reduce foaming.

### II. PROCEDURES WHEN USING HOSES:

Always pump clear water through the hose before pumping mulch. If the inside hose liner is dry, it will dewater the mulch causing plugging.

#### A. DISCHARGE THROUGH HOSE OR HOSE REEL WITH REMOTE VALVE :

1. Open recirculation valve, close discharge valve and close remote valve at the end of the hose.
2. Engage (turn on) the clutch. When stream is flowing freely through the recirculation line, open the pump take off valve.



**CAUTION:** The high pressure on the hose can exert strong forces causing hose operator to lose control of hose or footing. The hose will require additional holders on slopes. Open the pump take off valve and the remote valve slowly and only after the hose operator is firmly positioned and has firm control of hose.

3. With the engine at  $\frac{3}{4}$  speed, open the remote valve at the end of the hose to discharge the load.
4. When finished spraying, close the remote valve, disengage (turn off) the clutch, and stop the engine. If using fiber mulch, retain as much water as possible in the hose by elevating the ends or by coupling the ends together.
5. If another load is to be done, see "Reloading Procedure" on page 18. If finished for the day, follow the clean up procedure and flush out the hose.



**DANGER:** The recirculation valve must be open when using a remote valve. If not open, extreme heat which will cause damage and/or bodily injury will occur.

### **III. DISCHARGE THROUGH THE BOOM (PLATFORM OPTION):**

1. Move the clutch toggle switch to the "stand-by" position and close the recirculation valve. When ready to discharge the slurry step on the clutch activation button on top of the platform, which engages (turns on) the clutch. The slurry will discharge as long as this button is activated. To stop the slurry simply remove foot from the button.
2. When the tank is empty, or when discontinuing discharge for an extended period of time, disengage (turn off) the clutch and idle the engine. This will maintain moisture in the discharge piping and help prevent plugging. Move the agitator control to the neutral position.

### **RELOADING PROCEDURE:**

1. Start at step 2 in "Loading Procedure" on page 15.
2. After last load of the day refer to the cleaning and maintenance section of the manual, pages 18-19.

### **CLEANING AND MAINTENANCE:**

#### **AFTER FIRST 4 - 8 HOURS OF OPERATION:**

1. Retorque wheel lugs - again after 7 days. (Trailer option only) (75 ft.lbs.) (101.68 N.m).

#### **DAILY:**

1. Cleaning the HydroSeeder®
  - A. Fill the slurry tank to the center of the agitator shaft with clear water.
  - B. Move agitator lever to full speed to flush off inside of tank top and walls.
  - C. Remove discharge nozzle and coupler gasket from the remote valve coupler at the end of the discharge hose (or the boom on the platform option).
  - D. While aiming discharge toward an open area, open discharge and remote valve and engage (turn on) the clutch. Allow to discharge until clear water is coming out.
  - E. Open the recirculation valve and allow to run until the stream is clear.

- F. Disengage (turn off) the clutch, idle the engine, move discharge valve handle to discharge position, move agitator handle to neutral and turn off the engine. (Remember to replace the coupler gasket).
  - G. Always remove the drain plug and allow the tank to drain.
  - H. In freezing weather leave main tank drain plug out and remove pump drain plug. Move all slurry valves to open position.
  - I. Wash the outside of the HydroSeeder® to remove any corrosive materials.
2. Lubricating the HydroSeeder® (see lube chart on pages 20-21).

**IMPORTANT:** Lubrication should be performed IMMEDIATELY AFTER cleaning of equipment. Engine not running.

- A. Lubricate the agitator shaft bearings located on the outside front and rear of the slurry-tank.
- B. Service the automatic lubricator on the pump as needed (for service see pages 8-9).
- C. Check the engine oil and replenish when necessary. Change oil and filter after first 5 hours then 100 hours thereafter. Consult the engine operator's manual for the correct grade of oil and the engine break-in procedure.
- D. Lubricate the swivel on the discharge boom assembly (platform option only).

## **WEEKLY OR EVERY 40 HOURS OF OPERATING TIME:**

1. Clean the air cleaner following the instructions in the engine operator's manual.
2. Lubricate all the points on the HydroSeeder® as outlined in the daily maintenance section and, in addition, lubricate the two grease fittings on the clutch/pump.
3. Check the level in the hydraulic oil reservoir - maintain level with dipstick on filler cap.
4. Inspect the slurry-tank for build up of residue in the suction area and clear if necessary.


## **SEASONAL AND WINTER STORAGE MAINTENANCE:**

1. Drain the slurry tank of all water prior to storage and leave the drain plug disconnected.
2. Park unit in suitable location and chock wheels to prevent inadvertent movement.
3. If possible cover machine with tarp or park inside of an enclosure.
4. Store the HydroSeeder® with all slurry valve handles in the open position. To prevent damage from freezing, it is advisable to remove all slurry valves and store in a heated area.
5. Pour one quart of mineral oil or environmentally safe lubricant into the pump housing and spin pump by hand to prevent rust in the pump. Remove drain plug.
6. Chip and steel brush any interior rust spots in the slurry-tank and touch up with paint. See numbers 2 and 3 in Maintenance Section (IV) of the Safety Summary Section on page 4.
7. Lubricate all fittings.
8. Lubricate equipment again just prior to starting operation after storage.
9. Change hydraulic oil and filter. (400 hours)
10. Disconnect battery cables. In cold weather, remove battery and store in safe warm place.
11. Add fuel stabilizer to fuel tank.

## HYDRAULIC SYSTEM:

The hydraulic system on your Finn HydroSeeder® is designed to give trouble free service, when properly maintained. The most important areas of maintenance are the hydraulic oil and filtration. The reservoir holds 8 gallons of ISO Grade 46 Oil. The hydraulic oil should be replaced per the lubrication schedule or if the oil becomes milky or it gives off a burnt odor. The hydraulic oil filter must be replaced on schedule with a 25 micron absolute filter - Finn part #021618. The hydraulic system relief is factory set at 2250 PSI.

## MACHINE LUBRICATION DIAGRAM

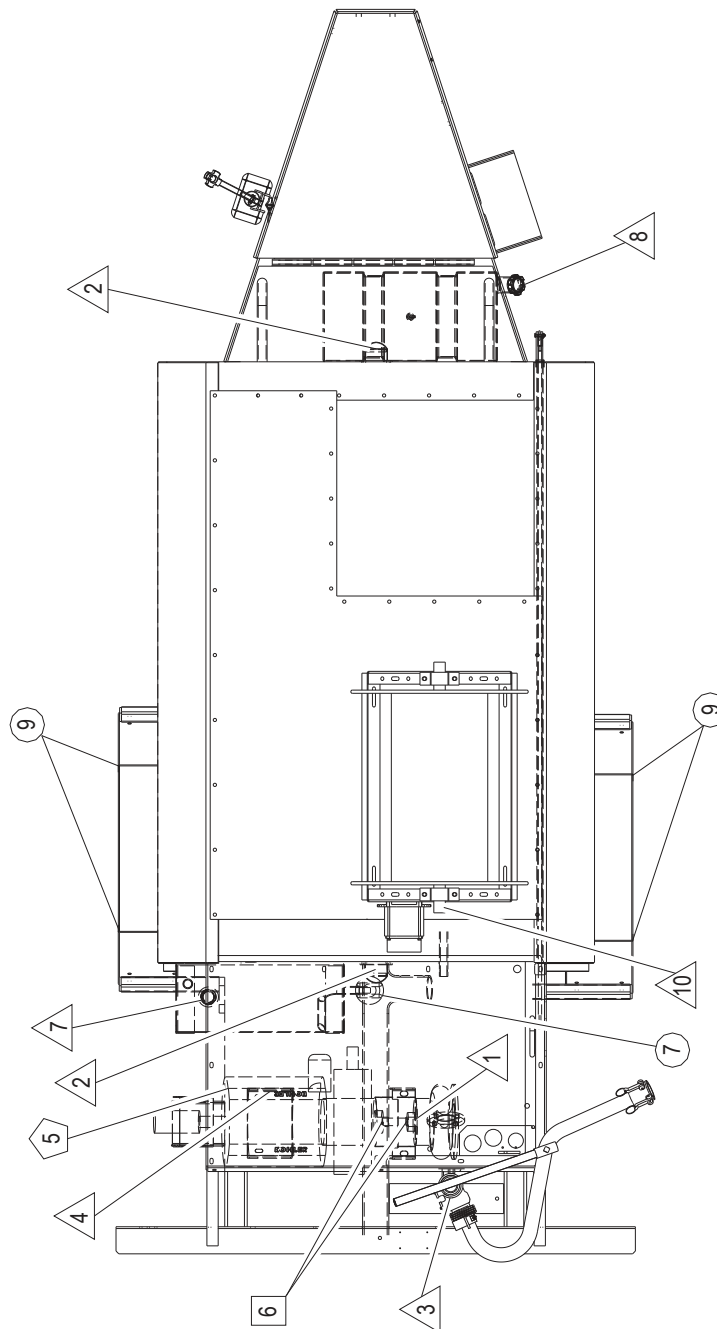





# LUBRICATION AND FLUIDS CHART

Ref. No.	Location	Lubricant	Frequency	Number
1	Check Grease Level in Pressure Lubricator	SL	Daily	1
2	Grease Agitator Shaft Bearings	CL	Daily	2
3	Grease Discharge Swivel	CL	Daily	1
4	Check Engine Oil Level	MO	Daily	1
5	Change Engine Oil and Filter	MO	See Engine Manual	1
6	Grease Pump Bearings	CL	Weekly	2
7	Check Hydraulic Fluid Level	HO	Weekly	1
	Change Hydraulic Fluid and Filter	HO	Seasonally	1
8	Check Fuel Tank	FU	Daily	1
9	Repack Wheel Bearings	CL	Seasonally	2
10	Check Hose Reel Swivel	CL	Daily	1

## LUBRICANT OR FLUID USED

SL	Seal Lube (Sodium Base)
CL	Chassis Lubricant
MO	Motor Oil See Engine Manual for Recommendations
HO	Hydraulic Oil, ISO Grade 46
FU	Gasoline

## TIME KEY

DAILY (8 hours)	
WEEKLY (40 Hours)	
SEASONALLY (500 hours)	
SEE ENGINE MANUAL	


## FLUID CAPACITIES

Gasoline - 10 Gallons (38 l)  
 Engine Oil - 2 Quarts (2 l)  
 Hydraulic Fluid - 8 Gallons (30 l)

## PUMP MAINTENANCE:



**CAUTION:** Pump maintenance to be done only while engine is not running, and battery cables are disconnected.

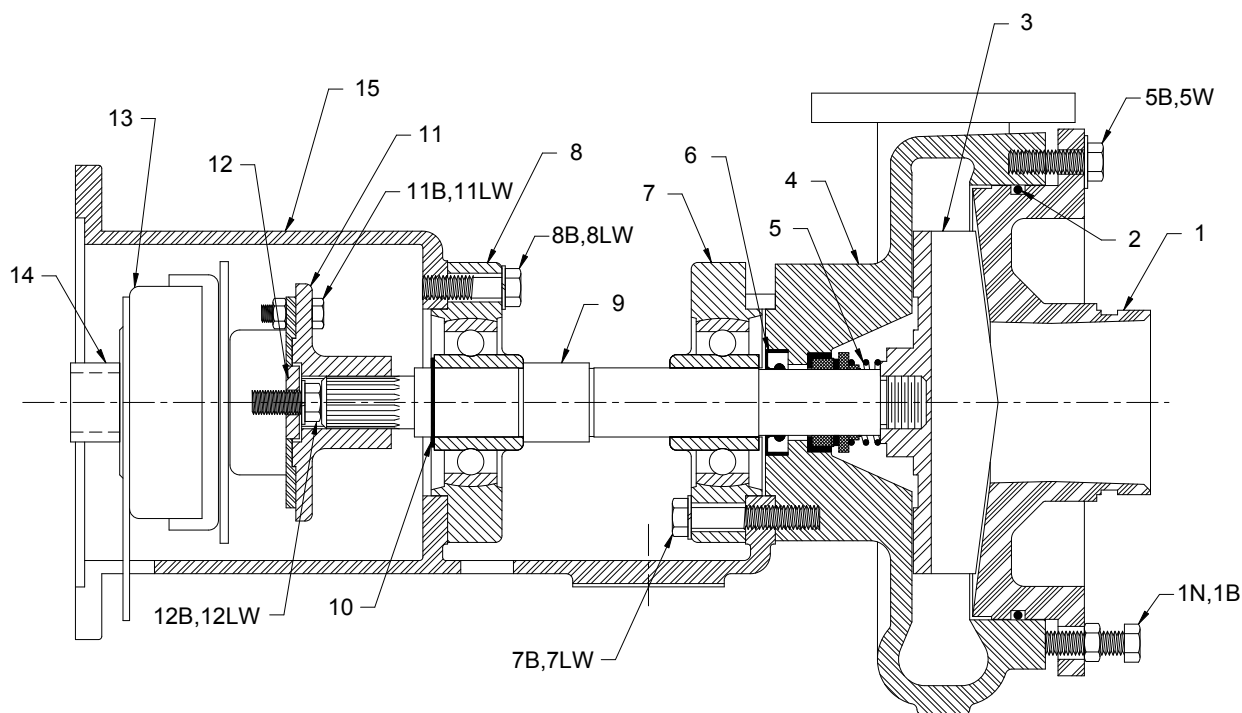

**FIGURE 5**

## PUMP ASSEMBLY

Ref. No.	Description	No. Req'd	Ref. No.	Description	No. Req'd
1B	Suction Cover Bolt	4	8B	Bearing Bolt	4
1N	Suction Cover Nut	4	8LW	Bearing Washer	4
1	Suction Cover	1	9	Pump Shaft	1
2	O-Ring	1	10	Snap Ring	1
3	Impeller	1	11	Drive Hub	1
4	Pump Casing	1	11B	Drive Hub Bolt	2
5	Mechanical Seal	1	11N	Drive Hub Nut	2
5B	Suction Cover Bolt	8	12	Clutch Retainer	1
5W	Suction Cover Washer	8	12B	Locking Bolt	1
6	Radial Lip Seal	1	12LW	Lock Washer	1
7	Casing Bearing	1	13	Clutch	1
7B	Bearing Bolt	4	14	Clutch Spacer	1
7LW	Bearing Washer	4	15	Pump Frame	1
8	Frame Bearing	1			

**NOTE:** See Parts Manual for Finn Part Numbers

## A. FACTORY-TOLERANCES.

1. To check pump tolerances loosen the two clamps on the pump suction piping and remove the inlet elbow. Through the pump suction hole, insert a feeler gauge between the pump impeller (3) and the suction cover (1). This measurement on a new pump is between 0.030-0.045 of an inch (.762 -1.15 mm).


## B. IMPELLER CLEARANCE - TO BRING THE PUMP BACK TO PROPER TOLERANCE, PROCEED AS FOLLOWS:

1. Loosen adjusting cap screws (1B) and push suction cover (1) into casing (5) until suction cover hits impeller (3). Impeller should be in full contact with suction cover.
2. Tighten cap screws (5B) finger tight. Impeller should rub the suction cover and not turn easily through one revolution.
3. Tighten cap screws (1B) to 15 lb. ft.(165 kg/m).
4. Back off cap screws (5B) 3/4 turn.
5. Tighten cap screws (1B) 3/4 turn (15 lb.ft.(165 kg/m)) and tighten nuts (1N) to 15 lb.ft. 165 kg/m).
6. Tighten cap screws (5B) to 15 lb. ft. clearance gap should be about 0.040 inches (1.00 mm). Check to see if impeller turns freely through one revolution.

**IMPORTANT:** Tightening of the cap screws should be in a criss-cross pattern. DO NOT TIGHTEN OVER 15 LB. FT.(165 kg/m). Overtightening will crack the flange of the suction cover.

## C. CLEANING.

1. To clean pump impeller (3), loosen the two victaulic pipe clamps and remove the suction pipe assembly. The eye of the impeller can then be seen through the suction cover plate (1) and is readily accessible for cleaning.
2. For further access to the impeller, remove the eight bolts (5B) holding the cover plate (1) in place. Remove suction cover plate, being careful not to damage the O-Ring gasket (2).
3. To remove the impeller take the impeller wrench, which is stored in the tool box, and position it so that the hole is aligned with any of the eight tapped holes in the front of the pump casing (5). The 90° leg of the wrench should face in towards the impeller and be positioned between any two of the impeller fins. Bolt the wrench securely in place with one of the suction cover plate bolts (5B). Using a pipe wrench on the shaft (9) (See Figure 6), unscrew the impeller turning the shaft in a clockwise direction. Be careful not to unscrew the impeller too far before removing the puller wrench.

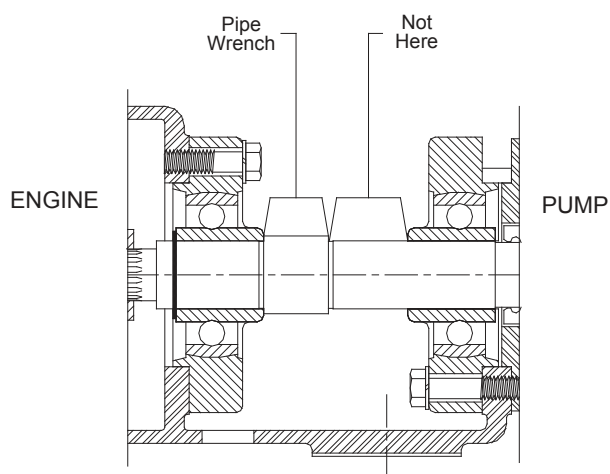

**FIGURE 6**

**D.INSTALLING NEW SEAL ASSEMBLY (#4)** *(DO NOT unwrap the new seal assembly until you are ready to install. All parts of the assembly are packed in sequence of installation.)*

1. To replace the seal assembly (4), perform the above operations under cleaning and remove pump casing (5) by removing the four bolts (7B) holding the casing and the casing bearing (7) to the pump frame (15).
2. After cleaning all parts including pump shaft, begin the reassembly of the pump. Install grease retainer seal (6) with the cavity portion of the seal facing inward. Rebolt the casing and the casing bearing (7) onto the clutch housing using the four cap screws (7B). Using a light oil lubricant (3 in 1), install the ceramic seat with its neoprene holder into the seal recess making sure it is square with the shaft. Lubricate the inside of the bellows assembly with a light oil and check to be sure the steel ring is stuck (glued) to the end of the assembly. Slide the bellows assembly onto the shaft and push till the steel ring is against the ceramic seat.
3. Install the seal spring on the hub of the impeller. After coating the threads on the pump shaft with an anti-seize compound, install the impeller - seating it securely.
4. Utilizing the rubber O-Ring gasket (2) reinstall suction cover using the eight cover bolts (5B). At this time, check to see that the pump runs freely. If the impeller rubs the cover plate, either the impeller is not tight on the shaft or the cover plate needs readjustment - see "impeller clearance". Tighten these bolts uniformly using 15 ft. pounds (165 kg/m) on the torque wrench.
5. After reinstalling the suction pipe assembly, lubricate and tighten the victaulic clamps. Service the automatic lubricator.

## **TROUBLE SHOOTING YOUR HYDROSEEDER®:**

Because of the tremendous work load usually placed upon the HydroSeeder®, minor malfunctions will occur from time to time. If not remedied immediately, they could lead to poor performance and damage to the equipment. This section describes possible problems and the action to correct them.

1. Foam in the tank and air entrainment.

The mixture of dry materials with water will sometimes cause excessive foaming while others will cause air entrainment. This is exhibited by erratic discharge and/or a drop in pressure and distance.

Some solutions are:

- A. As the slurry level drops in the tank, slow the agitator.
  - B. Add 2 or 3 ounces (4 to 6 cl) of an antifoaming agent to the tank.
  - C. If you can determine which additive is causing the air problem, either add it last or not at all - unless it's the water.
  - D. Reduce recirculation time as much as possible.
2. Plugging or clogging:



**DANGER:** Turn off engine and disconnect battery cables before working on equipment. Serious injury or death can result from moving parts or high pressure spray.

Sometimes when a stoppage occurs, you will not be able to find anything in the line. When this happens, it means that the system became airbound instead of plugged. To remedy this, see "Foaming".

Plugging can occur in any of four places; the valve and recirculation nozzle, the discharge nozzle, the pump area and the sump area. Plugging is caused by either foreign objects or dewatered fiber.

- A. Obstruction in discharge nozzle is determined by a change or stoppage of the spray pattern.
  - a) Disengage (turn off) the clutch.
  - b) Remove the nozzle.
  - c) Clear the nozzle with the nozzle cleaning rod attached to the underside of the guard rail (platform option only).



**DANGER:**      **Severe injury can result from opening clamps when piping is hot. Before loosening any clamps, determine if the pipe is hot. If so, let it cool before attempting repair.**

- B. If the recirculation system is not working:
  - a) Disengage (turn off) the clutch and shut down the engine.
  - b) Remove the clamp attaching the recirculation valve.
  - c) Slide the rubber seal back and remove the valve assembly.
  - d) Check the valve assembly, the recirculation nozzle in the discharge pipe, and the recirculation pipe going into the tank. Clear any obstructions.
  - e) Replace the valve assembly and slide the seal back into place. Lubricate the outside of the seal.
  - f) Replace the clamp.
- 3. Obstruction in the pump, which can be determined by a drop in pressure. If the drop in pressure is accompanied by a frothy or whitish discharge stream, the blockage is in the suction line or sump area. To clear the pump:
  - A Disengage (turn off) the clutch and stop the engine. Close the suction shut-off valve if applicable.
  - B. Loosen suction pipe clamps. If there is material in tank, stuff a rag into the suction piping.
  - C. Remove the clamp closest to the pump.
  - D. Remove the elbow and slowly open the suction shut off valve.

**NOTE:**      If no water comes out, it means that the obstruction is in the sump area.

- E. Reach into the pump and remove the obstruction. If it is jammed, the pump suction cover may have to be removed.
- F. Reassemble removing pipe “plug” in process.
- G. Remove the rag plugging the suction piping.
- 4. Obstruction in the sump area, which is located at the bottom of the tank on the inside where the suction pipe is attached:
  - A. The easiest way to clear the sump is to back flush through the discharge plumbing with the water supply hose.
  - B. Another method is to remove the drain plug and run a long pole through the opening and into the sump area. Remove the obstruction and replace the drain cap.
  - C. Use a pipe or pole through the loading hatch opening to dislodge the obstruction.

## TROUBLE SHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
<b>LEAKS:</b>		
Tank bearing leaks.	Lack of lubrication - seal worn.	Replace seal and follow lube schedule.
	Bolts not tightened properly.	Tighten uniformly to 25 ft. lbs.
Pressure Clamps.	Rubber seal cracked, pinched or torn.	Replace, always grease seal before clamping shut.
Suction.	Rubber seal cracked, pinched or torn.	Replace, always grease seal before clamping shut.
Discharge Swivels.	Not greased often enough.	Rebuild swivels w/repair kit (part #006969, 2 required).
Pump Shaft.	Pressure lubricator not serviced.	Replace pump seal, service pressure lubricator daily.
Pump Suction Cover.	Cover O-Ring bad.	Replace cover O-Ring, use grease when replacing.
Discharge Boom or Nozzle Camlock Fittings.	Worn or no gasket.	Replace gasket.
<b>MACHINE JUMPS DURING OPERATION:</b>		
Agitator.	Agitator bent by heavy object falling on it.	Straighten agitator or shim, so it runs true.
Bent Paddles.	Loading fiber mulch into tank before tank is half full.	Straighten agitator paddle, realign agitator to run true.

# TROUBLE SHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
<b>FOAMING OF SOLUTION AND LACK OF DISTANCE:</b>		
Pump loses prime - lacks distance - leaves excessive amount in tank (100 gal(378 liters) or more).	Sucking air in suction lines.	Check all suction connections to see that rubber seals are in good shape. Grease seals before replacing clamps.
	Air entrainment.	See page 24 - "Trouble Shooting Your HydroSeeder®".
	Low engine RPM. (Below 3600 RPM-No load)	Check throttle cable and linkage. See authorized engine dealer.
	Soft water.	Slow agitator.
	Too much agitation.	Slow the agitator.
	Pump worn.	Reset pump tolerance (see page 23).
	Suction partially plugged.	Clean out machine (see pages 18-19).
	Nozzle worn or plugged.	Clean nozzles, replace if necessary.
	Fertilizer.	Change type.
<b>VALVE:</b>		
Valve stuck.	Frozen.	Thaw out ice, lubricate. Leave in discharge position during storage.
Constant plugging during operation.	Foreign material in slurry.	Drain and clean out tank. Check storage for foreign materials.
Constant plugging during loading and discharging.	Loading HydroSeeder® before tank is half full of water.	Reinstruct your operator. (See pages 15-16).
	Incorrect loading procedure.	Review loading procedure on pages 15-16.
	Improper operation by operator.	Reinstruct your operator. (Review Operator's Manual).
	Not moving valve handle far enough.	Valve should be fully open.

## TROUBLE SHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
Constant plugging during loading and discharging.	Machine not being flushed out prior to reloading.	See page 15.
	Machine not being run at correct RPM during loading.	Reinstruct your operator. (See page 15).
Extension hose plugs after use.	Letting water run out, allowing fiber mulch to dry out.	If hose has to be uncoupled, seal ends to keep water in hose and prevent fiber mulch from drying out.

### PUMP:

Excessive wear.	Fertilizer with highly abrasive filler.	Change fertilizer. Avoid abrasive fillers.
	Overloading machine with dry material.	Load machine to recommended capacities.
	Too much time allowed between loading and discharging.	After loading and mixing has been completed, set agitator at 1/2 speed in reverse and disengage (turn off) pump.
	Recirculating all the time.	Close recirculation valve when discharging through the boom.
Will not turn.	Frozen.	Warm housing to melt ice.
	Jammed with fertilizer or lime.	Remove cover and clean interior.
	Impeller rusted to suction cover plate.	Pull cover and remove rust.



### CAUTION:

**Do not turn the shaft backwards with a pipe wrench - this will unscrew the impeller from the shaft. Consequently, when clutch is engaged, the impeller will screw onto the shaft with such force, great enough to break the impeller.**

## NOTES


## NOTES

# **T60 II**

# **Hydroseeder<sup>®</sup>**

## **Parts Manual**

**Model SR**

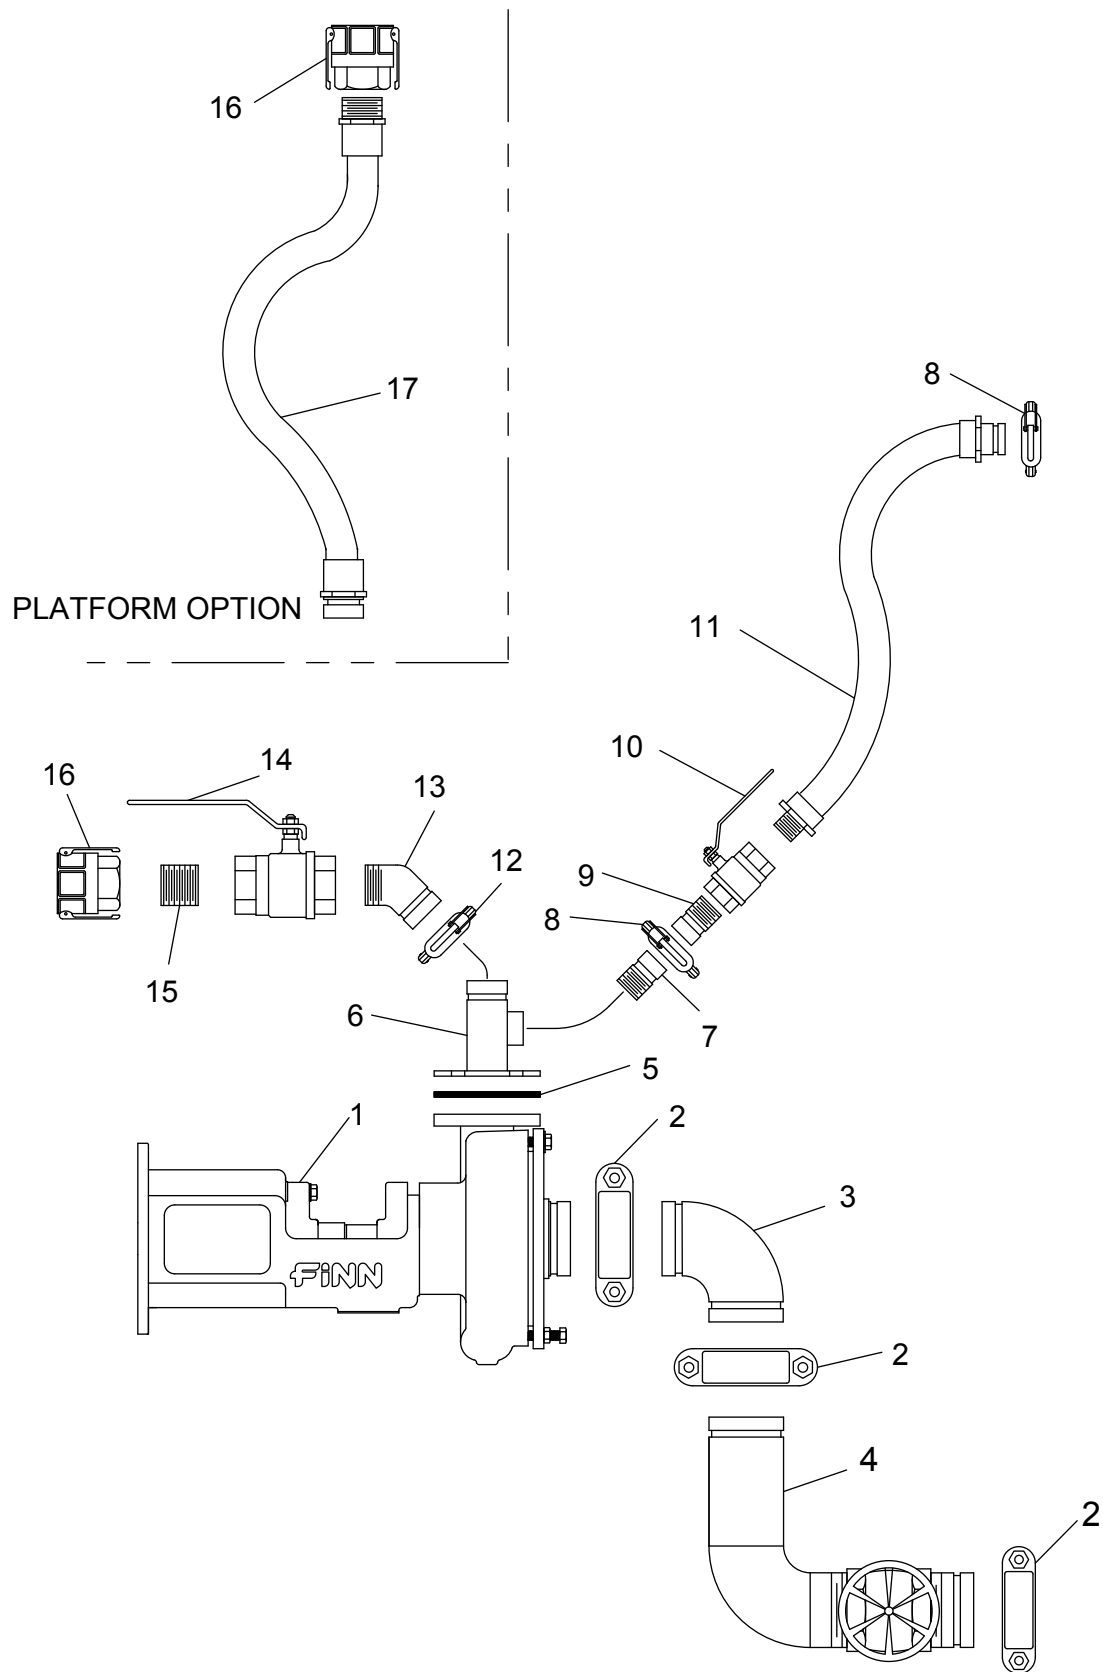


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## SUCTION, DISCHARGE AND RECIRCULATION PIPING

Ref. No.	Part Number		Description	No. Req'd	
	Base	Platform		Base	Platform
1	080520	080520	T60 II Clump Assembly	1	1
	002383	002383	Pressure Lubricator	1	1
	F60-0022-01	F60-0022-01	Clump Guard	1	1
2	080366	080366	Pipe Clamp	3	3
	002439	002439	Gasket For 3" Clamp	1 per	1 per
3	002868	002868	90° Grooved Elbow	1	1
4	080732	080732	Suction Pipe Elbow	1	1
	004737	004737	Suction Line Valve	1 per	1 per
5	008469	008469	Discharge Flange Gasket	1	1
6	080558-01	080558-01	Discharge Flange Pipe	1	1
7	005083-07	005083-07	Recirculation Nozzle	1	1
8	005156	005156	Pipe Clamp	2	2
	005183	005183	Gasket For 1" Victaulic Clamp	1 per	1 per
9	005083-08	005083-08	Recirculation Nozzle	1	1
10	021559	021559	Ball Valve	1	1
11	080650	080650	Recirculation Hose	1	1
12	006252	006252	Pipe Clamp	1	1
	006253	006253	Clamp Seal	1 per	1 per
13	080679		45° Discharge Elbow	1	0
14	007710		Ball Valve	1	0
15	160309		Close Nipple	1	0
16	080377	080377	Female Nyglass Coupler	1	1
	006515	006515	Coupler Gasket	1 per	1 per
17		080494	Platform Discharge Hose	0	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

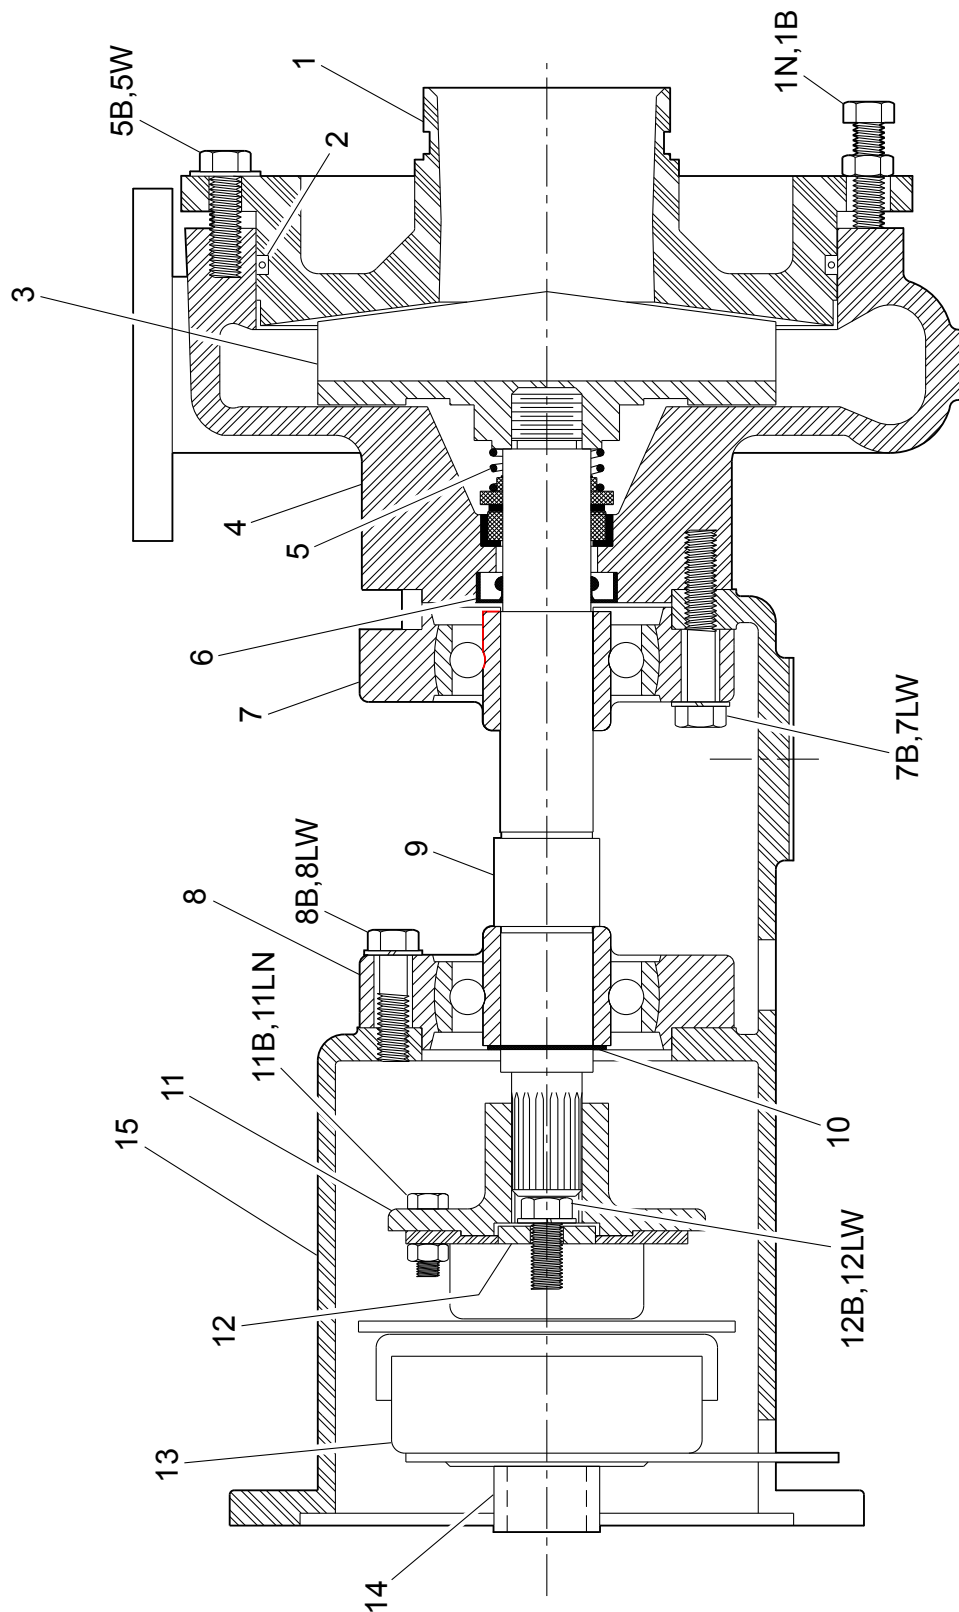


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## CLUTCH/PUMP ASSEMBLY

Ref. No	Part Number	Description	No. Req'd
1	080489	Suction Cover	1
1B	0X0720	Suction Cover Bolt	4
1N	000Y07	Suction Cover Nut	4
2	080499	O-Ring	1
3	080488	Impeller	1
4	080487	Pump Casing	1
5	080485	Mechanical Seal	1
5B	0X0720	Suction Cover Bolt	8
5W	000W07	Suction Cover Washer	8
6	080493	Radial Lip Seal	1
7	080498	Casing Bearing	1
7B	0X0740	Bearing Bolt	4
7LW	00W07L	Bearing Lock Washer	4
8	080498	Frame Bearing	1
8B	0X0728	Bearing Bolt	4
8LW	00W07L	Bearing Lock Washer	4
9	080491	Pump Shaft	1
10	080497	Snap Ring	1
11	080490	Drive Hub	1
11B	0X0516	Drive Hub Bolt	2
11LN	00Y05L	Drive Hub Lock Nut	2
12	080590-07	Clutch Retainer	1
12B	080741	7/16-20 UNF x 1-1/4" Lg. Locking Bolt	1
12LW	00W07L	Retainer Lock Washer	1
13	035084	Electric Clutch	1
14	080590-08	Clump Spacer	1
15	080486	Pump Frame	1
	080492	Cover Plate	1
	F60-0022-01	Clump Shaft Guard	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

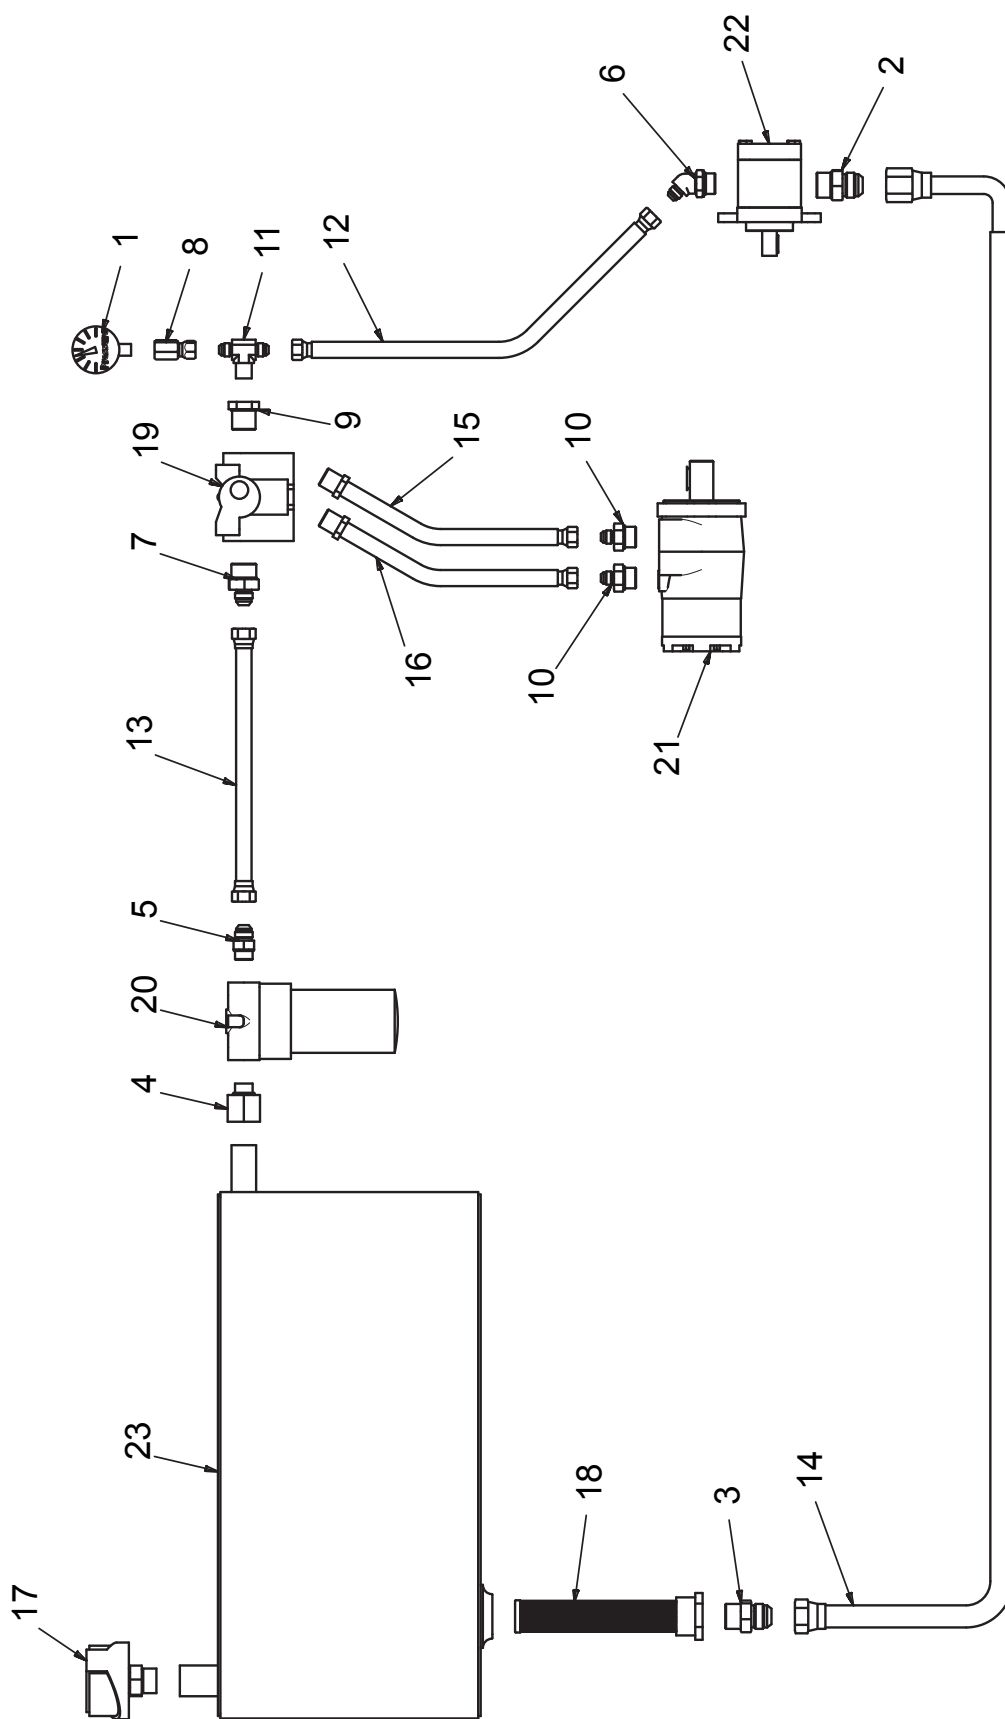

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**


## HYDRAULIC SYSTEM

Ref. No.	Part Number	Description	No. Req'd
1	012044	Pressure Gauge	1
2	012087	MSAE - MJIC Adapter	1
3	023616	MNPT - MJIC Adapter	1
4	023911	FNPT - MSAE Adapter	1
5	055232	MSAE - MJIC Adapter	1
6	053019	MSAS - MJIC 45° Adapter Elbow	1
7	055359	MSAE - MJIC Adapter	1
8	075552	FNPT - FJIC Swivel Adapter	1
9	080789	NPT Reducer Bushing	1
10	085014	MSAE - MJIC Adapter	2
11	FW71872	Male Branch Tee	1
12	080578	3/8" Hyd. Hose x 75"	1
13	080683	1/2" Hyd. Hose x 18"	1
14	080684	3/4" Suction Hose x 35-1/2"	1
15	080787	3/8" Hyd. Hose x 32"	1
16	080788	3/8" Hyd. Hose x 33"	1
17	005793	Hydac Filler / Breather	1
18	004618	Suction Strainer	1
19	080743	Hydraulic Control Valve	1
	080591-02	Control Valve Handle	1
20	023913	Return Filter	1
	023914	Filter Element	1
21	080482	Hydraulic Motor	1
22	080642	Hydraulic Pump	1
23	080680	Hydraulic Reservoir	1

**NOTE:**

*Items 1-16 are part of hydraulic kit #80806*

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

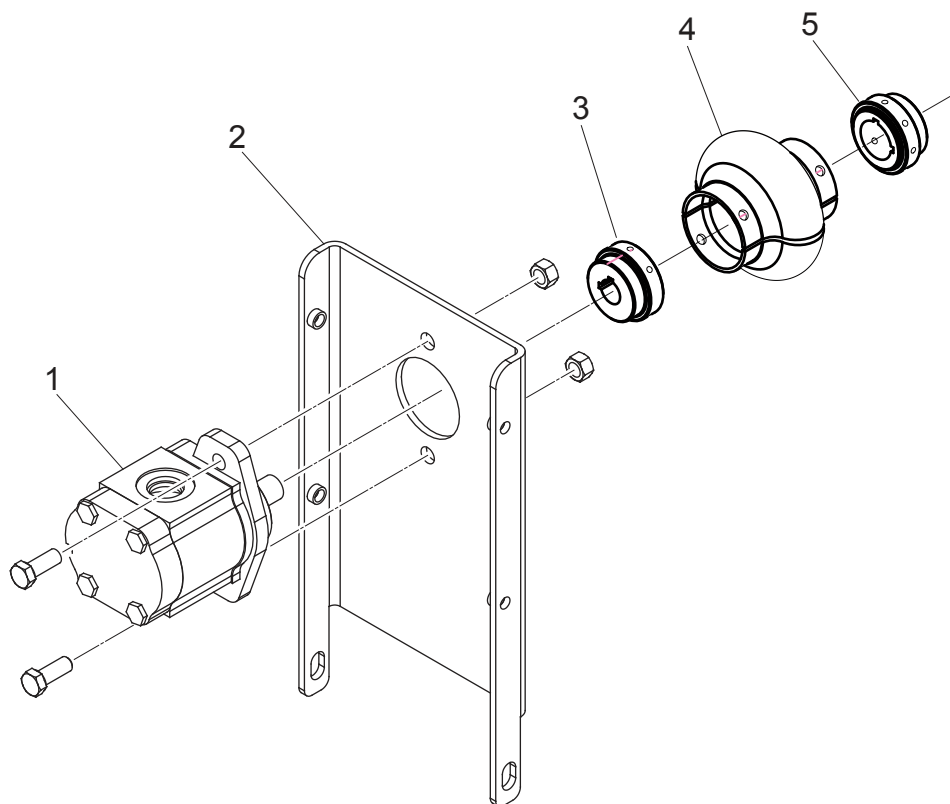


## HYDRAULIC PUMP DRIVE ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	080642	Hydraulic Pump	1
2	F60-0016-03	Hydraulic Pump Mounting Plate	1
3	080807	Coupling Half-Hydraulic Pump	1
4	080809	Coupling Insert	1
5	080808	Coupling Half-Engine Stub Shaft	1

### NOT SHOWN

F60-0022-03	Hydraulic Pump Coupling Guard	1
-------------	-------------------------------	---

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

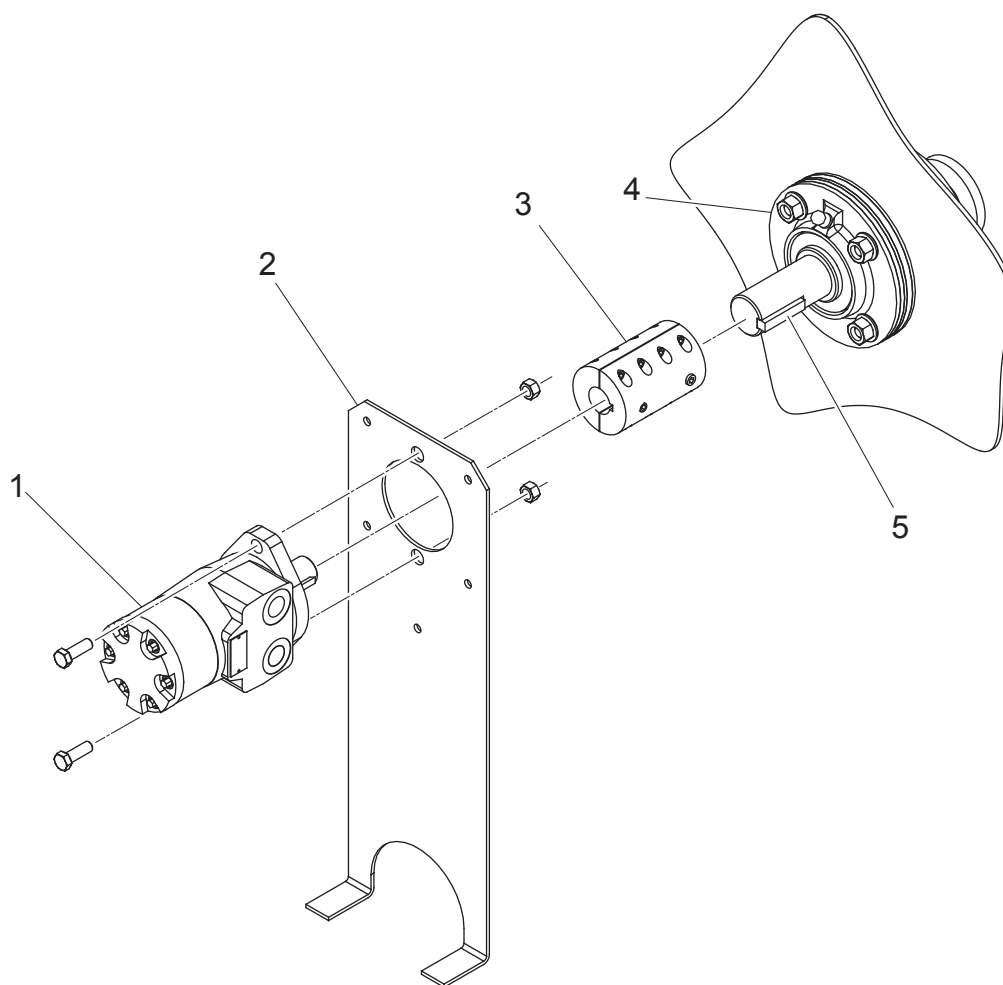

## HYDRAULIC AGITATOR DRIVE ASSEMBLY


Ref. No.	Part Number	Description	No. Req'd
1	080482	Hydraulic Motor	1
2	F60-0016-01	Torque Arrestor Plate	1
3	080523	Rigid Coupling Assembly	1
4	007420	Bearing and Seal Assembly ( <i>See page 40</i> )	2
5	005081-02	Agitator Drive Shaft	1
<b>NOT SHOWN</b>			
	F60-0022-02	Agitator Coupling Guard	1
	080583	Rubber Torque Arrestor Pad	1
	080582	Worm Gear Clamp	2

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**


**NOTE:**

To tighten, Turn nut not bolt.  
Torque to 25 Ft. Lbs.

**DO NOT OVER TORQUE**

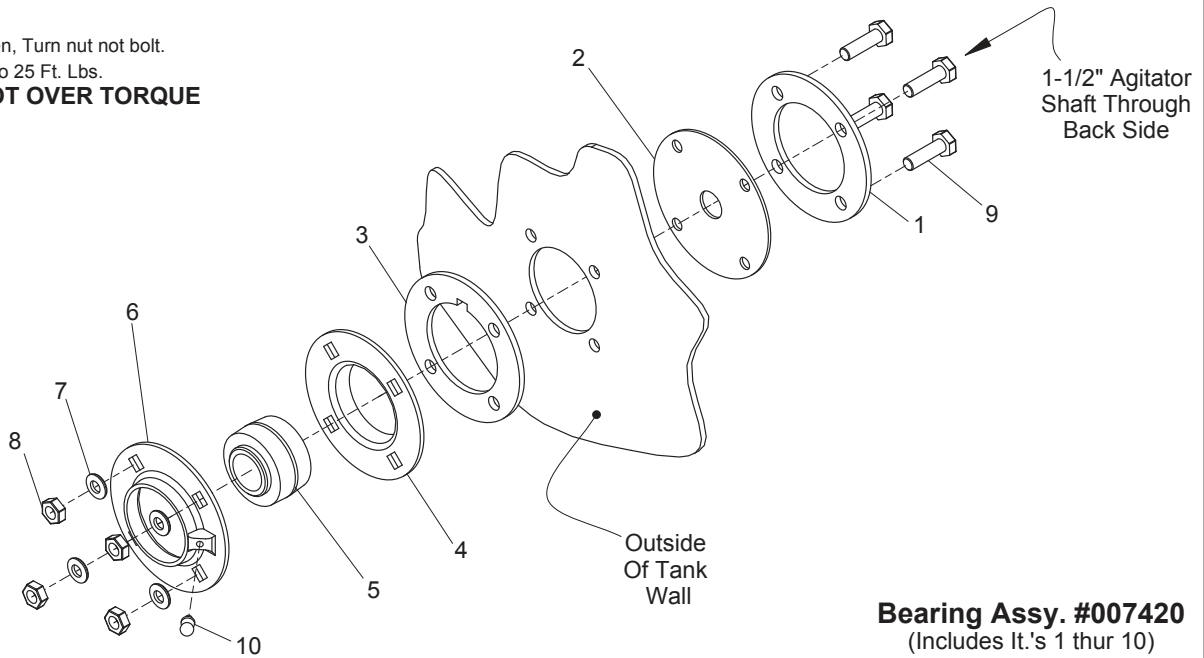

## AGITATOR ASSEMBLY

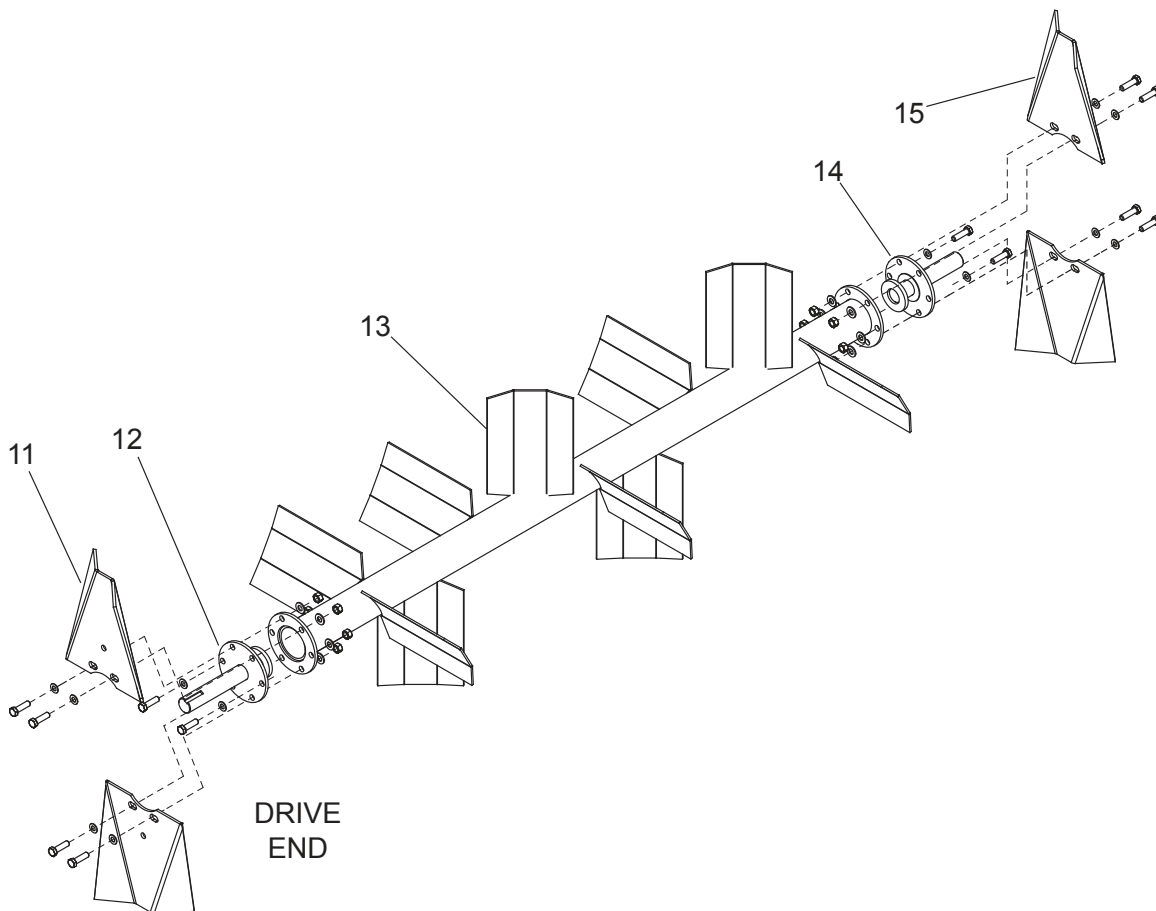

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## AGITATOR AND BEARING ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
	007420	Bearing and Seal Assembly (Includes It.'s 1 thru 10)	2
1	007417	Clamping Ring	1 per
2	007416	Shaft Seal	1 per
3	006975	Rubber Flangette Seal	1 per
4	007212	Flangette w/Groove	1 per
5	003022	Bearing	1 per
6	007211	Flangette w/Lube Coupling	1 per
7	012605	Bevel Sealing Washer	4 per
8	Y08SS	Agitator Nut	4 per
9	X0828SS	Agitator Bolt	4 per*
10	007705	Grease Fitting	2


### AGITATOR ASSEMBLY

11	F60-0011-01	Rear Bolt-On Paddle w/I.D. Hole	2
12	005081-02	Drive Agitator Stub Shaft	1
13	080661	Main Agitator Section with Paddles	1
14	005081-03	Agitator Stub Shaft	1
15	F60-0011-02	Bolt-On Paddle w/o I.D. Hole	2

**\*NOTE:**

*On the T60 Series II, the quantity of Part #X0828SS is a total of 8 per unit, except for the T60 Series II Trailer Unit; which replaces two of this part with Part #X0840SS. The two replacement bolts are used for the lower two bolts on the front of the unit to hold the toe guard.*


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

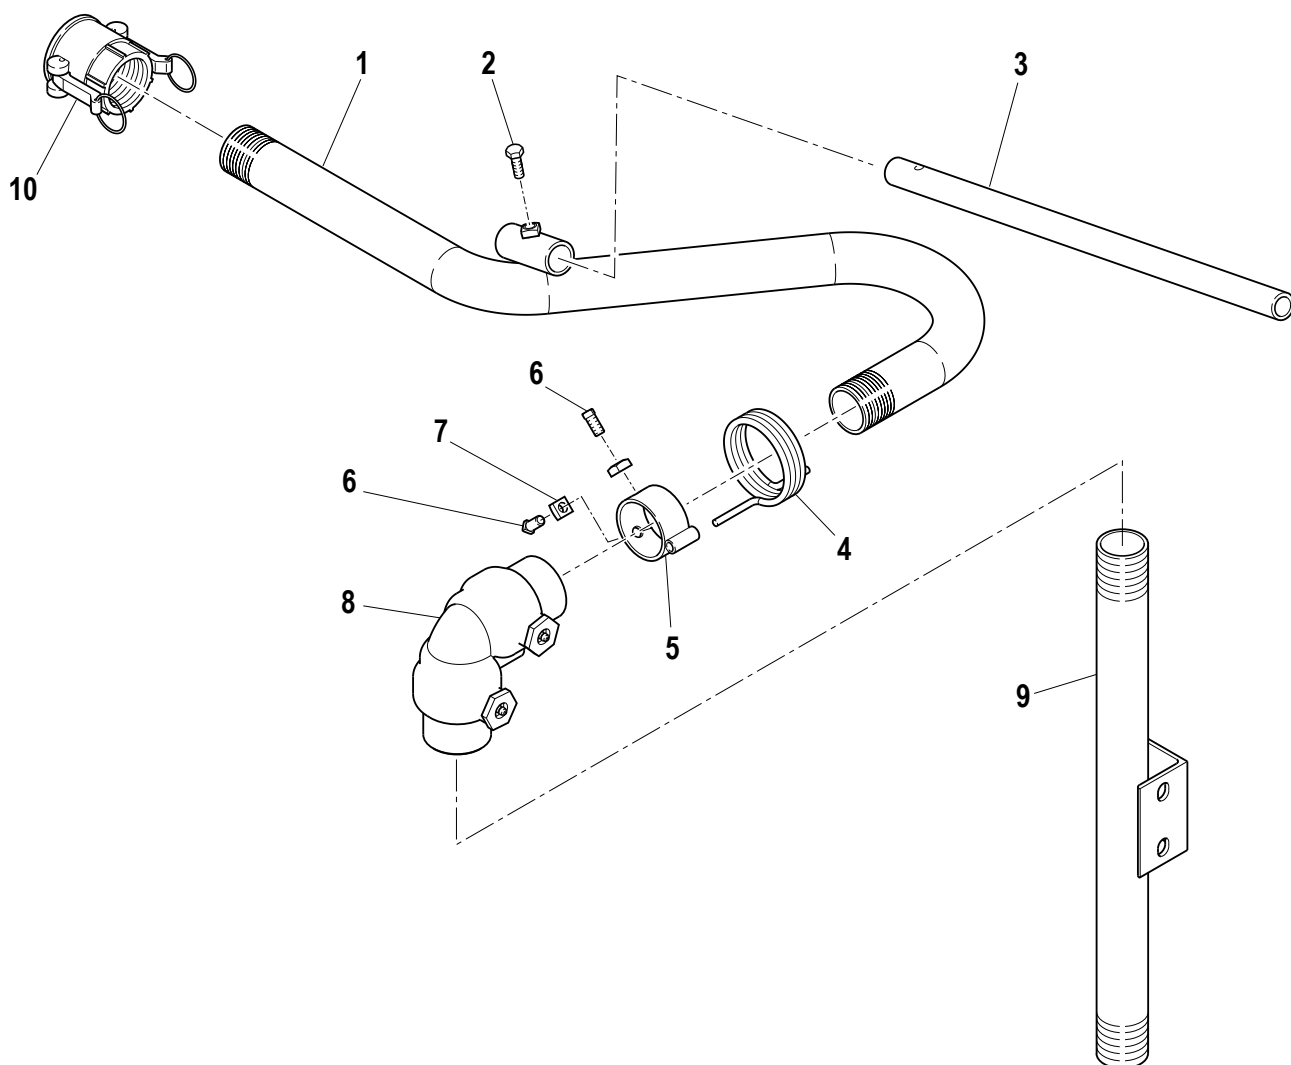

## DISCHARGE BOOM OPTION

Ref. No.	Part Number	Description	No. Req'd
	080736	Discharge Boom Assembly Consisting of:	1
1	080708	Boom Weldment	1
2	0X0624	3/8-16 UNC-2A x 1-1/2" Lg. Hex Hd Cap Screw	1
3	080559-01	Boom Handle	1
4	003299	Discharge Balance Torsion Spring	1
5	080560-02	Adjusting Collar	1
6	Z0612SCP	3/8-16 x 3/4" Lg. Square Hd. Set Screw	2
7	00Y06S	3/8-16 Square Nut	1
8	003207	1-1/2" x 90° Swivel Joint	1
	003355	Swivel Repair Kit	2
9	080733	Boom Stand Pipe	1
10	080377	Female Coupler	1
	006515	1-1/2" Coupler Gasket	1


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

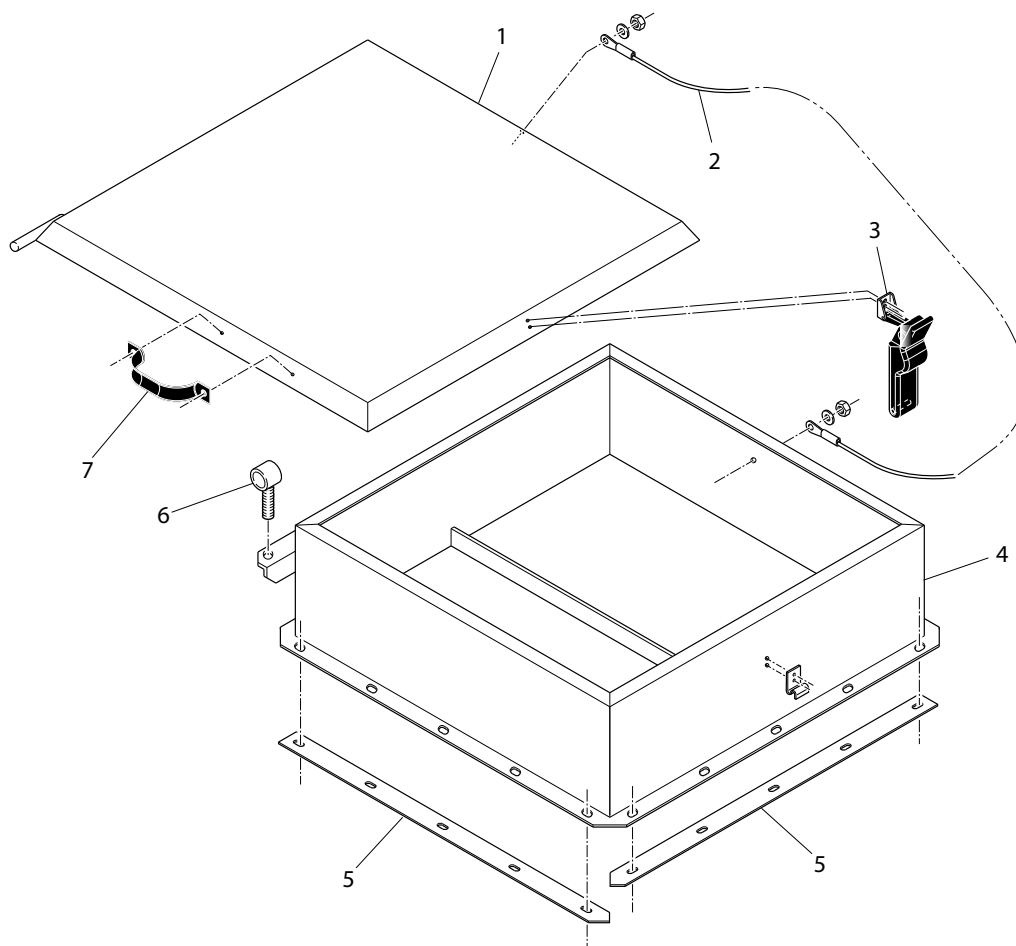

## HATCH ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	080674	Hatch Lid	1
2	005565	Hatch Lid Lanyard	1
3	005433	Soft Latch	1
4	080675	Hatch Liner	1
5	F60-0002-01	Hatch Shim	2
6	070627	Hatch Lid Hinge	2
7	002909	Handle	1
	190044	Foam Gasket	A/R (Ft.)

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

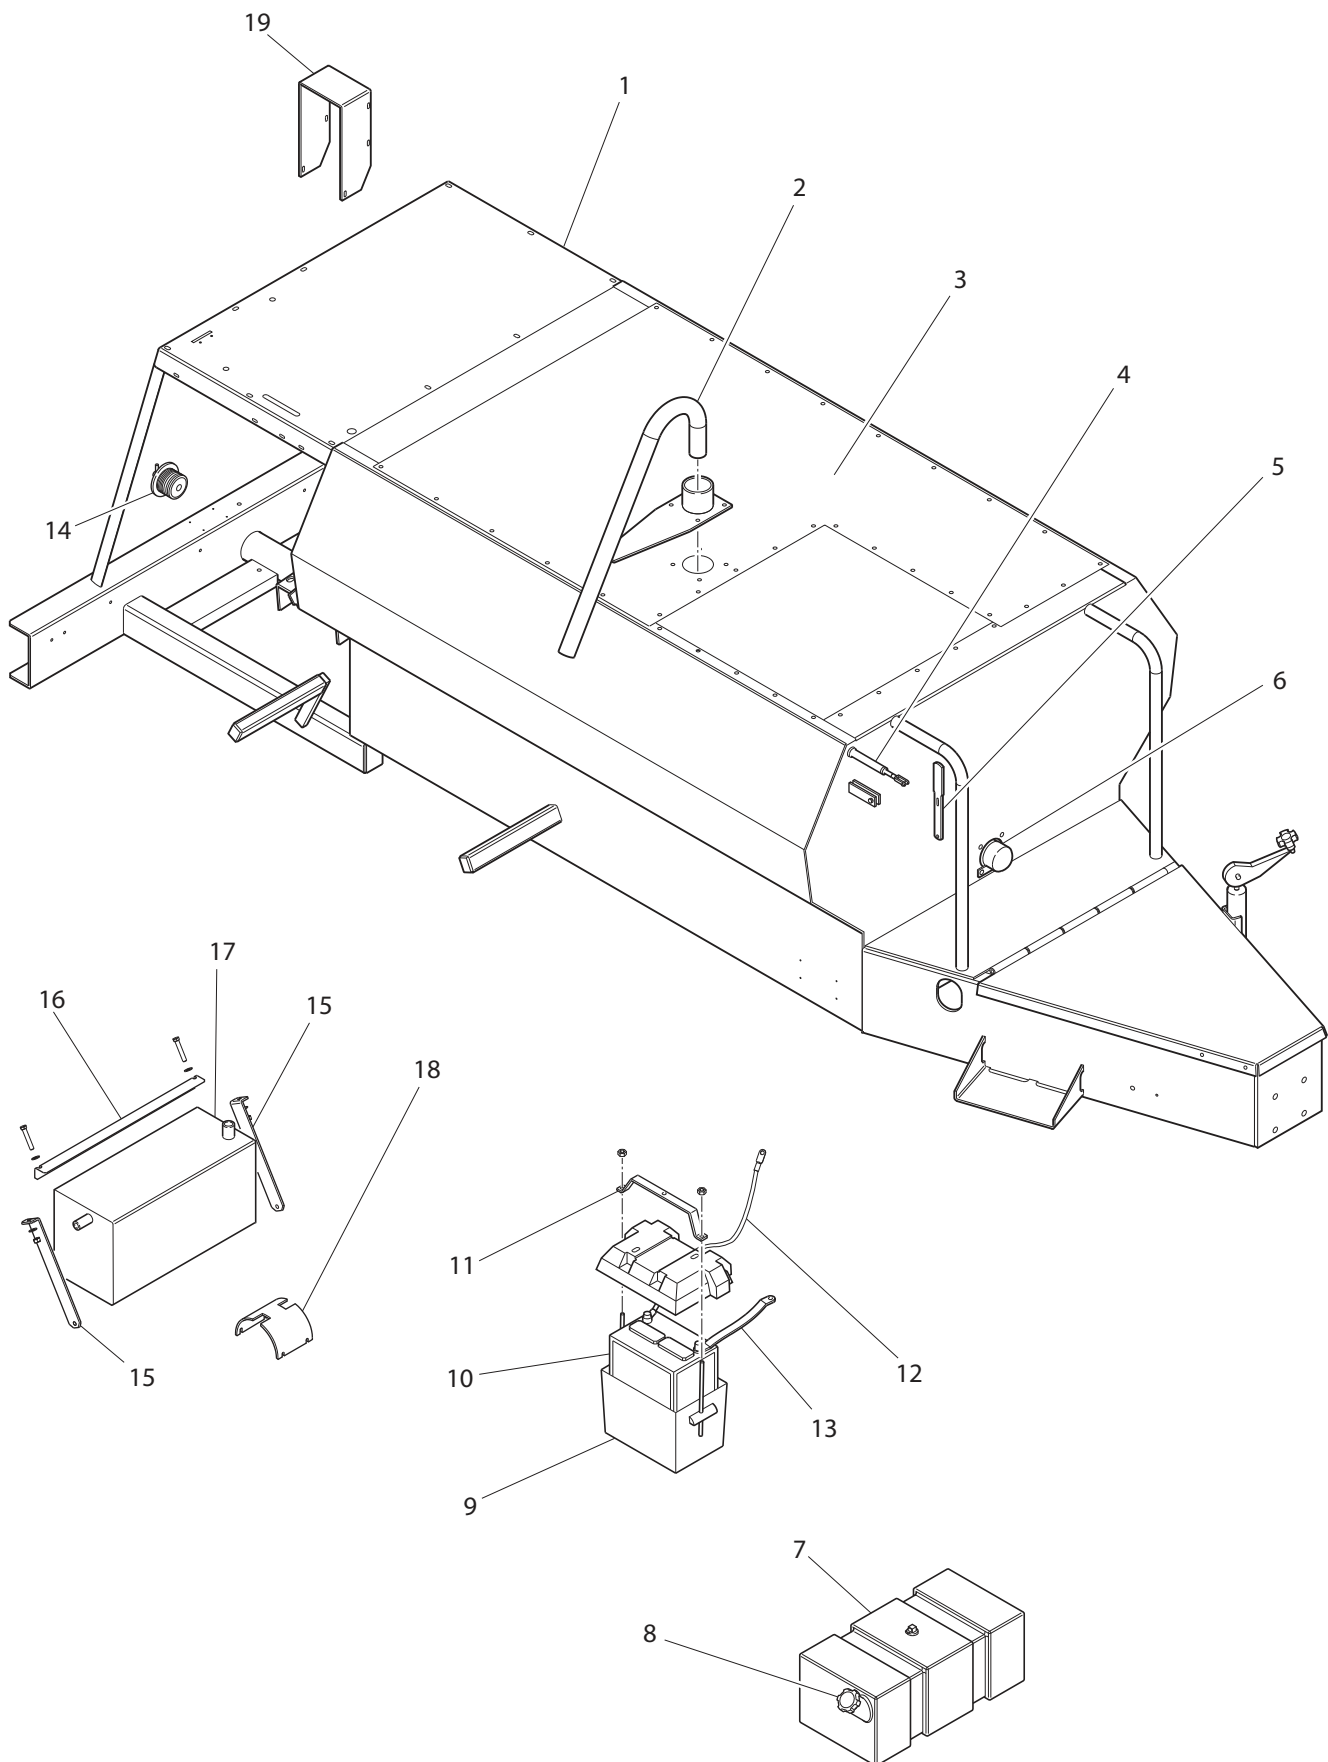


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## COMMON LOOSE PARTS & ENGINE

Ref. No.	Part Number	Description	No. Req'd
1	F60-0005	Platform	1
	F75-0013	Right Platform Support	1
	F75-0012	Left Platform Support	1
2	080731	Fill Port Assembly	1
	005280	Fill Port Plug	1
	080378	1-1/2" Male Nyglass Coupler	1
3	F60-0002	Tank Top	1
4	080589-02	Agitator Control Rod	1
	022801	Clevis & Pin	1
	080218	Agitator Control Rod Conduit	1
	005178	O-Ring	1
5	F60-0020	Control Handle	1
	022202	Black Handle Grip	1
6	005399	Agitator Toe Guard	1
7	080691	Fuel Tank	1
8	080691C	Fuel Tank Cap	1
9	080223	Battery Case	1
10	080524	Battery	1
11	005559-03	Battery Holddown Strap	1
12	008171	Positive Battery Cable	1
13	000241	Ground Strap	1
14	080626	Tank Drain Plug	1
15	F60-0024	Hydraulic Reservoir End Strap	2
16	F60-0023	Hydraulic Reservoir Tie-Down	1
17	080680	Hydraulic Reservoir	1
18	F60-0022-01	Clump Shaft Guard	1
19	F60-0022-03	Hydraulic Pump Coupling Guard	1
<b>NOT SHOWN</b>			
	080566	Throttle Control Cable Assembly	1
	080567	Choke Cable Assembly	1
	080483	Engine	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

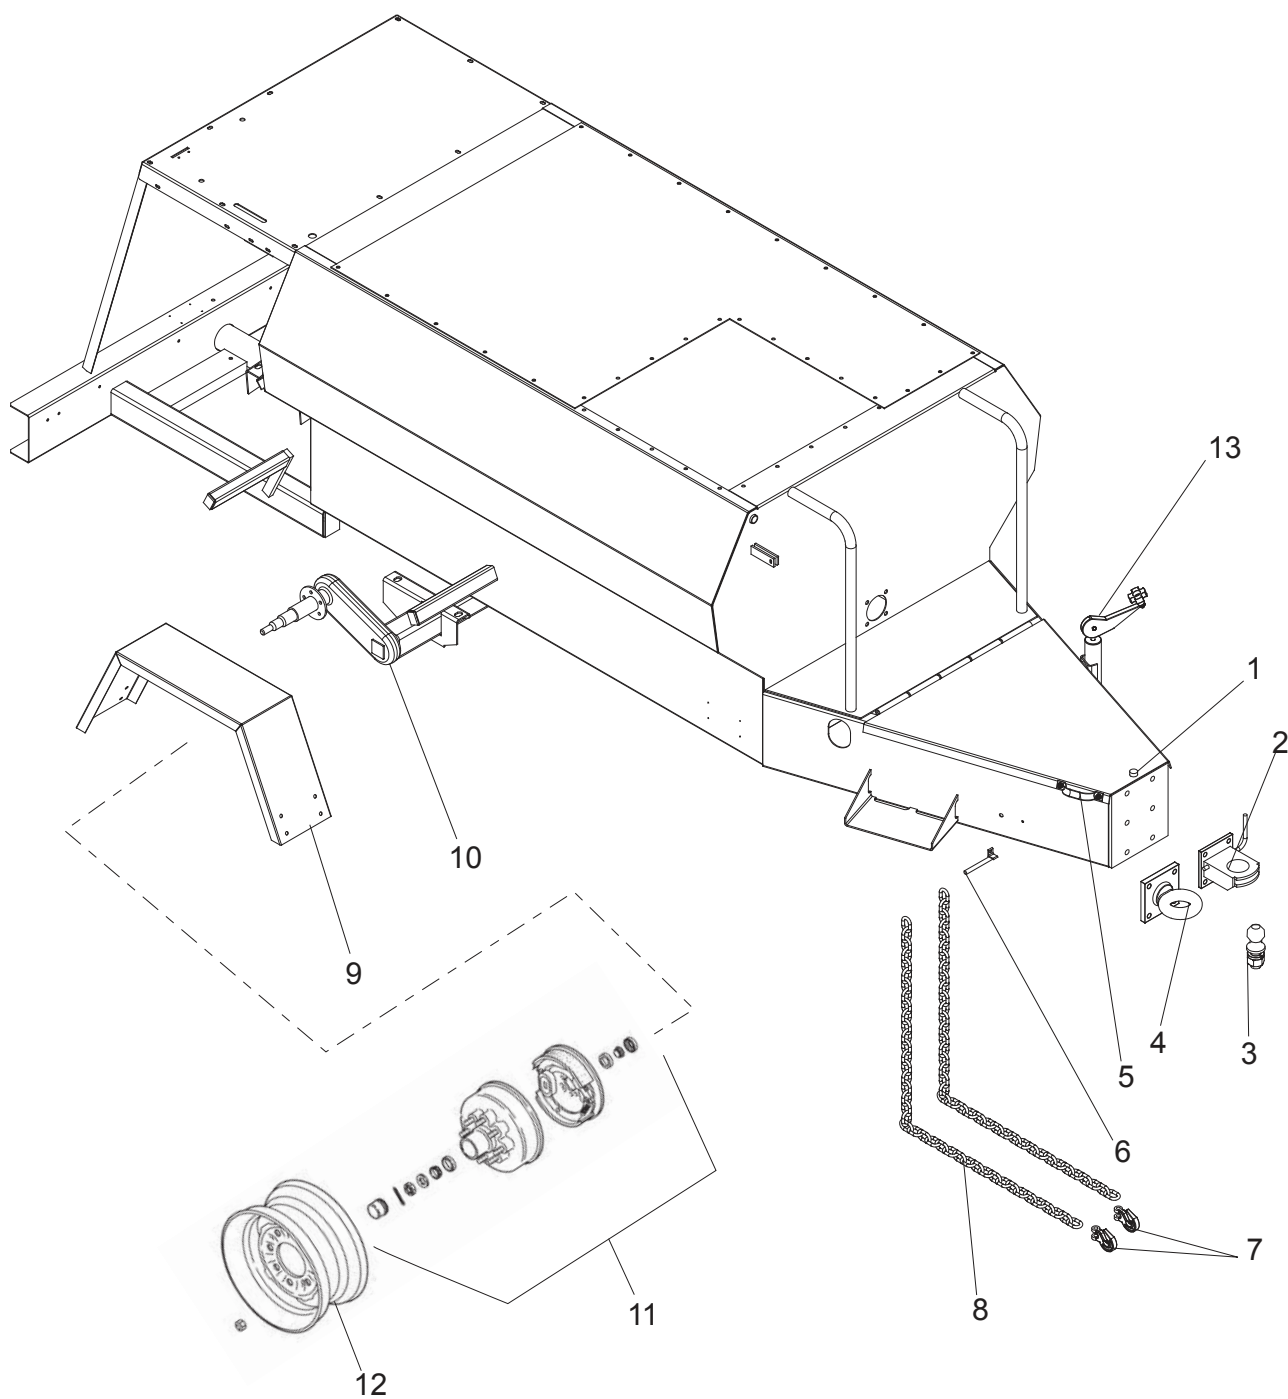


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## TRAILER ASSEMBLY PARTS

Ref. No.	Part Number	Description	No. Req'd
1	085152	Rubber Stud Mount	1
2	005134	2-5/16" Ball Coupler	1
3	005135	2-5/16" Ball	1
4	080043	2-1/2" Tow Ring	1
5	002909	Handle	1
6	080591-03	Safety Chain Rod Weldment	1
7	023915	Clevis Grab Hook	2
8	190028	Safety Chain (3 foot lengths)	2
9	F60-0015	Fender	2
10	080804	6000# Axle Assembly	1
11	WL8-219-4	Hub and Drum Assembly	2
	WL10-1	Grease Seal	1 per
	WL25580	Inner Cone	1 per
	WL25520	Inner Cup	1 per
	WL14276	Outer Cup	1 per
	WL14125A	Outer Bearing	1 per
	WL605	Dust Cover	1 per
	WL6-80	Wheel Nut	8 per
	WL7-122	Stud	8 per
	WL15-57	Spindal Washer	1 per
	WL6-1	Spindle Nut	1 per
	WL23-180	Left Brake Assembly	1
	WL23-181	Right Brake Assembly	1
12	080669	Tire and Wheel Assembly	2
	080663	Wheel	1 per
	080668	Tire	1 per
13	080701	Jack	1
	005432EE	Jack Repair Kit	


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

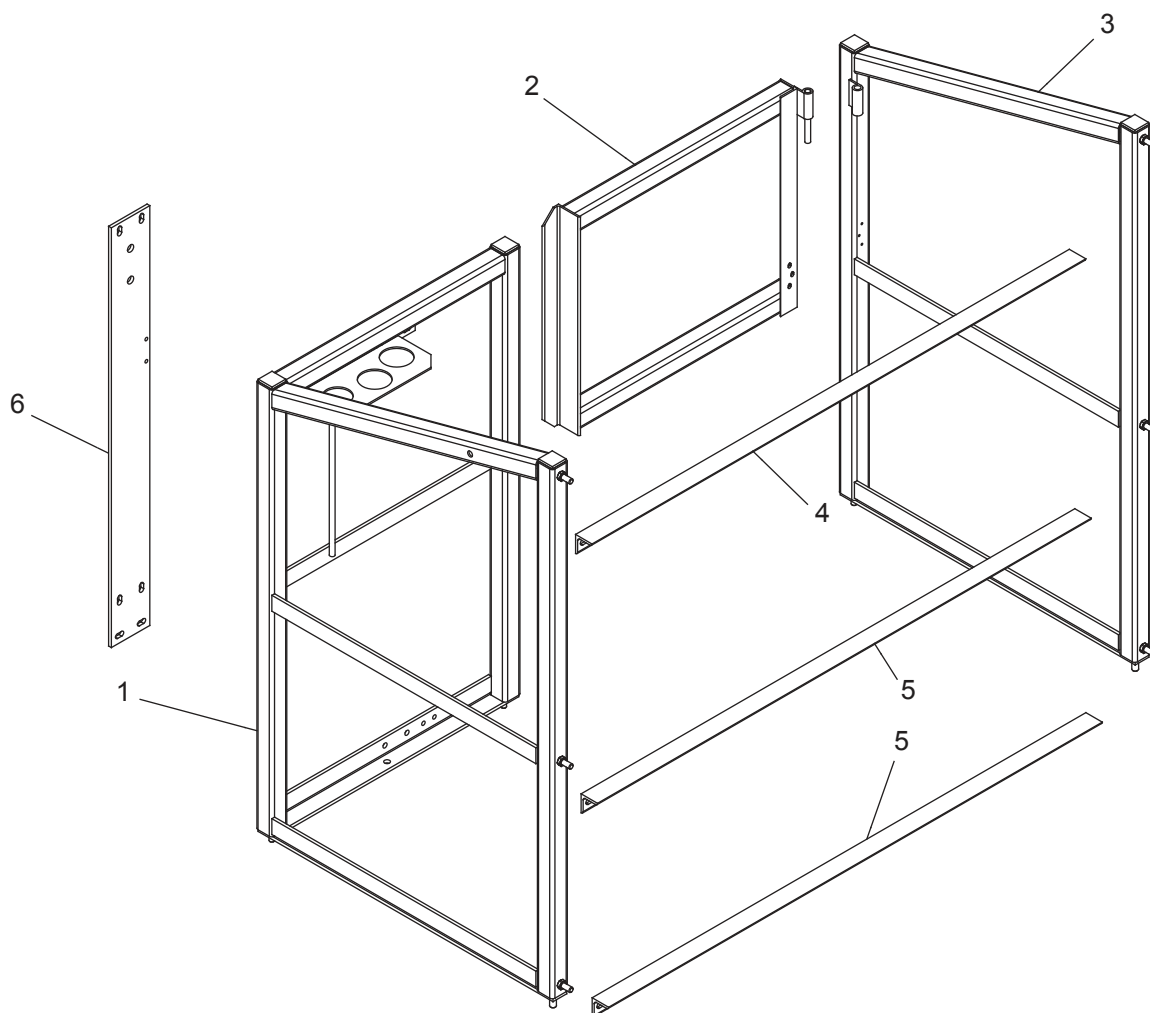

## GUARD RAILS

Ref. No.	Part Number	Description	No. Req'd
1	080726	Right Guard Rail	1
2	080539-01	Gate	1
	080521	Gate Spring Hinge	1
3	080537	Left Guard Rail	1
4	080536-18	Top Cross Rail	1
5	080536-13	Cross Rail	2
6	F75-0008	Boom Support Plate	1
	<b>NOT SHOWN</b>		
	F75-0014	Ladder	1


**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

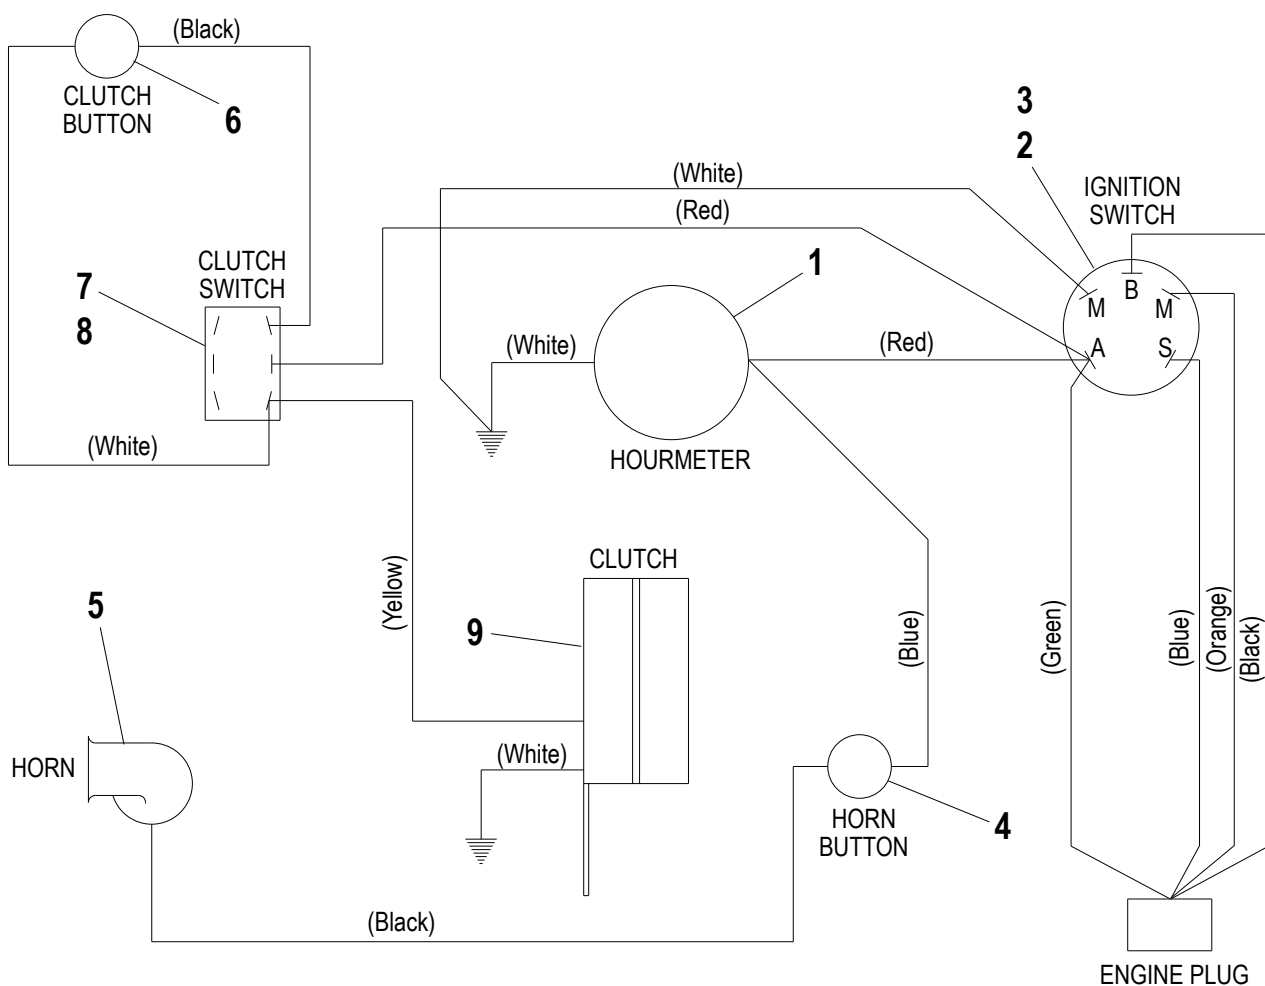

## CONTROL PANEL WIRING

Ref. No.	Part Number	Description	No. Req'd
1	007274	Hour Meter	1
2	080654	Ignition Switch	1
3	080654-K	Ignition Key	1
4	020886	Horn Button	1
5	006499	Horn	1
6	020886	Clutch Button	1
7	080525	Clutch Toggle Switch	1
8	080526	Clutch Toggle Switch Dust Boot	1
9	035084	Electric Clutch	1
	080602-01	Panel Wiring Harness	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

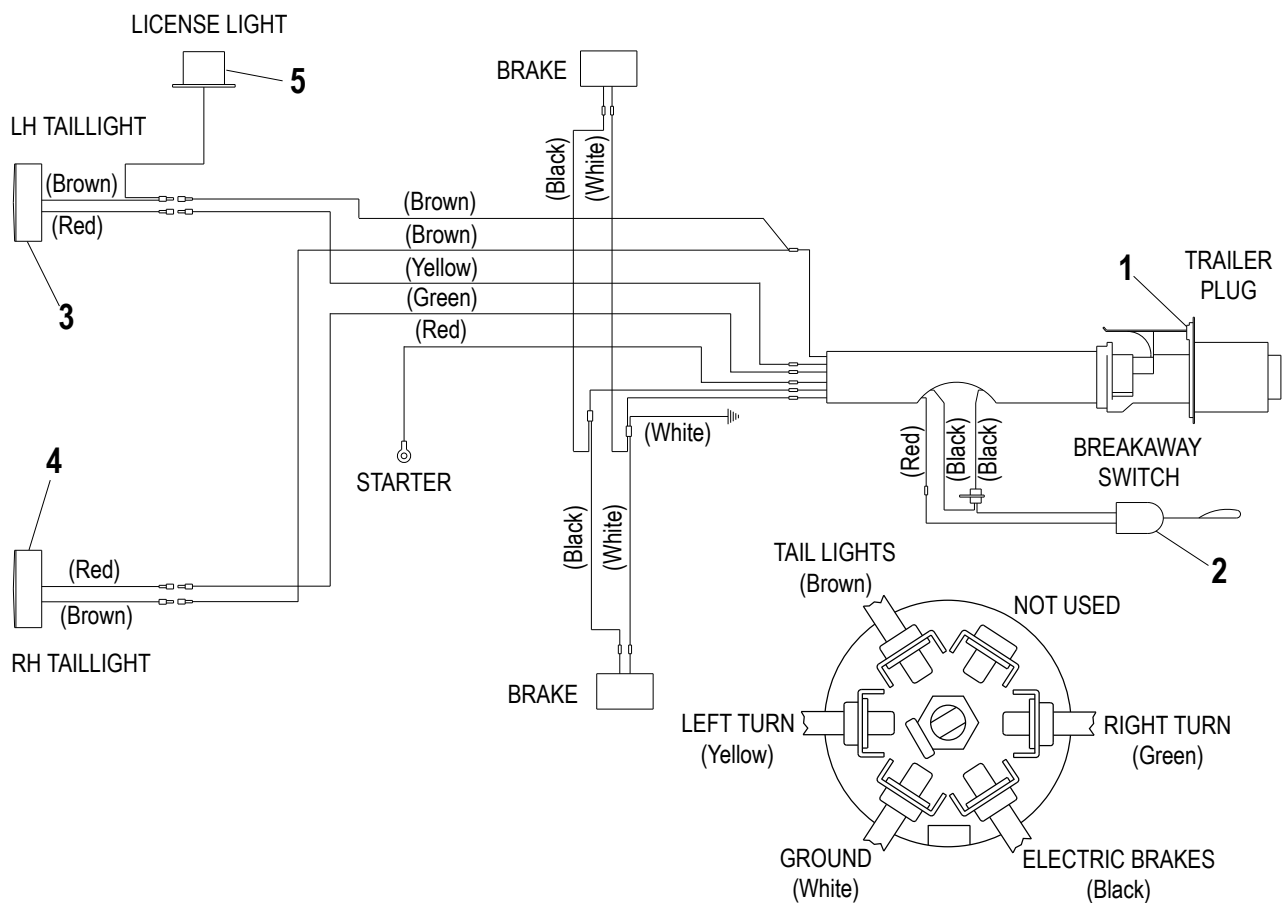

## TRAILER WIRING

Ref. No.	Part Number	Description	No. Req'd
1	075592	7-Blade Trailer Plug	1
2	023424	Breakaway Switch	1
	190029	Chain	6'
	005016	"S" Hook	2
	005017	Snap Hook	1
3	005137	Taillight - Left Hand Side	1
4	005138	Taillight - Right Hand Side	1
5	005436	License Light	1
	004720	License Plate Bracket	1
	080609	Trailer Wiring Harness	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## TOOL KIT


Part Number	Description	No. Req'd
000698	Automatic Pressure Lubricator Grease (1 pound Tub)	1
005220	Impeller Wrench	1
080273	Long Distance Nozzle Assembly	1
080131	Long Distance Nozzle	1
080260	Male Nyglass Adapter	1
160749	Reducer Bushing	1
080394	Wide Ribbon Nozzle Assembly	1
006604	Wide Ribbon Nozzle	1
080260	Male Nyglass Adapter	1
160750	Reducer Bushing	1
080395	Narrow Ribbon Nozzle Assembly	1
006605	Narrow Ribbon Nozzle	1
080260	Male Nyglass Adapter	1
160750	Reducer Bushing	1
006515	Coupler Gasket	1
012681A	Touch-Up Paint (FINN Beige - 4.5 Oz. Aerosol)	1
012681T	Touch-Up Paint (FINN Beige - 0.5 Oz. Wet)	1
080535	Remote Valve Assembly	1
012083	Full Port Ball Valve	1
080260	Male Nyglass Adapter	1
080261	Female Nyglass Coupler	1
160307	Close Nipple	1
160520	Nipple x 4 1/2" Lg.	1
	Engine Parts Manual	1
LBT60-SR	T60 II HydroSeeder® Parts and Operator's Manual	1

## SEAL REPAIR KITS

Part Number	Description	No. Req'd
023120	Seal Kit for Hydraulic Valve #80743	
080615	Seal Kit for Hydraulic Motor #080482	
080616	Seal Kit for Hydraulic Pump #080642	

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

**NOTE:**  
ITEM #4 (T60T DECAL KIT)  
INCLUDES ITEMS  
#5 THRU #35.

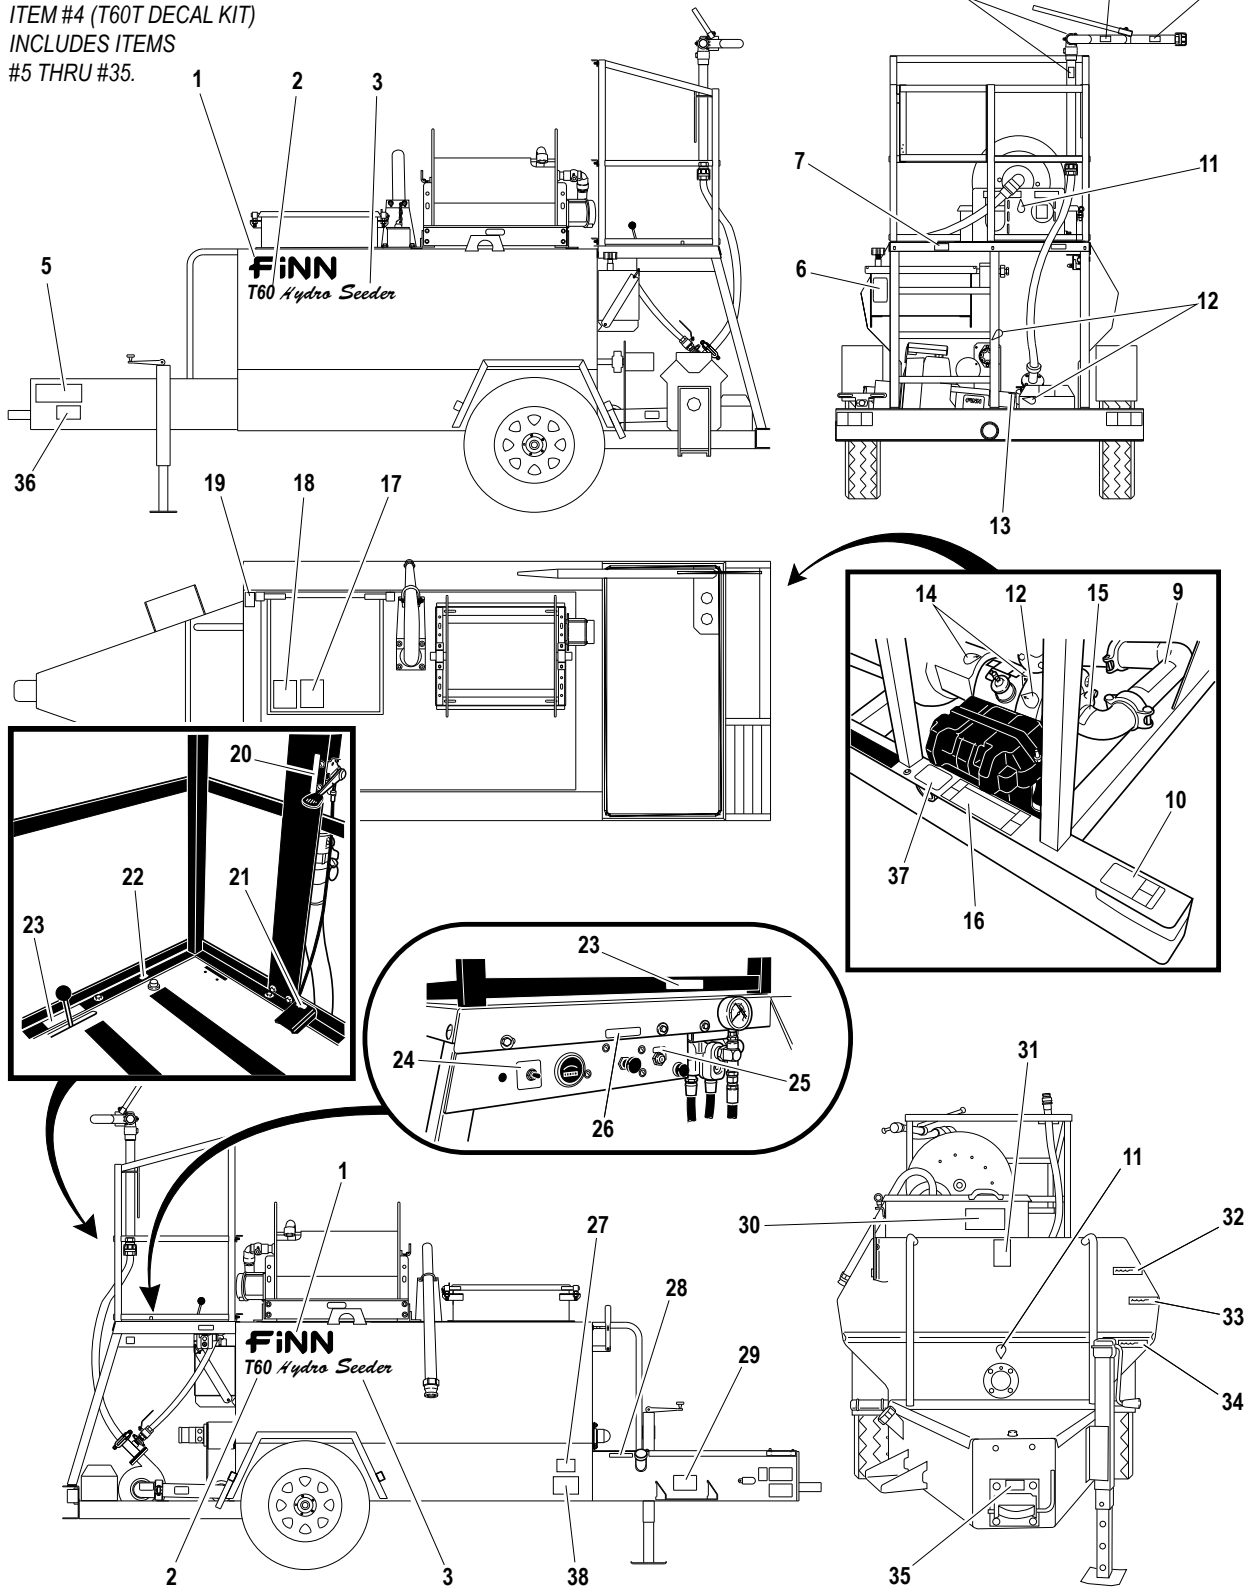

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**


## DECALS

Ref. No.	Part Number	Description	No. Req'd
1	023174	Decal "FINN"	2
2	012661-06	Decal "T60"	2
3	011595	Decal "HydroSeeder"	2
4	080699	Decal Kit "T60"	1
5	031461	Decal "WARNING! Runaway Vehicle Hazard . . ."	1
6	012687	Decal "CAUTION! Hydraulic System Instructions . . ."	1
7	012688	Decal "CAUTION!" Fall Hazard!"	1
8	007230-02	Decal "Service Daily"	2
9	005216	Decal "WARNING! Burn Hazard!"	2
10	011567	Decal "DANGER!" Electrocution Hazard!"	2
11	007230-01	Decal "Service Daily"	2
12	007230	Decal "Service Daily"	5
13	006869	Decal "CAUTION! Pressure Lubricator Must Be Kept. . ."	1
14	007231	Decal "Service Weekly"	3
15	012180	Decal "CAUTION! To Avoid Damage To . . ."	1
16	031463	Decal "WARNING! Sever Hazard!"	1
17	012686	Decal "DANGER! Confined Space Hazard!"	1
18	085078	Decal "Operating Instructions"	1
19	008286-01	Decal "Agitator . . . Mix/Spray . . ."	1
20	022199	Decal "Throttle"	1
21	080699-01	Decal "Clutch"	1
22	080699-02	Decal "Horn"	1
23	008286-02	Decal "Agitator Operation . . ."	2
24	080540	Decal "Clutch Operation"	1
25	080699-03	Decal "Keyswitch"	1
26	KL2511317	Decal "Stopping Instructions . . ."	1
27	011662	Decal "U. S. Patent Numbers . . ."	1
28	031331	Decal "Gasoline"	1
29	080107	Decal "WARNING! Fall Hazard!"	1
30	023519	Decal "WARNING! Wear Proper Eye Protection . . ."	1
31	020970	Decal "WARNING! Fall Hazard!"	1
32	005186	Decal "500 Gallons"	1
33	005185	Decal "400 Gallons"	1
34	005184	Decal "250 Gallons"	1
35	005022	Decal "Use 2-5/16" Ball Only"	1
36	080707	Decal "T60T GVWR"	1
37	012260	Plate "IMPORTANT! Maintain all Safety Decals . . ."	1
38	011690	FINN Name Plate	1


**\* NOTE:**

*All of the decals depicted & listed on Pages 52-53 are shown for location purposes only. To order replacements you must order T60 Decal Kit (080699). Replacement decals and plates that are not part of the decal kit and must be ordered separately.*

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

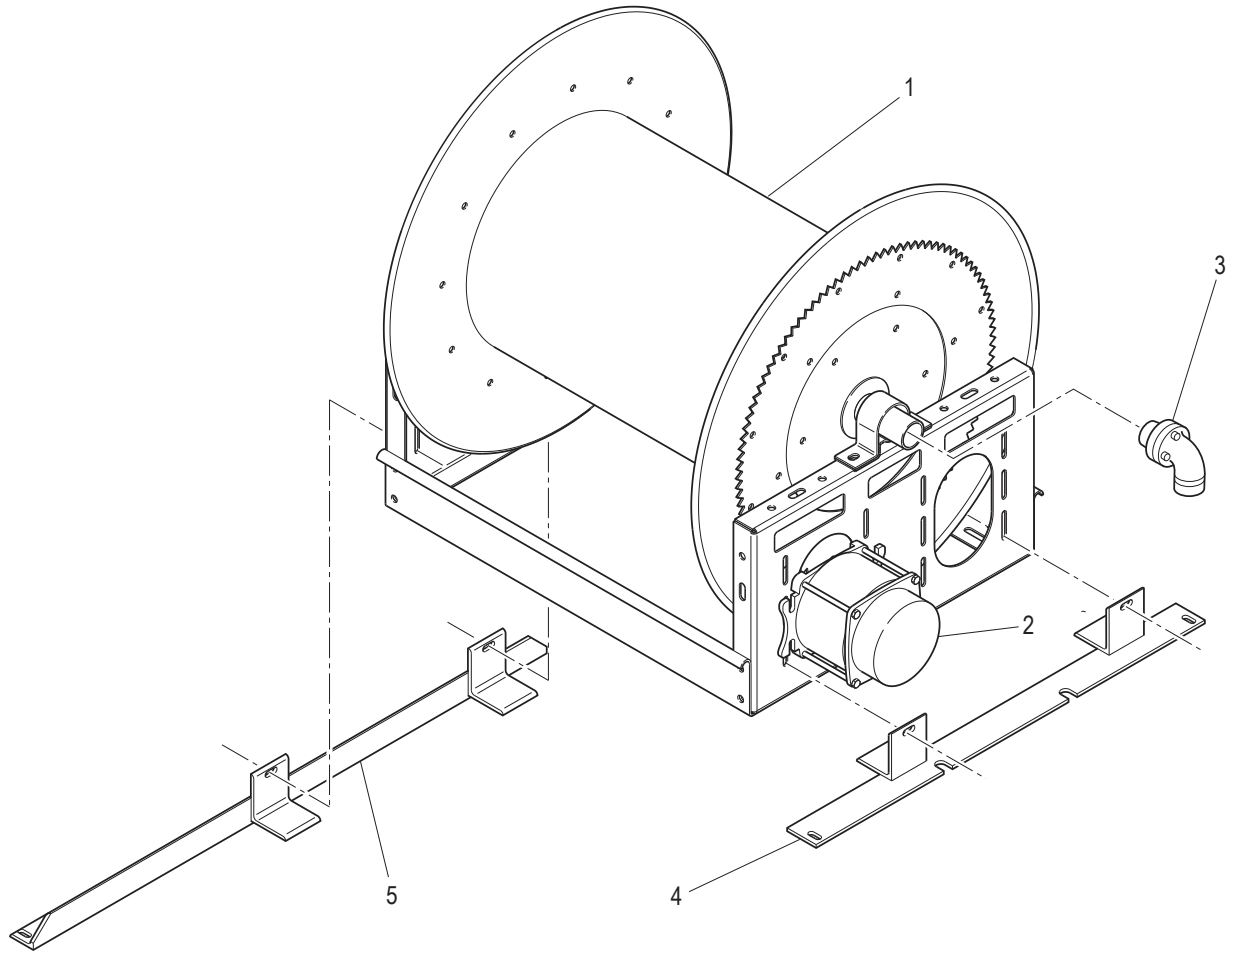

## HOSE REEL WIRING

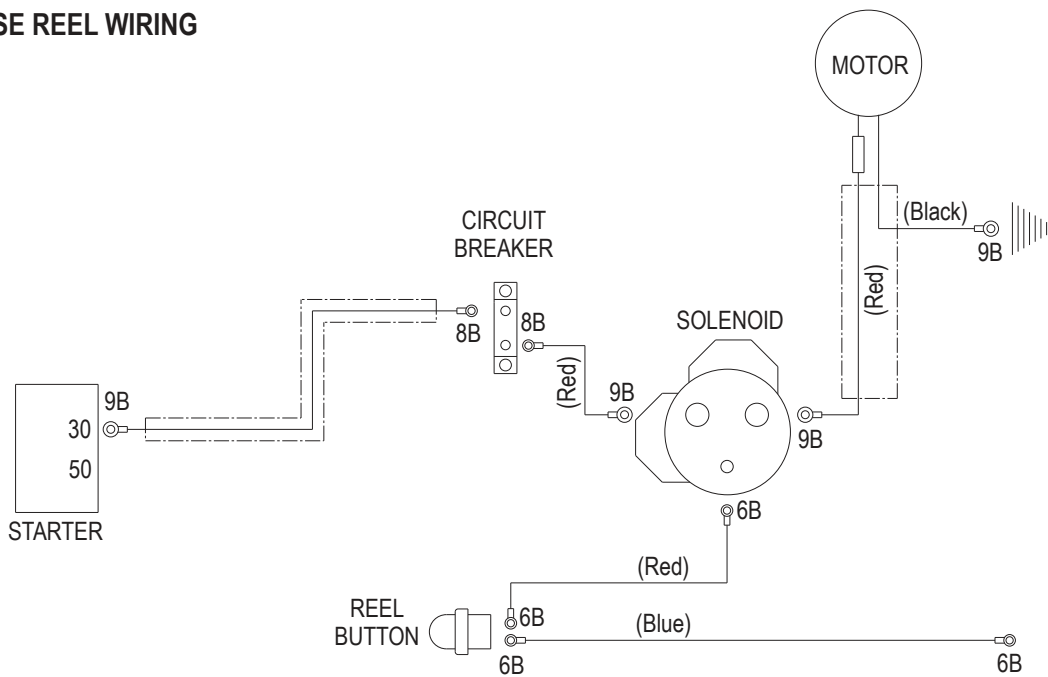

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**

## HOSE REEL

Ref. No.	Part Number	Description	No. Req'd
1	080316	Hose Reel With 1/2 HP (12V) Motor	1
2	008188	Electric Motor	1
3	008210	Inlet Elbow	1
4	F75-0011	Live Reel Flat Support	1
5	F75-0010	Live Reel Angle Support	1

### NOT SHOWN

005593	Remote Holder Fab	1
005210	Lead-In Hose	1
005592	Soft Latch	1
080378	Male Nyglass Coupler	1
080611	T60 II Hose Reel Wiring Harness	1
020886	Red Button	1
008450	Solenoid Kit, Hose Reel	1
011653	Circuit Breaker (50 Amp)	1

**WHEN ORDERING PARTS, BE SURE TO STATE  
SERIAL NUMBER OF MACHINE**