



9281 LeSaint Drive • Fairfield, Ohio 45014
Phone (513) 874-2818 • Fax (513) 874-2914
Sales: 800-543-7166



TITAN280/TITAN330/TITAN400 HydroSeeder®

Parts and Operator's Manual

Model SRA Serial No. _____

NOTES



ACTIVATE YOUR FINN EQUIPMENT WARRANTY

IMPORTANT INFORMATION ON ACTIVATING YOUR FINN EQUIPMENT WARRANTY!!!

IT IS IMPERATIVE THAT YOU, THE PURCHASER, COMPLETE THE FOLLOWING STEP IN ORDER TO
ACTIVATE THE FINN CORPORATION LIMITED WARRANTY.



**COMPLETE THE "EQUIPMENT REGISTRATION" FORM ON
THE NEXT PAGE AND MAIL TO THE FINN CORPORATION.**

**IF FINN CORPORATION DOES NOT HAVE YOUR COMPLETED REGISTRATION
FORM ON FILE, YOUR WARRANTY CLAIM WILL BE DENIED.**

**Once your Finn equipment has been registered, your Finn Limited Warranty will
be activated per the warranty statement on the other side of this notice.**

<<What should you do if you need repairs or parts under Warranty?>>



1. NOTIFY FINN CORPORATION OF THE FAILURE OF MATERIAL OR WORKMANSHIP



**1-800-543-7166 Extension (246)
WARRANTY@FINNCORP.COM**

2. AFTER YOU OR YOUR SERVICE DEALER NOTIFY FINN, FINN WILL:

- VERIFY THAT WE HAVE YOUR "REGISTRATION" ON FILE
 - VERIFY THAT THE WARRANTY PERIOD IS IN EFFECT
 - VERIFY THAT THE RELATED PART(S) ARE INCLUDED IN THE SCOPE OF WARRANTY (PENDING FINN'S INSPECTION OF DEFECTIVE PARTS)
 - SEND YOU REPLACEMENT PART(S) AND A "WARRANTY INFORMATION PACKET"
 - REQUEST YOU FOLLOW ALL INSTRUCTIONS AS NOTED IN THE "PACKET"
- **Fill out the Parts Tag. (Completely)**
 - **Attach the Parts Tag to the defective part(s).**
 - **Return the part(s) and the completed Warranty Claim Form to Finn**



Finn Corporation Commercial Limited Warranty

Effective February 20, 2006

OUR WARRANTY TO YOU:

Finn Corporation warrants to you, the original purchaser, for use (or rental to others for use) all new construction machinery, parts and attachments (except those referred to herein) that are manufactured by Finn to be free from defects in material and workmanship for a period of 12 months from date of purchase or 1200 hours of use, whichever comes first.

Replacement parts provided under the terms of this warranty are warranted for the remainder of the warranty period applicable to the product to which parts are installed, as if parts were original components of the product.

WHAT FINN WILL DO:

Upon notification of Finn concerning a failure of material or workmanship in accordance with the above stated Warranty, Finn Corporation will:

- Verify claim falls within the valid warranty time frame.
- Verify the product and equipment has been **registered** with Finn in order to be eligible for warranty coverage.
- Upon affirmation of warranty period and registration, Finn will send to you a new or repaired replacement part(s), whichever Finn elects and a "Warranty Claim Information packet" containing instructions for processing the warranty claim.
- Evaluate the part when defective part is returned. Note: Failure to return defective part within **two weeks** will result in an invoice being sent to the customer. In addition, if damage to a part is determined not to be covered under the warranty, the customer will be billed for the replacement part.
- Reconcile costs with customer for parts and shipping, as determined by our inspection of failed parts, and confirmation of warranty coverage, per the terms of this warranty.
- Correction of nonconformities, in the manner provided above, shall constitute fulfillment of all liabilities of Finn Corporation under this warranty.

WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE:

- As the purchaser covered under the above limited warranty you must **REGISTER** the equipment with Finn as such owner. Should registration not be on file with Finn Corporation, your **warranty will be void**. (See Operators manual for Registration Form)
- Notify Finn Corporation of any failure of material or workmanship as described under this warranty.
 - Web notification: Warranty@Finncorp.com
 - Phone 1-800-543-7166 extension 246
- Complete the required steps in the "Warranty Claim Information packet" (which Finn will send you upon notice of your notification) and return the defective part(s) as directed in the packet to Finn Corporation.

WHAT THE WARRANTY DOES NOT COVER:

1. Allied equipment or trade accessories not manufactured by it, such as but not limited to ignitions, starters, tires, batteries, hose, magnetos, carburetors, engines, labor, or like or unlike equipment or accessories including discharge hoses. (Such being subject to the warranty, if any, provided by their respective manufacture's).
2. Secondhand, used, altered, or rebuilt machines or parts.
3. Defects, malfunctions or failures resulting from accidents, abuse, misuse, improper servicing, or lack of performance of required operational guidelines and maintenance service, as outlined in the Finn Corporation's Operators Manual(s).
4. The warranty shall be null and void to the extent any defect or failure of the products warranted arises out of or is caused by accessories or component parts not manufactured or supplied by Finn Corporation, whether same are supplied by purchaser, dealers, or any other party.

THIS IS THE ONLY EXPRESS WARRANTY ON OUR PRODUCTS:

We neither assume nor authorize anyone to assume for us any other express warranty. The Distributor/Dealer has no authority to make any representation or promise on behalf of Finn Corporation or to modify the terms or limitations of this warranty in any way.

THIS WARRANTY THEREFORE SHALL BE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATIONS ON OUR RESPONSIBILITY WITH RESPECT TO PRODUCTS PURCHASED:

THE REMEDIES OF THE USER SET FORTH HEREIN ARE EXCLUSIVE, WITHOUT REGARD TO WHETHER ANY DEFECT WAS DISCOVERABLE OR LATENT AT THE TIME OF DELIVERY OF THE PRODUCT TO THE PURCHASER.

The essential purpose of this exclusive remedy shall be to provide the original purchaser with repair or replacement of parts that prove to be defective within the period and under the conditions previously set forth. This exclusive remedy shall not have failed of its essential purpose (as that term is used in the Uniform Commercial Code) provided Finn remains willing to repair or replace defective parts within a commercially reasonable time after it obtains actual knowledge of the existence of a particular defect.

IN NO EVENT SHALL FINN BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES, INCLUDING LOST PROFITS OR LOST COMMERCIAL OPPORTUNITIES, WITH RESPECT TO THE SALE OF THE ABOVE WARRANTED PRODUCT OR ANYTHING DONE IN CONNECTION THEREWITH, OR FOR PROPERTY DAMAGE SUSTAINED BY A PERSON CLAIMING TO BE A THIRD PARTY BENEFICIARY OF A SURVIVING WARRANTY UNDER THE LAW OF ANY JURISDICTION.

NOTICE:

FINN CORPORATION URGES THE USE OF ONLY FINN CORPORATION SUPPLIED PARTS AND ATTACHMENTS TO ASSURE PROPER PERFORMANCE AND SAFE OPERATION OF FINN CORPORATION EQUIPMENT. INSIST ON PARTS AND ATTACHMENTS MANUFACTURED OR SUPPLIED BY FINN CORPORATION WHEN YOU PURCHASE, REPAIR OR REPLACE YOUR FINN EQUIPMENT AND ATTACHMENTS. BECAUSE FINN CORPORATION CANNOT ASSURE THAT PARTS AND ATTACHMENTS NOT MANUFACTURED OR SUPPLIED BY FINN MEET FINN CORPORATION'S QUALITY STANDARDS, SPECIFICATIONS, OR OPERATING REQUIREMENTS, OUR WARRANTY IS NOT EFFECTIVE TO THE EXTENT ANY FAILURE OF OR DEFECT IN A FINN CORPORATION PRODUCT ARISES FROM OR IS CAUSED BY PARTS, ATTACHMENTS OR COMPONENTS NOT ORIGINATING WITH FINN CORPORATION. USE OF FINN CORPORATION EQUIPMENT WITH PARTS AND ATTACHMENTS NOT MANUFACTURED OR SUPPLIED BY FINN COULD RESULT IN PERSONAL INJURY.

Effective February 20, 2006

INDEX

SAFETY FIRST	1
SAFETY SUMMARY SECTION	2-5
OPERATION & MAINTENANCE	6-40
Definition of Hydroseeding	6
The Finn HydroSeeder® & How It Works	6
Mounting The HydroSeeder®	6
Dimensions, Capacities & Truck Requirements	6-8
Truck Mounting Calculations	7
General Mounting Guidelines	7
Attachments	8
Pre Start Check	9
Equipment Check	9-10
Two Valve Operation	10-11
1. Discharge Through Boom	11
2. Extension Hose Through Boom	11
3. Extension Hose or Hose Reel Through Remote Port	11
Starting Procedure	12
PowerView	12-14
Faceplate	13
PowerView Operation	13-14
PowerView Menus (First Time Start-Up)	13
Stored Fault Codes	14
Area Coverage - Material Capacity	14-15
Tank Capacity Chart	16-17
NOTES	18
Loading (For Wood Fiber Mulch)	19
Prior to Application	20
Discharge Nozzle Selection	20
Application of Slurry	21
I. General Application Techniques	21
II. Discharge Through the Boom	21
III. Procedures When Using Hoses	21
A. Pump Take-Off System or Hose Reel w/Remote Valve	22
B. Extension Hose System w/o Remote Valve	22
C. Hose Work w/Radio Remote	23
Reloading Procedure	23
Switching Between Local and Remote	23
Reloading Procedure	23
Liming w/The HydroSeeder®	23-24
Troubleshooting Your HydroSeeder®	24-28

INDEX CONTINUED

CLEANING AND MAINTENANCE

Cleaning and Maintenance	28-31
After First 4-8 Hours of Operation.....	28
Daily.....	28
Weekly or Every 40 Hours of Operation	29
Seasonal and Winter Storage Maintenance	29
Hydraulic System	29
Lubrication Chart	30-31
Notes	32

PARTS SECTION

33-75

Notes	34
Pictorial Reference.....	35
Structure & Railing.....	36-37
Hatch View.....	38-39
Discharge Boom Assembly	40-41
Engine & Radiator	42-43
Radiator Parts	44-45
Clump, Piping & Discharge Assembly	46-47
Pump Assembly	48-49
2ND Discharge Boom Assembly-Optional	50-51
Controls	52-53
Clutch.....	54-55
Control Box Wiring (Internal)	56-57
Control Box Wiring (External)	58
Notes	59
Relay Box Wiring	60-61
Ground Level Controls.....	62
Engine Wiring Harness	63
Agitator & Seal Assembly.....	64-65
Hydraulic System	66-67
Hydraulic Agitator Drive	68-69
Hose Reel Assembly	70-71
Decals	72-73
Tool Kit.....	74
Spare Parts List	75

SAFETY FIRST

With any piece of equipment, new or used, the most important part of its operation is **SAFETY!**

Finn Corporation encourages you and your employees to familiarize yourselves with your new equipment and to stress safe operation.

The first five pages of this manual are a summary of all the main safety aspects associated with this unit. Be sure to read completely before operation of machine.



This symbol is used throughout the operation and maintenance sections of this manual to call attention to safety procedures.

- Pay Attention -



DANGER: Immediate hazards which **WILL** result in severe personal injury or death.



WARNING: Hazards or unsafe practices which **COULD** result in severe personal injury or death.



CAUTION: Hazards or unsafe practices which **COULD** result in minor personal injury or product or property damage.

IMPORTANT: Indicates that equipment or property damage could result if instructions are not followed.

NOTE: Gives helpful information.

Finn Corporation

CALIFORNIA Proposition 65 Warning

The engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

CALIFORNIA Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

HYDROSEEDER® SAFETY SUMMARY SECTION


It is important that all operators of this machine are familiar with all of the safety aspects covered in this section and have read the entire Operator's Manual before operating the machine. Always keep a copy of this manual with the machine. It is the responsibility of the operator of the machine to fully understand this safety section. Remember that YOU are the key to safety. Good safety practices protect not only you but also the people working with and around you. Keep in mind that this safety section is written for this type of machine only. Practice all other usual and customary safe working precautions; and above all, remember that safety is up to you.

The FINN HydroSeeder® is designed to mix and apply water, seed, fertilizer, agricultural lime and hydraulic mulch to the prepared seedbed. The resultant slurry from mixing one or more of the above materials may react causing harmful or deadly gasses within the tank. Heat, evaporation or extended emptying period can/will accelerate the formation of these gasses. Please contact your supplier(s) of these slurry components regarding

their potential reactivity.

I. PRE-START EQUIPMENT CHECK (equipment check is to be made with the engine off):

1. If you have a chassis mounted

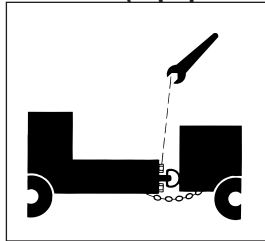


unit, check devices securing HydroSeeder® to the truck or trailer frame.


2. If HydroSeeder® is a trailer unit, check hitch and hitch bolts, lights, brakes and all safety components.
3. Make sure loading hatch bag cutter is in place and secure.
4. Check that all guard railing is in place and secure.
5. Verify that all guards are in place.
6. With the ignition switch on, verify that the signal horn is operating correctly.
7. By carefully looking down through the loading hatch, inspect the slurry tank for foreign objects. Never enter the tank without following the procedures described in #3 of the Maintenance section in this safety summary.
8. Remove unnecessary objects (or material) from the tank top.
9. Make sure no one is working on or inside the machine. Signal "All Clear" before starting the engine.
10. Inspect all hydraulic hoses for cracks, bulges or damage. If hoses are bad replace immediately.
11. Inspect all discharge hoses for cracks, bulges or damage. If hoses are bad replace immediately.

II. MACHINE OPERATION:

1. Always wear safety goggles when operating the machine. Other safety attire such as safety shoes, ear protection, gloves, hard hats, dust masks, etc. should be worn as required by warning decals on machine, operator's manuals or job site requirements. Remove rings, watches, etc. Avoid loose fitting clothing that may get caught in rotating machinery.

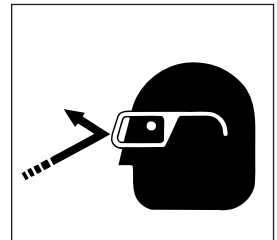


2. Do not operate the machine without all guards in place.

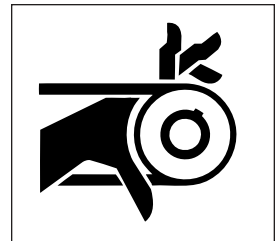

3. Do not load unit while in transit. Load only when parked and unit is as level as possible. Take care not to drop pens, lighters, etc. or pieces of paper or plastic bags into the tank, as these objects might plug the slurry system. Should any object be dropped into the tank, do NOT reach into the tank to retrieve the foreign object. See #3 under Maintenance on Page 4 before allowing any personnel to enter the tank.
4. Make sure area to be sprayed is clear of all persons, animals, etc.
5. The driver of the carrying or towing vehicle is responsible for the safety of the operator(s) of the machine. Make sure the driver is aware and avoids all possible hazards to the operator(s) of the machine, such as low tree limbs, low power lines, etc. Vehicles on which equipment is mounted or towed must be stopped and started gradually. Avoid abrupt starts or stops. Never

operate on a slope or a hill that may endanger the driver and/or the operator(s). All personnel should review and be familiar with stop/start signals between the driver and operator(s) before going into operation. Only the operator should be located on the platform during operation.

6. Operator(s) of equipment should never ride on the machine at speeds of greater

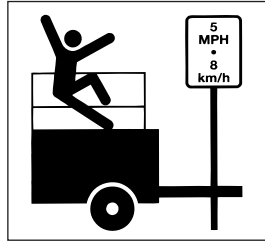

than 5 MPH (8 kmh).

7. Never operate machine in an enclosed area without venting the engine exhaust of both the equipment and vehicle on which the equipment is mounted. Deadly carbon



monoxide fumes can accumulate.


8. Never operate this or any other machinery when fatigued, tired, under the influence of alcohol, illegal drugs or medication. You must be in good physical condition and mentally alert to operate this machine.
9. Never modify the machine. Never remove any part of the machine (except for service and then reinstall before operating).
10. Use proper means (steps, ladder) for mounting and dismounting of the machine. Never mount or dismount a




moving machine.

III. SLURRY APPLICATION:


1. Do not aim discharge spray toward power-lines, transformers, or other high voltage electrical conductors. Also do not aim discharge spray towards people, animals or anything other than the intended application area.

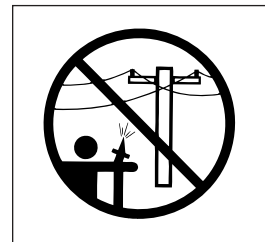

2. Never engage the clutch when both the recirculation and discharge valves are closed. Operation with both valves closed will result in extreme heat generation that could cause severe bodily injury and damage to the equipment.

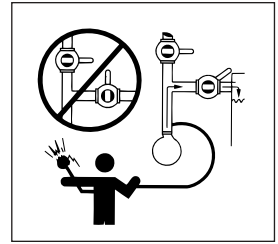


3. Recirculation valve must be open and material flowing back into the tank when using the remote valve. A closed or plugged recirculation line will cause extreme heat in the pump or discharge lines which will result in severe bodily injury and damage to the equipment.
4. During application through a hose, high pressure can be exerted at the end of the hose. Hose holding personnel must establish good footing. The operator should apply gradual pressure to the hose only after hose holding personnel are firmly positioned and have firm control of the hose. Additional personnel to direct hose may be necessary if working on slopes. The proper technique for hose holding personnel is to firmly grasp the hose over the shoulder or under both arms. Never hold the hose so it goes between the legs. If the hose holding personnel finds that it is uncomfortable for him to handle the hose by himself additional hose holders should be positioned at the end of the hose.
5. Plan application so that the furthest area is covered first; working back toward the HydroSeeder®, so that the individuals are not walking back over slippery ground.
6. Before opening any valves or pipe clamps shut machine down and check if material in the pipe is hot. If hot, do NOT open valve or pipe clamps as the hot material may cause severe personal injury. Allow to cool and open with caution.
7. Except when loading materials, keep loading hatch lid closed to protect operator and prevent splashing of wet material onto the tank top.
8. Wash off spillage of slippery mulch or slurry additive from the tank top and platform before operating equipment.

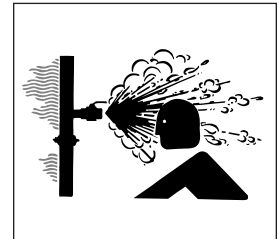


MAINTENANCE:

1. Before servicing the machine, turn off engine and allow all moving parts to stop. To prevent accidental starting disconnect battery cables. Tag the engine operating area to show that the machine is being serviced. Use lockout/tagout procedure (OSHA 29 CFR 1910.147).

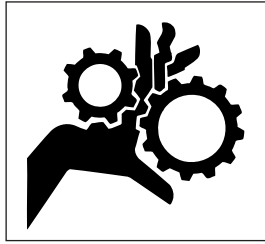


2. Certain hydroseeding amendments, when combined with or without the addition of water or heat or the element of time, may react causing harmful or deadly gasses! Consult your material suppliers regarding reactivity information. The slurry tank must be flushed and drained after each day of operation.

3. Your slurry tank may be considered a confined space by OSHA under 29 CFR 1910.146. Before entering any confined space, your company must develop a procedure for safe entry. Make sure your company's plan meets all the requirements of 29 CFR 1910.146. including the following:

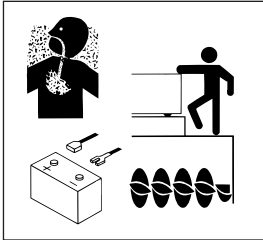

- a) Drain, flush and ventilate tank interior.
- b) Turn off engine and disconnect battery cables and perform lockout/tagout procedures. (29 CFR 1910.147)
- c) Provide continuous ventilation or proper breathing apparatus.
- d) If tank must be entered, personnel entering the tank must be tethered to a lifeline.
- e) Provide stand-by individual outside of tank able to communicate with person inside and able to haul him out with lifeline if necessary.

4. Before loosening any clamps or opening any valves, determine if material in the line is hot by feeling the pipe. Do NOT allow material to come in contact with personnel. Severe bodily injury could result.

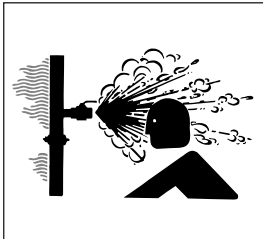




5. On trailer units, perform general maintenance such as checking the safety chains, hitch and hitch bolts, tires, brakes. Repair or replace if worn or broken. Never operate machine on improperly inflated or damaged tires. Always use a safety cage or cable restraints when re-inflating a repaired tire.

6. Radiator maintenance: Liquid cooling systems build up pressure as the engine gets hot. Before removing radiator cap, stop the engine and let the system cool. Remove radiator cap only after the coolant is cool.
7. Battery maintenance: Lead-acid batteries contain sulfuric acid, which damage eyes of skin on contact. Always wear a face shield to avoid acid in the eyes. If acid contacts the eyes, flush immediately with clean water and get medical attention. Wear rubber gloves and protective clothing to keep acid off skin. Lead-acid batteries produce flammable and explosive gasses. Keep arcs, sparks, flames and lighted tobacco away.
8. Filling of fuel: Never fill the tank with the engine running, while smoking or when near an open flame. Never smoke while handling fuel or working on the fuel system. The fumes in an empty container are explosive. Never cut or weld on fuel lines, tanks or containers. Move at least 10 feet (3 meters) away from fueling point before starting engine. Wipe off any spilled fuel and let dry before starting engine.



NOTE: Be careful not to allow fuel, lubricant, hydraulic fluid or cooling fluids to penetrate into the ground or be discharged into the water system. Collect all fluids and dispose of them properly.

9. It is recommended that only authorized genuine FINN replacement parts be used on the machine.
10. Do not use either cold start fluid if engine is equipped with glow plug type preheater or other intake manifold type preheater. It could cause an explosion or fire and severe injury or death.
11. Diesel fuel or hydraulic fluid under pressure can penetrate the skin or eyes and cause injury, blindness or death. Pressure may build up in the hydraulic system; use caution when removing the cap.
12. Make certain that all decals on the machine are maintained in good legible condition. Replacement decals are available through Finn Corporation by specifying part number shown in the lower right hand corner of the decal. See page 5 for the current safety decals mounted on the unit. See pages 74-75 in the Parts Manual for the location and quantity of all decals on this unit.

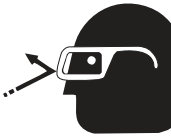


CURRENT SET OF SAFETY DECALS

 DANGER	
	CONFINED SPACE HAZARD! (Reference: OSHA 29 CFR 1910.146) Before entering tank: 1. Drain, flush and ventilate tank interior. 2. Turn off engine and disconnect battery cables. 3. Continuously ventilate area or wear appropriate breathing apparatus. 4. Provide standby individual outside tank able to communicate with person inside and able to remove him with a lifeline if necessary.
	FLYING MATERIAL HAZARD! Wear eye protection around operating equipment. Failure to comply will result in death or serious injury.



P/N 12686-01

 DANGER	
	ELECTROCUTION HAZARD! DO NOT aim stream toward electrical lines. Avoid spraying toward bystanders. Failure to comply will result in death or serious injury.





P/N 11567

 WARNING	
	SEVER HAZARD! Keep hands clear! Rotating fan and gears. DO NOT operate without guards or doors in place. Shut off engine, disconnect battery and allow all moving parts to stop before servicing.
	FLYING DEBRIS! Wear eye protection around equipment. Failure to comply could result in death or serious injury.



P/N 31463

 WARNING	
	
Do not operate without guards in place. Failure to comply could result in death or serious injury.	



P/N 12179

 WARNING	
	BURN HAZARD! Cooling system is under pressure. Allow system to cool before handling. Remove radiator cap slowly. Wear appropriate safety gear. Failure to comply could result in death or serious injury.
	RADIATOR HANDLING INSTRUCTIONS 1. Use a 50/50 solution of water and antifreeze. Using 100% antifreeze will result in engine damage. 2. Check and replenish water prior to use. More water will be consumed when operating in hot conditions. 3. If overflow pipe begins emitting vapor, check and replenish water. 4. Remove and clean screen when dirty. 5. Check and clean fins periodically. Clogged fins will increase water consumption. 6. Protect radiator from fertilizer corrosion by washing radiator core with water.
	


P/N 31462

 WARNING	
	BURN HAZARD! Contents could be under pressure. DO NOT come in contact with material. Ensure material in line is not hot before loosening clamps or opening valves. DO NOT operate pump with both recirculation and discharge valves closed. DO NOT use remote valve unless recirculation valve is open. Excessive heat or bodily injury could occur. Failure to comply could result in death or serious injury.


P/N 5216

 WARNING	
	FALL HAZARD! All gates must be closed during operation. Failure to comply could result in death or serious injury.

P/N 12621

 WARNING	
	BURN HAZARD! Hot exhaust! Stay back! Failure to comply could result in death or serious injury.

012278

 CAUTION	
FALL HAZARD! ALWAYS face ladder when mounting and dismounting. Failure to comply may result in moderate or minor injury.	

P/N 12688

OPERATION AND MAINTENANCE MANUAL FOR FINN Titan280/Titan330/Titan400 HYDROSEEDERS®

This manual gives you step-by-step instructions for the operation and maintenance of the Finn HydroSeeder®. For best results and to insure longer life of the equipment, please follow these instructions carefully. For your safety read the entire manual before operating this unit.

DEFINITION OF HYDROSEEDING:

Hydroseeding is the process whereby seed, fertilizer and/or lime and wood fiber mulch (using water as a carrying medium) are applied on the soil to establish vegetation.

THE FINN HYDROSEEDER® AND HOW IT WORKS:

The Finn HydroSeeder® will apply seed, fertilizer and/or lime, wood fiber mulch, or stabilizing materials in any prescribed or desired combination. The materials placed in the HydroSeeder® slurry-tank are mixed with water and kept in suspension by a dual agitation process, recirculation of slurry and mechanical agitation, thus forming a slurry that is pumped to the discharge assembly and directed onto the seed bed by the operator. This equipment is designed to accomplish hydroseeding in one easy operation with maximum efficiency.

MOUNTING THE HYDROSEEDER®:

For speed and mobility of operation, the HydroSeeder® should be mounted on a truck or trailer, however, it is important to select a carrier with sufficient capacity to handle the added weight.



DANGER:

Pick-up hooks on HydroSeeders® are for lifting empty machines ONLY. Use appropriate spreader bar for the tank width. Ensure all capacities of lifting devices are rated for 15,000 lbs (6,800.45 kg) or greater.

DIMENSIONS, CAPACITIES, & TRUCK REQUIREMENTS:

*CF Back of cab to end of frame

C Distance from HydroSeeder® front to center of gravity

*CA Back of cab to center of rear axle or trunnion on tandem

*F Front axle weight – Empty

*FL Front axle weight – Loaded

G Distance from center of bogie to HydroSeeder® center of gravity

HW HydroSeeder® weight

*RE Rear axle weight – Empty

*RL Rear axle weight – Loaded

*WB Truck wheel base


	TITAN280		TITAN330		TITAN400	
	English	(Metric)	English	(Metric)	English	(Metric)
Truck GVW **	49,600 lbs.	(22,320 kg.)	61,000 lbs.	(27,669 kg.)	64,000 lbs.	(29,029 kg.)
CA **	120 in.	(304+ cm.)	157 in.	(398+ cm.)	170 in.	(431+ cm.)
C (loaded)	82 in.	(208 cm.)	100 in.	(254 cm.)	112 in.	(284 cm.)
C (empty)	122 in.	(309+ cm.)	134 in.	(340+ cm.)	150 in.	(381+ cm.)
OAL	209 in.	(530+ cm.)	250 in.	(635+ cm.)	287 in.	(730+ cm.)
HW (empty)	11,690 lbs.	(5,300 kg.)	12,340 lbs.	(5,600 kg.)	13,180 lbs.	(5,978 kg.)
HW (water only)	34,790 lbs.	(15,780 kg.)	40,480 lbs.	(18,361 kg.)	42,480 lbs.	(19,268 kg.)
HW (full load) ***	38,350 lbs.	(17,390 kg.)	44,750 lbs.	(20,300 kg.)	46,750 lbs.	(21,200 kg.)

* These dimensions needed from the truck supplier as well as front axle capacity & rear axle capacity.

** Truck GVW depends on the truck weight. CA dimensions are approximate only, and depend on the front and rear axle capacities, as well as the front and rear empty axle weights.

***Weight of HydroSeeder®, water, and full charge of granular solids only. No auxiliary equipment or loads included.

TRUCK MOUNTING CALCULATIONS:

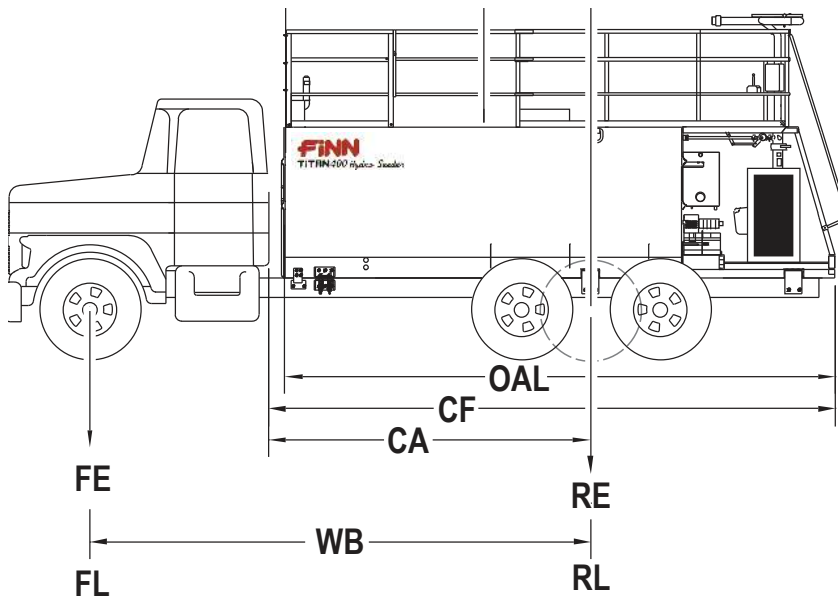

$$\frac{(WB \times FL) - (WB \times FE)}{HW} = G$$

$$\frac{WB \times (RE + HW - RL)}{HW} = G$$

G + C must be equal to or less than CA

$$\frac{(WB \times FE) + (G \times HW)}{WB} = FL$$

$$\frac{(WB \times RE) + HW \times (WB - G)}{WB} = RL$$

Figure 1 - Truck Mounting Calculations & Dimensions

GENERAL MOUNTING GUIDELINES:

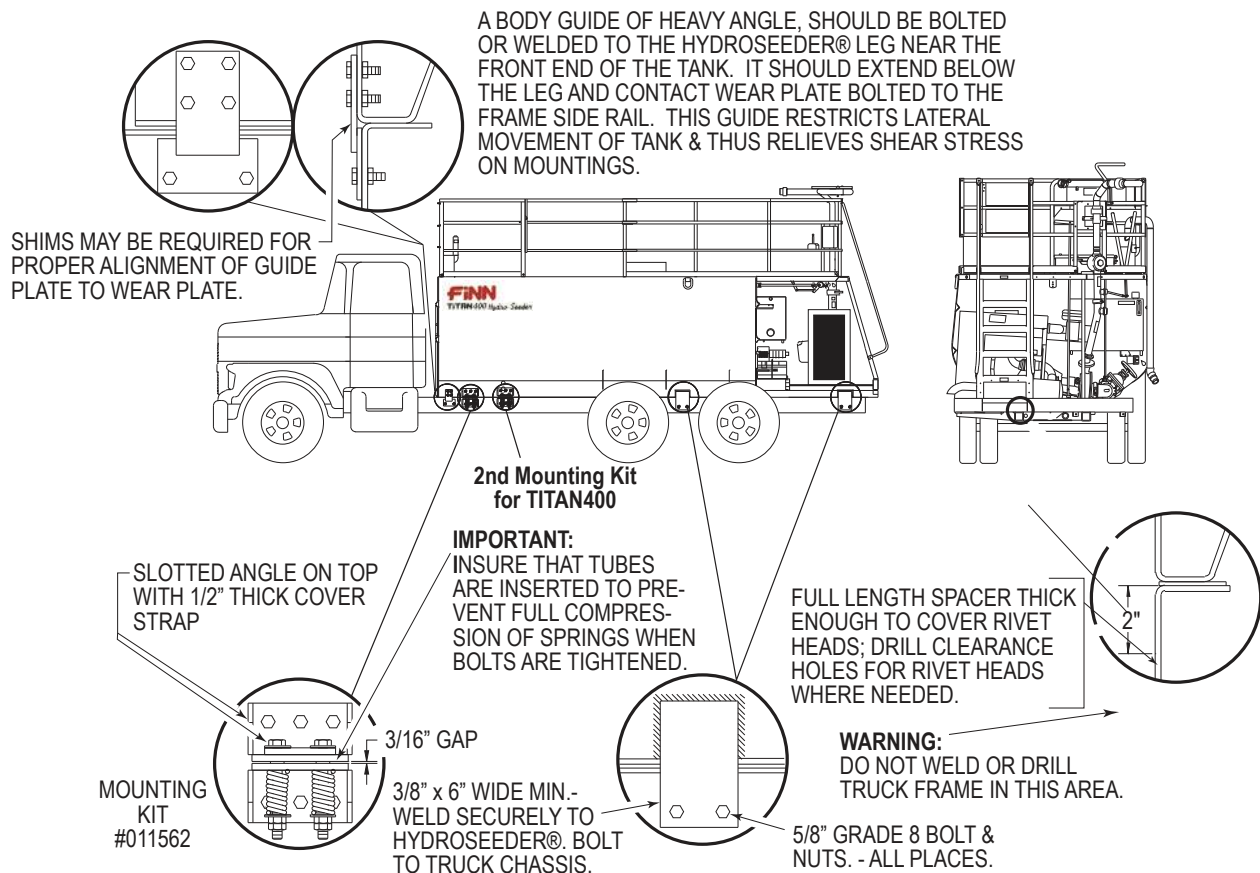


Figure 2 - General Truck Mounting Guidelines

Once the proper carrier has been selected, the HydroSeeder® must be securely mounted to it.



CAUTION: Your FINN HydroSeeder® should be mounted by a qualified truck body installer.

IMPORTANT: Mounting the HydroSeeder® to the truck must allow for tire clearance as well as frame twist. Place hard wood spacers along the length of truck rails or use Finn Spring Mounting Kit (#011562) or equivalent, also 2 spring kits are required for the TITAN400.

ATTACHMENTS:

1. **Hose Reel.** The live hose reel will mount on the HydroSeeder® or on the truck frame. The 200 foot capacity hydraulic rewind reel will wind up and store empty hose. A pivoting feature provides three locking positions, enabling curb-side, 45 degree, and rear hose discharge. The entire hose reel is protected by a UV-protective canopy.
2. **Hardened Pump Parts.** Pump casing, impeller, and suction cover are treated with special material designed to resist wear.
3. **Rear Spray Bar.** The spray bar option is not designed for slurry application but for the dispersion of liquids for dust control, watering, feeding and washing applications. Rear spray bar is arranged so that operation is remotely controlled from the truck cab.
4. **Radio Remote Control.** The Kar-Tech Remote is a Radio Frequency (RF) control system, designed to provide the machine operator with the ability to remotely operate equipment. This system is designed with Frequency Hopping Spread Spectrum (FHSS) and digital Phase Lock Loop (PLL) technology for the optimum performance in radio remote products. The remote control system consists of two major modules: The MAGNUM transmitter (see Fig. 1) and the Radio Receiver. (see Fig.2) The transmitter is designed with two rotary speed controls and FWD/REV toggle switches for LOWER and 3rd AGITATORS. In addition, toggle switches are provided for PUMP ENGAGE/DISENGAGE (ON/OFF) and THROTTLE +/- (UP/DOWN). A pushbutton is included for POWER and REW HOSE. With control of the engine throttle, the operator can precisely adjust the pump flow to whatever output the situation requires (i.e., for close-up work around buildings). The ability to remotely shut off the pump allows the operator to close the recirculation valve for increased performance during hose work. Carrying the remote valve at the end of the hose becomes unnecessary.



FIGURE 1



FIGURE 2

NOTE:

For remote pump on/off control, the clutch cylinder must be connected to an air supply.

5. Air Flush System. The air flush option uses compressed air to purge any remaining mulch slurry from the HydroSeeder® hose, the discharge boom and the recirculation piping. To maximize performance, all discharge plumbing should be purged after every load. The air flush system provides a quick and easy means of purging without the need to acquire a flush tank and an additional water supply.
6. The second boom option enables spraying from both sides of the tank for larger spray areas without moving the vehicle. The dual discharge boom system can be run simultaneously.

PRE-START CHECK:

Safety check to insure operator safety:

1. Check condition of all mounting hardware securing HydroSeeder® to truck frame.
2. Make sure bag cutter is in place and secure.
3. Inspect that all railings are in place and secure.
4. Insure that all guards are in place.
5. With the ignition switch on, verify that the amber safety light under the operator's platform is flashing.

EQUIPMENT CHECK:**CAUTION:**

Equipment check is made with the engine off and all rotating parts stopped.

1. See that tool kit contains all the prescribed items (see tool kit on page 70).
2. Inspect the "slurry-tank" for foreign objects. See #2 and #3 in Maintenance Section of the Safety Summary Section on page 4.
3. Check fuel level.
4. Check the hydraulic oil level (see hydraulic system for oil specifications).
5. Check engine oil level...for oil type refer to the engine manual.
6. Check fluid level in radiator.
7. Inspect air cleaner for dust and dirt, clean if necessary.
8. Secure the drain plug on the outside-bottom of the slurry-tank.
9. Check to be certain pump drain plug is in place.
10. Lubricate equipment - See Lube Chart on pages 32-33.
11. Engage and disengage clutch to determine if it "snaps" in and out.
12. Check and clean nozzle of obstructions.
13. Check pump discharge and recirculation valve handles for free movement.
14. Make sure all tank vents are clean and open. Do not plug or cap.

TWO VALVE OPERATION:

This HydroSeeder® is equipped with two independently operated ball valves to control slurry flow. One is located in the recirculation line below the platform, and the other is located in the discharge line above the platform. The valve handles should be positioned as shown in Figures 4-6 for the particular application required.

WARNING:



Never engage the slurry pump clutch when both valve handles are positioned as shown Figure 4. Both valves are closed and will result in extreme heat generation that will cause damage or bodily injury if the slurry pump is running.

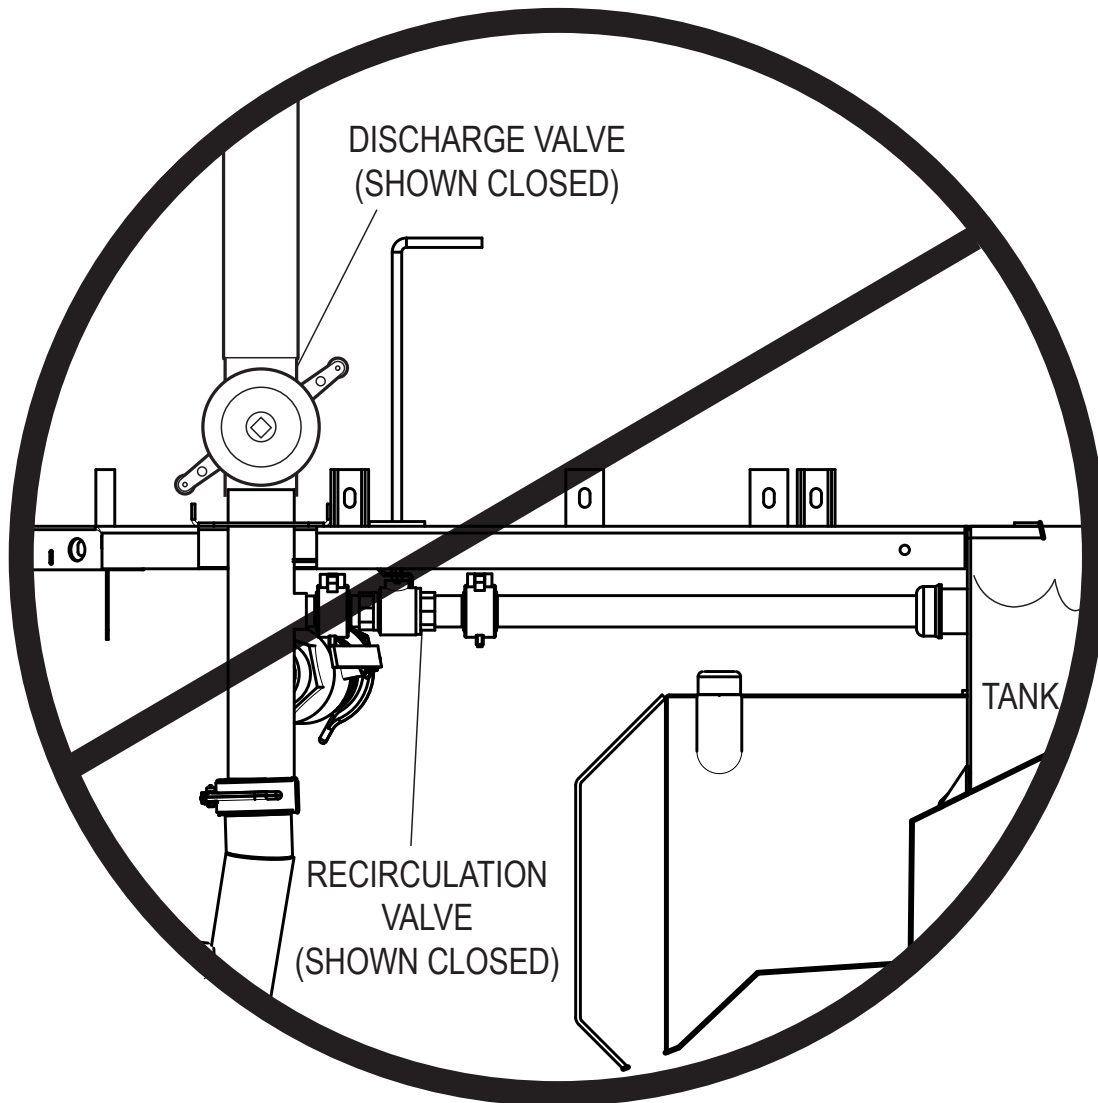


Figure 4 - DO NOT Engage Clutch

1. DISCHARGE THROUGH BOOM:

Flow is through boom with no flow through closed recirculation valve (Figure 5). Flow through boom is controlled by engaging and disengaging slurry pump clutch. Do not use the discharge valve to control distance. Valve should be completely open. Control the spray volume and spray distance by adjusting the engine RPM.

2. EXTENSION HOSE THROUGH BOOM:

Flow is through boom with no flow through closed recirculation valve (Figure 5). Extension hose is connected to boom and flow is controlled by engaging and disengaging pump clutch, or controlling the speed of the engine.



DANGER: Do not use remote valve in this application.

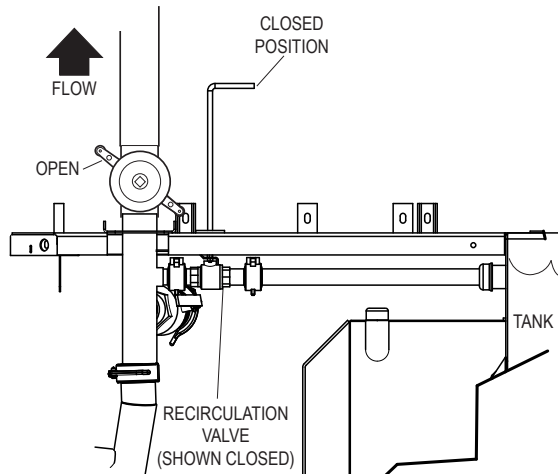


Figure 5 - Discharge Through Boom

3. EXTENSION HOSE OR HOSE REEL THROUGH REMOTE PORT:

Flow is through recirculation with no flow through closed discharge valve (Figure 6). Flow through hose is controlled by engaging and disengaging slurry pump clutch, or by remote valve at end of hose. Open recirculation valve allows flow back into tank when the remote valve is closed.

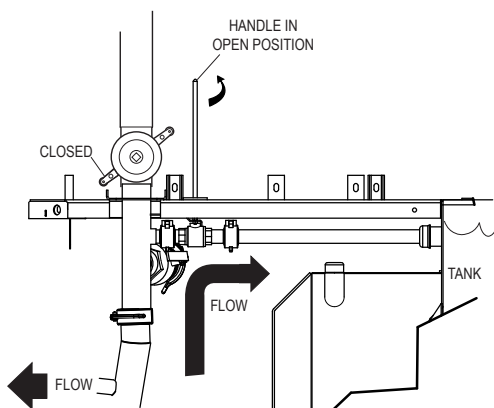


Figure 6 - Discharge Through Extension Hose or Hose Reel



DANGER: Recirculation valve must be open and material flowing back into tank when using a remote valve. A closed or plugged recirculation line will cause extreme heat resulting in damage and/or bodily injury.

STARTING PROCEDURE:




CAUTION: See safety section of the manual (pages 2-4) before operating the machine.

Before starting, open the recirculation valve, close discharge valve and remote valve (if applicable), disengage clutch, and place the agitator control in the neutral position.

1. Turn the key clockwise until the starter engages, and the engine starts.
2. Allow engine to warm up for 3 to 5 minutes.

NOTE: This engine has a safety system which will shut the engine off if the engine oil pressure drops below 7 PSI. or if the water temperature reaches 230° Fahrenheit (110° Centigrade).

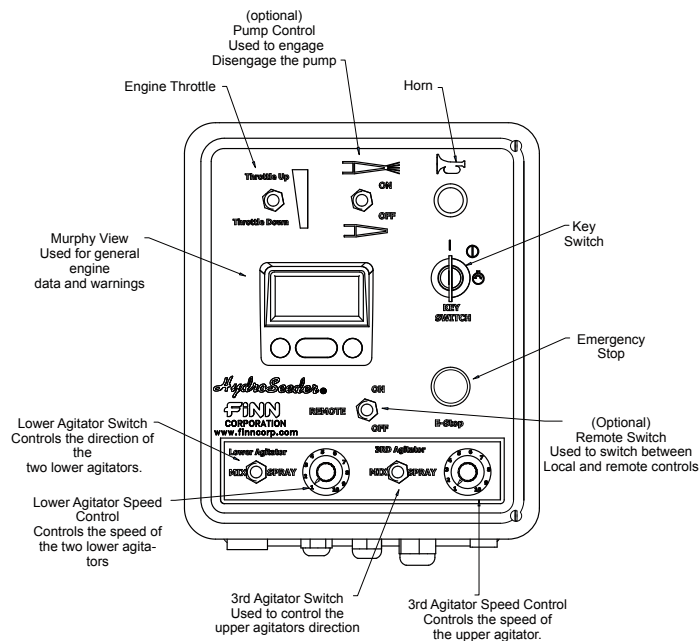

POWerview

The PowerView is a multifunctional tool that enables the operator to view many different engine parameters and service codes. A graphical back-lit LCD screen can display either a single parameter or a quadrant display showing four parameters simultaneously. Diagnostic capabilities include fault codes with text translation for the most common fault conditions.

The following relative engine parameters can be displayed in either English or Metric units, as well as in Spanish, French, or German:

- Engine RPM
- Engine Hours
- System Voltage
- % Engine Load at Current RPM
- Coolant Temperature
- Oil Pressure
- Throttle Position
- Active Service Codes

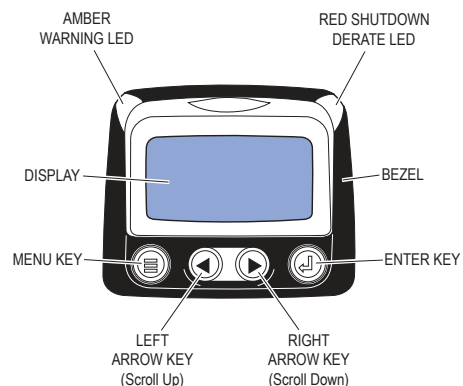


FIGURE 7 - FACEPLATE FEATURES


FACEPLATE

The keypad on the PowerView is a capacitive touch sensing system. There are no mechanical switches to stick or wear out. It operates in extreme temperatures, with gloves, through ice, snow, mud, grease, etc. When the key is touched, feedback is provided by flashing the screen. The keys on the keypad perform the following functions (refer to Figure 7):




Menu Key

The Menu Key is used to either enter or exit the menu screens.



Left Arrow Key

The Left Arrow Key is used to scroll through the screen, either moving the parameter selection towards the left or upward.



Right Arrow Key

The Right Arrow Key is used to scroll through the screen, either moving the parameter selection towards the right or downward.



Enter Key

The Enter Key is used to select the parameter that is highlighted on the Screen.

POWERVERVIEW OPERATION

PowerView Menus (First Time Start Up)

1. Once the engine has been started and the key-switch is turned to "RUN", the RPM Engine Parameter is displayed. See Figure 8.
2. To toggle through the various engine parameters, touch either the left or right arrow key.
3. To switch to the "4-Up Display", touch the Menu Key to display the first seven items of the Main Menu. See Figure 9.
4. Since the first menu item listed is "Go To 4-Up Display", touch the Enter Key to select the four parameter display. See Figure 10.

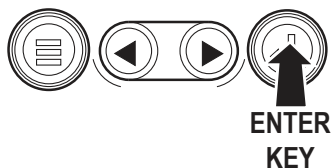
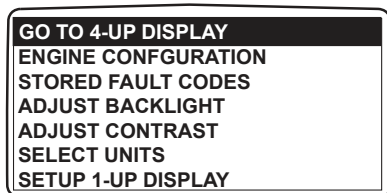


Figure 9 - Main Menu

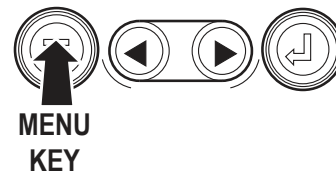
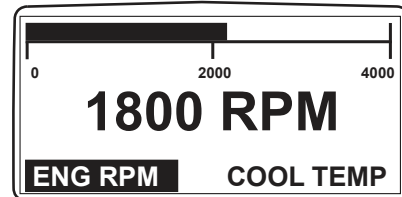


Figure 8 - 1-Up Display

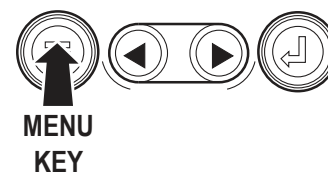
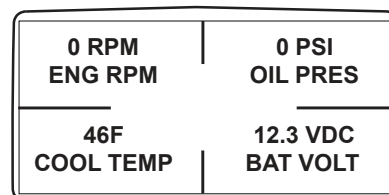


Figure 10 - 4-Up Display

Stored Fault Codes

The PowerView Display will store any fault codes generated by the engine and display them along with a text description. To access these fault codes:

1. Touch the Menu Key to display the Main Menu.
2. Using the Right Arrow Key, toggle down the list until "Stored Fault Codes" is highlighted. See Figure 11.
3. Touch the Enter Key to view any stored fault codes. The display will respond by presenting a "Requesting Fault Codes" message while the system retrieves the codes. See Figure 12.
4. Once the stored fault codes have been retrieved, the initial code will be displayed along with a text description. See Figure 13.
5. If the word "MORE" appears at the bottom of the display, this indicates that there are additional fault codes being stored. Use the Right Arrow key to advance to the next code.
6. As long as the arrow appears to the right of the word "MORE" as you advance through the fault codes, this means there are more codes available for viewing. When the arrow shifts to the left of the word "MORE", this is an indication that you have accessed the final fault code being stored. At this point you can touch the Left Arrow Key to review the fault codes or touch the the Menu Key to return to the Main Menu.

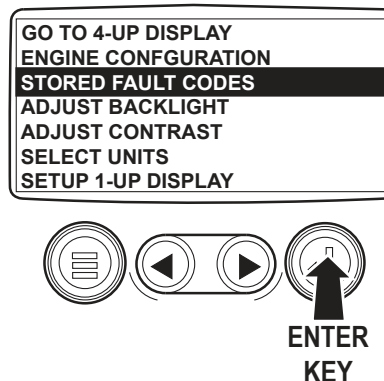


Figure 11 - Main Menu

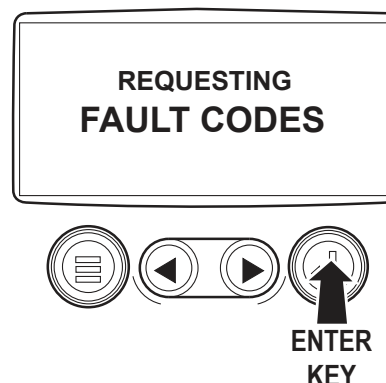


Figure 12 - Access Stored Fault Codes

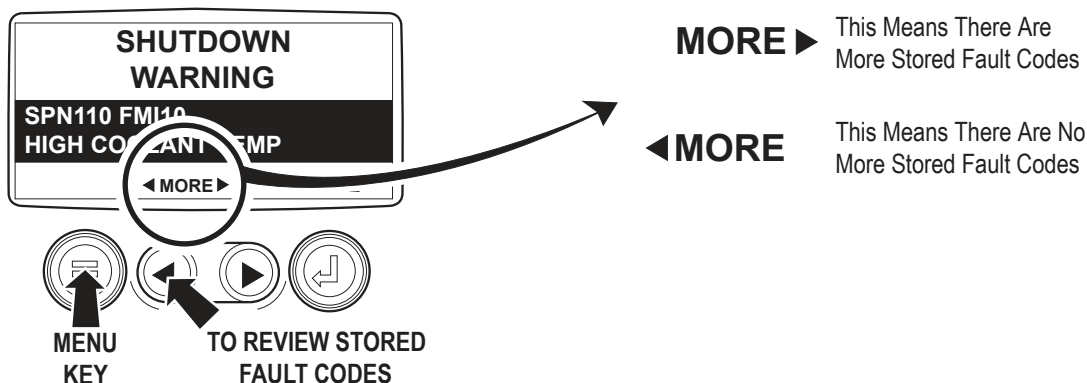


Figure 13 - Stored Fault Codes

AREA COVERAGE - MATERIAL CAPACITY:

To determine the coverage per load for any HydroSeeder®, three questions must be answered prior to the application. First, is the job to be done “one step” (which is when the seed, fertilizer and mulch are applied proportionally per load) or “two step” (which is when the seed and fertilizer are applied alone and then covered by mulch as a second operation)? Second, at what rates (usually in pounds per 1,000 square feet, or pounds per acre) are the seeding materials to be applied? Finally, what are the loading capacities of the HydroSeeder®?

Application rates vary for different geographic locations, but in general, seed is applied at 6-10 pounds per 1,000 square feet; fertilizer is applied at a rate of approximately 400 pound per acre; and fiber mulch is applied at 1,500 to 2,000 pounds per acre. (Note: There are 43,560 square feet in an acre). Local agronomists, agricultural extension agents, or soil and water conservation officials should be contacted for more specific information on application rates for a given area.

The following tables show loading versus coverage rates for the Finn HydroSeeder®. Table A shows rates for “one step” applications. The coverage area is determined by the fiber mulch capacity of the HydroSeeder®, and the rate at which it is applied. Table B shows the area coverage when seeding only, where little or no mulch is applied. The coverage area is determined by the granular solids capacity of the HydroSeeder®, and the rate at which the solids are applied.

TABLE A - Using Seed, Fertilizer and Mulch

<u>Unit</u>	<u>Amount of Material in Tank (pounds(kilograms))</u>			<u>Coverage Area (sq. ft.(sq. m.))</u>
	<u>Seed</u>	<u>Fertilizer</u>	<u>Mulch</u>	
TITAN280	287 (130)	333(151)	1,250 (567)	36,300 (3,372)
TITAN330	345 (156)	400 (181)	1,500 (680)	43,560 (4,046)
TITAN400	414 (187)	480 (218)	1,800 (816)	52,272 (4,856)

Above Table is based on 1,500 pounds of mulch, 400 pounds of fertilizer and 345 pounds of seed (8 pounds/1,000 sq. ft.) per acre.

Table A Example: For TITAN330 (1,500 pounds Mulch per Tank)

$$\frac{1,500 \text{ pounds Mulch per Tank}}{1,500 \text{ Pounds Mulch per Acre}} = 1 \text{ Acre per Load}$$

400 Pounds Fertilizer per Acre x 1 Acre = 400 Pounds Fertilizer per Load

345 Pounds Seed per Acre x 1 Acre = 345 Pounds Fertilizer per Load

TABLE B - Seed & Fertilizer Only

<u>Unit</u>	<u>Amount of Material in Tank (pounds(kilograms))</u>			<u>Coverage Area (sq. ft.(sq. m.))</u>	
	<u>Seed</u>	<u>Fertilizer</u>	<u>Total</u>	<u>(sq. ft. (sq. m.))</u>	<u>Acerage (Hectare)</u>
TITAN280	3,136 (1,422)	3,600 (1,633)	6,736 (3,055)	392,040 (36,420)	9 (3.64)
TITAN330	3,485 (1,580)	4,000 (1,814)	7,485 (3,395)	435,600 (40,467)	10 (4.04)
TITAN400	4,140 (1,878)	4,800 (2,177)	8,940 (4,055)	522,720 (48,562)	12 (4.86)


Above Table is based on rates of 8 pounds seed and 9.2 pounds fertilizer per 1,000 sq. ft.

Table B Example: For TITAN330

$$\frac{7,485 \text{ Pound Tank Capacity (Solids)}}{8 \text{ Pounds (Seed) + 9.2 Pounds (Fertilizer) per 1,000 Sq. Ft.}} = 435,600 \text{ Square Feet per Load}$$

$$\frac{8 \text{ Pounds Seed}}{1,000 \text{ Sq. Ft.}} \times 435,600 \text{ Square Feet} = 34,852 \text{ Pounds Seed per Tank}$$

TITAN280		
Gallons (Liters)	in. (cm) from top of load hatch	in. (cm) from bottom
2750 (10410)	9 (22.9)	58.5 (148.6)
2700 (10220)	12.75 (32.4)	54.75 (139.1)
2600 (9840)	14.75 (37.5)	52.75 (134)
2500 (9465)	16.5 (41.9)	51 (129.5)
2400 (9085)	18.75 (47.6)	48.75 (123.8)
2300 (8705)	20.5 (52.1)	47 (119.4)
2200 (8325)	22.25 (56.5)	45.25 (114.9)
2100 (7950)	24.25 (61.6)	43.25 (109.9)
2000 (7570)	26 (66.0)	41.5 (105.4)
1900 (7190)	27.75 (70.5)	39.75 (101)
1800 (6815)	29.75 (75.6)	37.75 (95.9)
1700 (6435)	31.75 (80.6)	35.75 (90.8)
1600 (6055)	33.5 (85.1)	34 (86.4)
1500 (5675)	35.25 (89.5)	32.25 (81.9)
1400 (5300)	37 (94.0)	30.5 (77.5)
1300 (4925)	39 (99.1)	28.5 (72.4)
1200 (4545)	40.75 (103.5)	26.75 (67.9)
1100 (4165)	42.75 (108.6)	24.75 (62.9)
1000 (3785)	44.25 (112.4)	23.25 (59.1)
900 (3405)	46 (116.8)	21.5 (54.6)
800 (3025)	48 (121.9)	19.5 (49.5)
700 (2650)	50 (127.0)	17.5 (44.4)
600 (2270)	51.75 (131.4)	15.75 (40)
500 (1890)	53.5 (135.9)	14 (35.6)
400 (1515)	55.5 (141.0)	12 (30.5)
300 (1135)	57.75 (146.7)	9.75 (24.8)
200 (755)	60 (152.4)	7.5 (19.1)
100 (375)	62.5 (158.8)	5 (12.7)

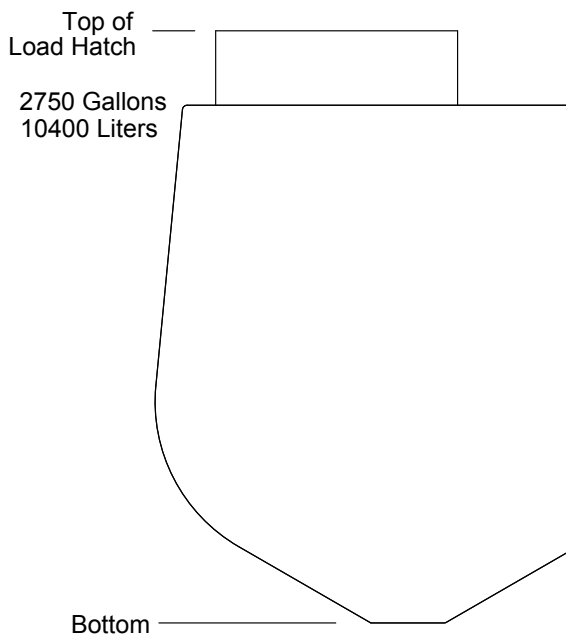

TITAN330		
Gallons (Liters)	in. (cm) from top of load hatch	in. (cm) from bottom
3300 (12490)	9 (22.9)	58.5 (148.6)
3200 (12115)	13.25 (33.7)	54.25 (137.8)
3100 (11735)	14.75 (37.5)	52.75 (134)
3000 (11360)	16.5 (41.9)	51 (129.5)
2900 (10975)	18 (45.7)	49.5 (125.7)
2800 (10600)	19.75 (50.2)	47.75 (121.3)
2700 (10220)	21.25 (54.0)	46.25 (117.5)
2600 (9840)	22.75 (57.8)	44.75 (113.7)
2500 (9465)	24.5 (62.2)	43 (109.2)
2400 (9085)	26 (66.0)	41.5 (105.4)
2300 (8705)	27.5 (69.9)	40 (101.6)
2200 (8325)	29 (73.7)	38.5 (97.8)
2100 (7950)	30.75 (78.1)	36.75 (93.3)
2000 (7570)	32.25 (81.9)	35.25 (89.5)
1900 (7190)	33.75 (85.7)	33.75 (85.8)
1800 (6815)	35.25 (89.5)	32.25 (81.9)
1700 (6435)	36.75 (93.3)	30.75 (78.1)
1600 (6055)	38.25 (97.2)	29.25 (74.3)
1500 (5675)	39.75 (101.0)	27.75 (70.5)
1400 (5300)	41.25 (104.8)	26.25 (66.7)
1300 (4925)	42.75 (108.6)	24.75 (62.9)
1200 (4545)	44.25 (112.4)	23.25 (59.1)
1100 (4165)	45.75 (116.2)	21.75 (55.2)
1000 (3785)	47.75 (121.3)	19.75 (50.2)
900 (3405)	49 (124.5)	18.5 (47)
800 (3025)	50.25 (127.6)	17.25 (43.8)
700 (2650)	52 (132.1)	15.5 (39.4)
600 (2270)	53.5 (135.9)	14 (35.6)
500 (1890)	55.25 (140.3)	12.25 (31.1)
400 (1515)	57 (144.8)	10.5 (26.7)
300 (1135)	58.75 (149.2)	8.75 (22.2)
200 (755)	60.5 (153.7)	7 (17.8)
100 (375)	63 (160.0)	4.5 (11.4)

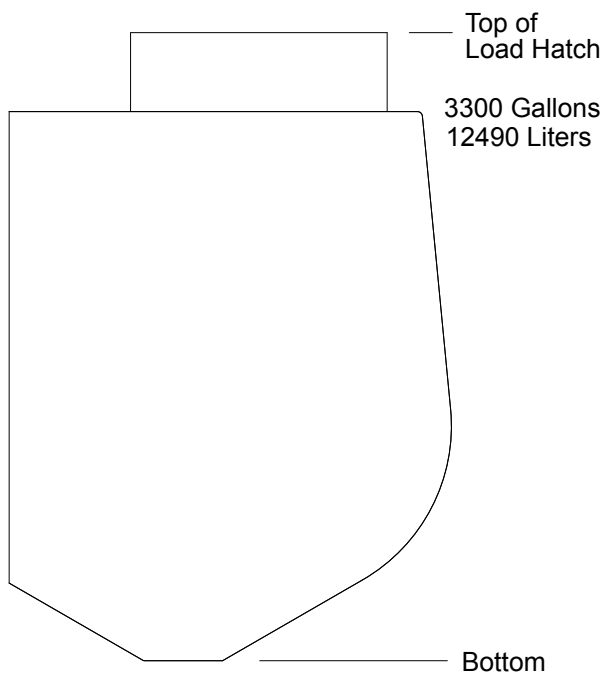


Figure 14 - Tank Capacity Chart

TITAN400		
Gallons (Liters)	in. (cm) from top of load hatch	in. (cm) from bottom
3975 (15045)	9 (22.9)	58.5 (148.6)
3900 (14762)	10 (25.4)	57.5 (146.1)
3800 (14383)	11.5 (29.2)	56 (142.2)
3700 (14005)	12.5 (31.8)	55 (139.7)
3600 (13626)	14 (35.6)	53.5 (135.9)
3500 (13248)	15.25 (38.7)	52.25 (132.7)
3400 (12869)	16.5 (41.9)	51 (129.5)
3300 (12490)	18 (45.7)	49.5 (125.7)
3200 (12115)	19.5 (49.5)	48 (121.9)
3100 (11735)	20.75 (52.7)	46.75 (118.7)
3000 (11360)	22 (55.9)	45.5 (115.6)
2900 (10975)	23.25 (59.1)	44.25 (112.4)
2800 (10600)	24.5 (62.2)	43 (109.2)
2700 (10220)	25.75 (65.4)	41.75 (106.0)
2600 (9840)	27 (68.6)	40.5 (102.9)
2500 (9465)	28 (71.1)	39.5 (100.3)
2400 (9085)	29.5 (74.9)	38 (96.5)
2300 (8705)	30.75 (78.1)	36.75 (93.3)
2200 (8325)	32 (81.3)	35.5 (90.2)
2100 (7950)	33.25 (84.5)	34.25 (87.0)
2000 (7570)	34.75 (88.3)	32.75 (83.2)
1900 (7190)	36 (91.4)	31.5 (80.0)
1800 (6815)	37.25 (94.6)	30.25 (76.8)
1700 (6435)	38.5 (97.8)	29 (73.7)
1600 (6055)	39.75 (101.0)	27.75 (70.5)
1500 (5675)	41 (104.1)	26.5 (67.3)
1400 (5300)	42 (106.7)	25.5 (64.8)
1300 (4925)	43.25 (109.9)	24.25 (61.6)
1200 (4545)	44.5 (113.0)	23 (58.4)
1100 (4165)	46 (116.8)	21.5 (54.6)
1000 (3785)	47.25 (120.0)	20.25 (51.4)
900 (3405)	48.75 (123.8)	18.75 (47.6)
800 (3025)	49.75 (126.4)	17.75 (45.1)
700 (2650)	51 (129.5)	16.5 (41.9)
600 (2270)	52.5 (133.4)	15 (38.1)
500 (1890)	54 (137.2)	13.5 (34.3)
400 (1515)	55.5 (141.0)	12 (30.5)
300 (1135)	57 (144.8)	10.5 (26.7)
200 (755)	58.5 (148.6)	9 (22.9)
100 (375)	60.25 (153.0)	7.25 (18.4)

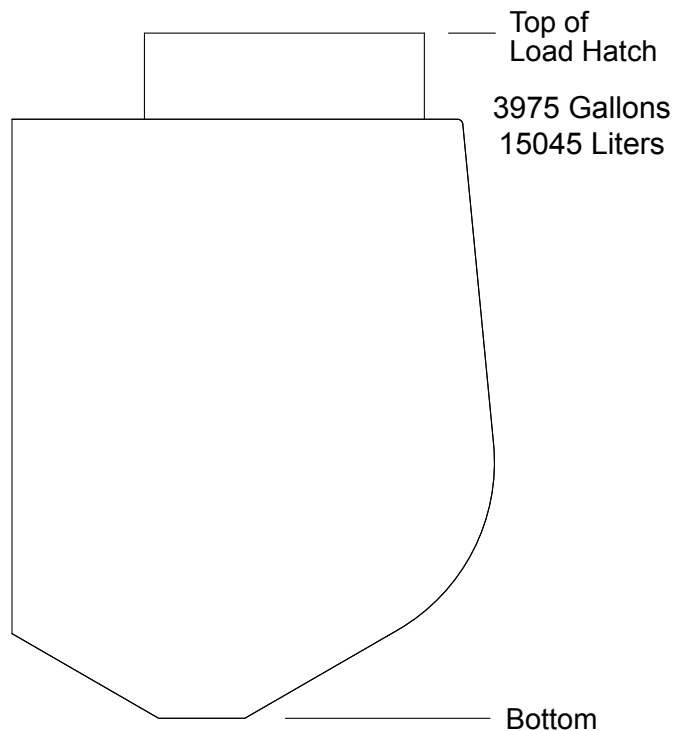


Figure 14 - Tank Capacity Chart

NOTES

LOADING (FOR WOOD FIBER MULCH, IF LIMING SEE PAGE 25):



CAUTION: Take care not to lose pens, lighters, etc. from shirt pockets or drop pieces of paper or plastic bags into the tank, as these might plug the slurry system.

1. With clutch disengaged and agitator control in the neutral position, start engine and allow it to warm up (See starting procedure page 14).
2. Start filling the unit with water. When water reaches the top of the lower agitator shaft, move agitator control to full mix position. (See page 12 for Control Box layout).

Fill the tank with water from any stream or pond using a fill pump. When filling from a pond or stream be sure to use a suction strainer to filter out contaminants which could damage the pump and unit. Other sources of water:

1. Any pressure source, eg. fire hydrant. This unit is supplied with a 6" air gap fill port but it is necessary to consult with local authorities before using water main, in order to abide to all local ordinances.
 2. Water tanker.
3. Piping System Cleanout Procedure (Purging Line):
 - A. Remove discharge nozzle and gasket from discharge boom.
 - B. Aim discharge boom assembly into an open area away from any persons, obstructions or high voltage power lines.
 - C. Open discharge valve and close recirculation valve.
 - D. Increase engine speed to approximately 1/2 to 3/4.
 - E. Engage clutch. Do NOT slip clutch.
 - F. When discharge stream is clear flush the hose on the reel (if applicable), open recirculation valve and close discharge valve. After recirculation stream is clear disengage clutch.
 - G. Replace nozzle and gasket in discharge boom.
4. Continue filling tank with water.
5. Increase engine speed to full RPM. Governed speed of the engine on the Finn HydroSeeder® should be 2,550 to 2,600 RPM under load.
6. Start loading dry material, loading the lightest material first. Agitator control should be in full mix for mixing.
 - A. Seed - Cut the seed bag and dump contents into the slurry tank. (When using inoculant, add it in the tank along with the seed.) When using quick swelling seeds load them just prior to application.
 - B. Wood Fiber Mulch - Empty the entire bag in or cut bag and drop in the sections of fiber. The amount of mulch to be used should be loaded by the time the water level is at 3/4 full. If agitator stalls or a high pitch squeal comes from the hydraulic system, reverse agitation to spray for a moment to clear the obstruction, then return agitation to mix.



CAUTION: Hydraulic system will overheat if agitator shaft is jammed for extended period. This will damage hydraulic oil and system components.

- C. Fertilizer - Stand over hatch opening and drop the bag onto the bag cutter. Grasp both ends of the bag and dump material.
 - D. All other additives - Consult with manufacturer for proper loading technique.
7. When all materials are loaded and in suspension, and the tank is full, move the agitator to neutral then full speed spray to insure all material is mixed. It may be necessary to change the agitator direction more than once to insure a thorough mixture.
 8. After material is thoroughly mixed, slow agitator in spray direction to 1/2 to 3/4 speed or enough to create movement in all of the corners of the tank. Do not over agitate the slurry. Always discharge the material with the agitator control in spray position.
 9. Close the hatch lid on the slurry tank.

NOTE: The slurry should not be recirculated for more than 15 minutes prior to discharge to reduce wear and keep seed from swelling.

NOTE: If foaming occurs, reduce agitator speed.

PRIOR TO APPLICATION:

1. Operator should familiarize self with area to be seeded and develop a plan to insure uniform application.
2. Develop a plan for communication between operator and driver of the carrying or towing vehicle to signal for start, stop, turn, etc. through the use of the signal horn.
3. Operator takes up position on the platform. From this point application will be controlled by the use of the clutch, valve, discharge assembly and throttle.

DISCHARGE NOZZLE SELECTION:

Nozzles are stored in the tool box. This HydroSeeder® is equipped with 6 nozzles - two long distance and four ribbon fan nozzles. The smaller long distance nozzle is generally better suited for seed, fertilizer and/or lime application while the large long distance nozzle is better for wood fiber mulch application. All of the ribbon fan nozzles are generally suited for both types of application.

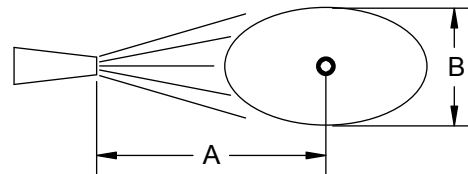


Figure 15 - Nozzle Spray Dimensions

Nozzle	Part Number	Distance (A)	Width (B)
Lg. Long Distance	011775	Up to 320 ft (98m)	-
Sm. Long Distance	012993	Up to 150 ft (46m)	-
Sm. Narrow Ribbon	012995	Up to 75 ft (23m)	15 ft (4.6m)
Sm. Wide Ribbon	012994	Up to 45 ft (14m)	25 ft (7.6m)
Lg. Narrow Ribbon	012997	Up to 90 ft (28m)	23 ft (7m)
Lg. Wide Ribbon	012996	Up to 50 ft (15m)	35 ft (10.5m)

APPLICATION OF SLURRY:

I. GENERAL APPLICATION TECHNIQUES



DANGER: Do not spray toward power lines, transformers or other high voltage conductors.



CAUTION: The driver of the carrying vehicle should remain alert for hazards to the operator, such as low power lines, hanging branches, etc. Driver should never start or stop abruptly.

1. Determine which nozzle would best suit the application.
2. Application of seed, fertilizer and lime: Elevate discharge nozzle no less than 10° above the area to be sprayed, allowing the slurry to gently rain onto the seed bed.
3. Application of wood and paper fiber: Whenever possible aim the stream towards the ground to create a surface with small pock marks which help get seed in contact with ground. Do not allow the stream to blast away the surface of the seed bed.
4. Generally the most remote area of the seed bed should be covered first. Distance is controlled by engine speed and nozzle selection. Do NOT partially close the valve to control the distance.
5. While moving along area to be seeded, the operator should move the nozzle back and forth in a slow, even arc.
6. If application is to be interrupted for a short period of time, disengage the clutch. If shutdown is going to be for an extended period of time (i.e., lunch break, reloading, etc.), close the valves to prevent slurry from dewatering. Re-engage the clutch to continue application.
7. It may be necessary to slow the agitator as the tank empties to reduce foaming. The 3rd agitator should be turned off when slurry reaches below the paddles.

II. DISCHARGE THROUGH THE BOOM:

1. Move the discharge valve handle to the open position, the recirculation valve handle to the closed position, and engage the clutch. At this time, should the operator want to stop spraying for a short period, disengage the clutch; then re-engage to continue spraying.
2. When the tank is empty, or when discontinuing discharge for an extended period of time, disengage the clutch, then immediately move the discharge valve to the closed position, and idle the engine. This will maintain moisture in the discharge piping and help prevent plugging. Move the agitator control to the neutral position.

III. PROCEDURES WHEN USING HOSES:

Always pump clear water through the hose before pumping mulch. If the inside hose liner is dry, it will dewater the mulch causing plugging.

A. PUMP TAKE OFF SYSTEM OR HOSE REEL WITH REMOTE VALVE :

1. Open recirculation valve and close discharge valve and close remote valve at the end of the hose.
2. Engage clutch. When stream is flowing freely through the recirculation line, open the pump take off valve.



CAUTION:

The high pressure on the hose can exert strong forces causing hose operator to lose control of hose or footing. The hose will require additional holders on slopes. Open the pump take off valve and the remote valve slowly and only after the hose operator is firmly positioned and has firm control of hose.

3. With the engine at approximately 2,000 RPM, open the remote valve at the end of the hose to discharge the load.
4. When finished spraying, close the remote valve, disengage the clutch, and stop the engine. If using fiber mulch, retain as much water as possible in the hose by elevating the ends or by coupling the ends together.
5. If another load is to be done, see reloading procedure on page 25. If finished for the day, follow the clean up procedure and flush out the hose.



DANGER:

The recirculation valve must be open when using a remote valve. If not open, extreme heat generated by dead-head pump which will cause damage and/or bodily injury will occur.

B. EXTENSION HOSE SYSTEM - WITHOUT REMOTE VALVE:

1. Connect the extension hose into the end of the discharge boom.
2. A person controlling the end of the hose directs a second operator at the machine to control the clutch and adjust the engine speed.



CAUTION:

Since the extension hose will be seeing the full output of the pump with the recirculation closed, the equipment operator and individual at the end of the hose should exercise extreme care when operating unit on high pressure. The high pressure on the hose can exert strong forces causing hose operator to lose control of hose or footing. The hose will require additional holders on slopes. Engage the clutch only after the hose operator is firmly positioned and has firm control of hose.

3. When hose operator is ready, signal the second operator to engage clutch and slowly increase the engine RPM until the desired discharge pressure is reached.
4. When finished spraying, disengage the clutch, stop the engine, and close the discharge valve. If using fiber mulch, retain as much water as possible in the hose by elevating the ends or by coupling the ends together.
5. If another load is to be done, see reloading procedure on page 25. If finished for the day, follow clean up procedure and flush out the hose.

C. HOSE WORK WITH RADIO REMOTE:

1. Begin with the engine around 1/4 throttle (1,400 RPM).
2. Close recirculation valve. If using an extension hose connected to the discharge boom, open the discharge valve. If using the hose reel, close the discharge valve and open the pump take off valve to the hose reel.
3. Make sure all switches are in the off position and all dials are in the zero position.
4. Switch Remote On/Off switch on the control panel to the "ON" position.
5. When the operator is in position, engage the pump using the remote transmitter and increase throttle to the desired output.

IMPORTANT: To quickly shut off the engine at any time, press the red "E-Stop" button on the transmitter. To restart the engine, the key switch on the control panel must be returned to the "OFF" position and then re-started.

5. When finished spraying, turn the pump off and decrease the engine throttle to idle.



CAUTION: When using the radio remote control option, the secondary operator(s) must be aware that the machine can be activated remotely at any time after the Remote On/Off switch on the control panel is switched ON. If any maintenance or troubleshooting needs to be performed while the engine is running, the Remote On/Off switch must be in the off position.

STARTING PROCEDURE:

The TITAN with the optional Magnum Remote can only be started when all switches are in the neutral position and all potentiometers are at the (0) position. You can now start the TITAN with the Local/Remote switch in either position.

SWITCHING BETWEEN LOCAL AND REMOTE:

After the engine is started, you may switch between Local controls and Remote controls. All switches must be in the neutral position and all potentiometers must be at the (0) position.

RELOADING PROCEDURE:

1. Start at step 2 in Loading Procedure on page 19.
2. After last load of the day refer to the cleaning and maintenance section of the manual on pages 26-35.
3. If the unit is equipped with an Air Flush System, refer to the Air Flush System Parts & Operator's Manual.

LIMING WITH THE HYDROSEEDER®:

In using large concentrations of granular solids through the HydroSeeder®, it is advisable to keep the slurry moving through the pump at all times. This keeps the solids from settling in the lines, and creating a stoppage. This unit was designed for the application of agricultural grade lime only.

PROCEDURE:

1. With clutch disengaged and agitator control in neutral position, start engine and allow it to warm up (see starting procedure on page 14).
2. Start filling the unit with water. When water reaches the top of the agitator shaft move agitator control to approximately 1/2 speed mix.
3. Open both the recirculation and discharge valves.
4. Remove the discharge nozzle and gasket from the discharge boom.
5. Aim the discharge boom assembly into an open area away from any persons, obstructions or high voltage power lines.
6. Move the throttle to approximately 1/2 engine speed.
7. Engage the clutch, and move the throttle to full engine speed. A stream of water should be coming from the end of the recirculation pipe beside the hatch opening, as well as from the boom.
8. As soon as both streams are clear, close the discharge valve and make sure water is being recirculated back to the tank.
9. Decrease throttle to 3/4 speed. Increase agitator speed to full mix. **DO NOT DISENGAGE CLUTCH!**
10. 20 pounds of granular solids displaces approximately 1 gallon of water. When filling the tank with water, the volume of granular solids must be accounted for. For example; If using the TITAN280 maximum recommended capacity of 8,000 pounds, 400 gallons ($8,000/20 = 400$) would have to be subtracted ($2,750 \text{ gallons} - 400 \text{ gallons} = 2,350 \text{ gallons}$). For the maximum recommended capacity of 10,000 pounds, 500 gallons ($10,000/20 = 500$) would have to be subtracted ($3,300 \text{ gallons} - 500 \text{ gallons} = 2,800 \text{ gallons}$).
11. Fill the tank to the required capacity for the rate of granular solids to be applied.
12. Load the material (see "Loading" pages 21-22, steps 5-8).
13. When ready to apply slurry, install gasket and nozzle into boom.
14. Move agitator control to 3/4 speed, spray.
15. With the clutch still engaged, open the discharge valve.



CAUTION:

To decrease pump wear and increase discharge distance, it may now be desirable to close the recirculation valve. However, the recirculation valve must be open **BEFORE** closing the discharge valve if the application of slurry is to be interrupted. Extreme heat, which will cause damage and/or bodily injury, will occur if both valves are closed.

16. Apply the slurry (see "Application of Slurry" pages 23-25).
17. If another load is to be applied, start again at step "1". If finished, follow the clean-up procedure.

TROUBLESHOOTING YOUR HYDROSEEDER®:

Because of the tremendous work load usually placed upon the HydroSeeder®, minor malfunctions will occur from time to time. If these are not remedied immediately, they could lead to poor performance and damage to the equipment. This section describes possible problems and the action to correct them.

1. Foam in the tank and air entrainment.

The mixture of dry materials with water will sometimes cause excessive foaming while others will cause air entrainment. This is noticed primarily in the erratic discharge and a drop in pressure and distance.

Some solutions are:

- A. As the slurry level drops in the tank, slow the lower agitators, and turn off the 3rd agitator.
 - B. Add 2 or 3 ounces (4 to 6 cl) of an antifoaming agent to the tank.
 - C. If you can determine which additive is causing the air problem, either add it last or not at all.
 - D. Limit recirculation time as much as possible.
2. Plugging or clogging:



DANGER: Turn off engine and disconnect battery cables before working on equipment. Serious injury or death can result from moving parts or high pressure spray.

Sometimes when a stoppage occurs, you will not be able to find anything in the line. When this happens, it means that the system became airbound instead of plugged. To remedy this, see “Foaming”. Plugging can occur in any one of four places; the valve and recirculation nozzle, the discharge nozzle, the pump area and the sump area. The plugging is caused by either foreign objects or dewatered mulch.

- A. Obstruction in the discharge nozzle is determined by a change or stoppage of the spray pattern.
 - a) Disengage clutch.
 - b) Make certain that the pump has stopped rotating.
 - c) Remove the nozzle, slowly and carefully.
 - d) Clear the nozzle with the nozzle cleaning rod attached to the nozzle tray.



DANGER: Severe injury can result from opening clamps when piping is hot. Before loosening any clamps, determine if the pipe is hot. If so, let it cool before attempting repair.

- B. If the recirculation system is not working:
 - a) Disengage the clutch and shut down the engine.
 - b) Remove the two clamps on each side of the recirculation valve.
 - c) Slide the rubber seals back and remove the valve assembly.
 - d) Check the valve assembly, the recirculation nozzle in the discharge pipe, and the recirculation pipe going into the tank. Clear any obstructions.
 - e) Replace valve assembly and slide the seals back into place. Lubricate the outside of the seals.
 - f) Replace the clamps.
3. Obstruction in the pump, which can be determined by a drop in pressure. If the drop in pressure is accompanied by a frothy or whitish discharge stream, the blockage is in the suction line or sump area. To clear the pump:
- A. Disengage the clutch and stop the engine.
 - B. Loosen the suction pipe clamps. If there is material in the tank, shut off the suction line valve
 - C. Remove the clamp closest to the pump.

NOTE: If no water comes out, it means that the obstruction is in the sump area.

- E. Reach into the pump and remove the obstruction. If it is jammed, the pump suction cover may have to be removed.
- F. Reassemble removing pipe “plug” in process.
- G. Open suction line valve.

4. Obstruction in the sump area, which is located at the bottom of the tank on the inside where the suction pipe is attached:
 - A. The easiest way to clear the sump is to back flush through the discharge plumbing with the water supply hose.
 - B. Another method is to remove the drain plug and run a long pole through the opening and into the sump area. Remove the obstruction and replace the drain cap.
 - C. Use a pipe or pole through the loading hatch opening to dislodge the obstruction.

TROUBLESHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
LEAKS:		
Tank Bearing	Lack of lubrication - seal worn Bolts not tightened properly	Replace seal and follow lube schedule Tighten uniformly to 25 ft. lbs
Pressure Pipe Clamps	Rubber seal cracked, pinched or torn	Replace, always grease seal before clamping shut
Suction Pipe Clamps	Rubber seal cracked, pinched or torn	Replace, always grease seal before clamping shut
Discharge Swivels	Not greased often enough	Rebuild swivels w/repair kit
Discharge Boom or Nozzle Camlock Fittings	Worn or no gasket	Replace gasket

MACHINE JUMPS DURING OPERATION:

Agitator	Agitator bent by heavy object falling on it	Straighten agitator or shim, so it runs true
Bent Paddles	Loading wood fiber mulch into tank before tank is half full	Straighten agitator paddle, realign agitator to run true

FOAMING OF SOLUTION AND LACK OF DISTANCE:

Pump loses prime - lacks distance - leaves excessive amount in tank (100 gal (378 liters) or more)	Sucking air in suction lines	Check all suction connections to see that rubber seals are in good shape. Grease seals before replacing clamps.
	Air entrainment	See page 22
	Low engine RPM (Below 2,700 RPM-No load)	Check PowerView Fault Codes See authorized engine dealer
	Soft water	Slow the agitator

TROUBLESHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
Pump loses prime - lacks distance - leaves excessive amount in tank (100 gal (378 liters) or more)	Too much agitation Pump worn Suction partially plugged Nozzle worn or plugged Fertilizer Clutch slippage	Slow the agitator See pump manual Clean out machine see pages 26-27 Clean nozzles, replace if necessary Change type Readjust clutch - see clutch manual

VALVE:

Valve stuck	Frozen	Thaw out ice - leave in discharge position during storage
Constant plugging during operation	Foreign material in slurry	Drain and clean out tank - check storage for foreign materials
Constant plugging during loading and discharging	Loading HydroSeeder® before tank is half full of water Incorrect loading procedure Improper operation by operator Clutch slipping Not moving valve handle far enough Machine not being flushed out prior to reloading Machine not being run at correct RPM during loading	Reinstruct your operator - see pages 21-22 See loading procedure pages 21-22 Reinstruct your operator - Review Operator's Manual) Readjust clutch see manual Valve should be fully open See page 21 Reinstruct your operator - see page 21
Extension hose plugs after use	Letting water run out, leaving wood fiber mulch to dry out	If hose has to be uncoupled, seal ends to keep water in hose and prevent wood fiber mulch from drying out

CLUTCH:

Does not pull load or overheats	Out of adjustment	Readjust clutch, instructions in manual
Jumps out of engagement	Too loose or too tight	Readjust clutch - see manual

PUMP:

Excessive wear	Fertilizer with highly abrasive fillers Overloading machine with dry material Too much time allowed between loading and discharging Recirculating all the time	Change fertilizer - avoid abrasive fillers Load machine to recommended capacities After loading and mixing has been completed, set agitator at 1/2 speed in reverse and disengage pump Close recirculation valve when discharging through the boom
----------------	---	---

TROUBLESHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
PUMP CONT'D:		
Will not turn	Frozen	Warm housing to melt ice
	Jammed with fertilizer or lime	Remove cover and clean interior
	Impeller rusted to suction cover plate	Pull cover and remove rust

CLEANING AND MAINTENANCE:

AFTER FIRST 4 - 8 HOURS OF OPERATION:

1. Check and adjust clutch - see clutch manual.

DAILY:

1. Cleaning the HydroSeeder®
 - A. Fill the slurry tank to the center of the lower agitator shaft.
 - B. Move agitator to full speed to flush off inside of tank top and walls.
 - C. Remove discharge nozzle and gasket from discharge boom.
 - D. While pointing discharge toward an open area, move discharge valve handle to discharge position and engage clutch. Allow to discharge until clear water is coming out.
 - E. Move recirculation valve handle to recirculation and allow to run momentarily.
 - F. Disengage clutch, idle the engine, move valve handle to discharge position, move agitator handle to neutral and turn off the engine.
 - G. Always remove the drain plug and allow the tank to drain.
 - H. In freezing weather leave main tank drain plug out and remove pump drain plug. Move all slurry valves to open position.
 - I. Wash the outside of the HydroSeeder®, including the radiator, to remove any corrosive materials.
 - J. If using lime - the daily maintenance should be performed after every load.
 - K. Clean out extension hoses.
 - L. Make sure all tank vents are clean and open. Do not plug or cap.
2. Lubricating the HydroSeeder® (See lube chart pages 32-33)

IMPORTANT: Lubrication should be performed IMMEDIATELY AFTER cleaning of equipment. Engine not running.

- A. Lubricate the agitator shaft bearings located on the outside front and rear of the slurry-tank.
- B. Check the engine oil and replenish when necessary. Change oil and filter after first 100 hours then 250 hours thereafter. Consult the engine operator's manual for the correct grade of oil and the engine break-in procedure.
- C. Lubricate the swivel on the discharge assembly and the swivel on the hose reel.
- D. If equipped with the Air Flush Option, refer to the Air Flush System Manual.

WEEKLY OR EVERY 40 HOURS OF OPERATING TIME:


1. Clean the air cleaner following the instructions in the engine operator's manual.
2. Lubricate all the points on the HydroSeeder® as outlined in the daily maintenance section and, in addition, lubricate the pump per it's manual.
3. Check the level in the hydraulic oil reservoir - maintain level at sight gauge.
4. Check the clutch adjustment to insure that it "snaps" in and out of engagement. Adjust the clutch with the engine off.
5. Check the anti-freeze in the radiator.
6. Inspect the slurry-tank for build up of residue in the suction area and clear if necessary.
7. Check and clean engine radiator. Flush with clear low pressure water and blow dry with compressed air. Do NOT use high pressure water spray.
8. Check pivoting hose reel swivel bolt. Ensure proper torque. Replace bolts if any show signs of wear.
9. Check oil level in agitator gear boxes. Refer to manual for maintenance schedule.

SEASONAL AND WINTER STORAGE MAINTENANCE:

1. Drain the slurry tank of all water prior to storage and leave the drain plug disconnected.
2. If possible cover machine with tarp or park inside of an enclosure.
3. Store the HydroSeeder® with all slurry valve handles in the open position. To prevent damage from freezing, it is advisable to remove all slurry valves and store in a heated area.
4. Pour one quart of mineral oil or environmentally safe lubricant into the pump housing and spin pump by hand to prevent rust in the pump. Remove drain plug.
5. Chip and steel brush any interior rust spots in the slurry-tank and touch up with paint. See #2 and #3 in Maintenance Section of the Safety Summary Section on page 4.
6. Lubricate all fittings.
7. Check anti-freeze in radiator.
8. Lubricate equipment again just prior to starting operation after storage.
10. Change hydraulic oil and filter. (500 hours)
11. Disconnect battery cables. In cold weather, remove battery and store in safe warm place.
12. Add fuel stabilizer to fuel tank.

HYDRAULIC SYSTEM:

The hydraulic system on your Finn HydroSeeder® is designed to give trouble free service, if maintained. The most important areas of maintenance are the hydraulic oil and filtration. The reservoir holds 60 gallons of Mobil DTE-13M or equivalent hydraulic oil. The hydraulic oil should be replaced per the lubrication schedule or if the oil becomes milky or it gives off a burnt odor. The hydraulic oil filter must be replaced on schedule with a 25 micron absolute filter – Finn part #011869. The hydraulic system relief is factory set at 3,200 PSI.

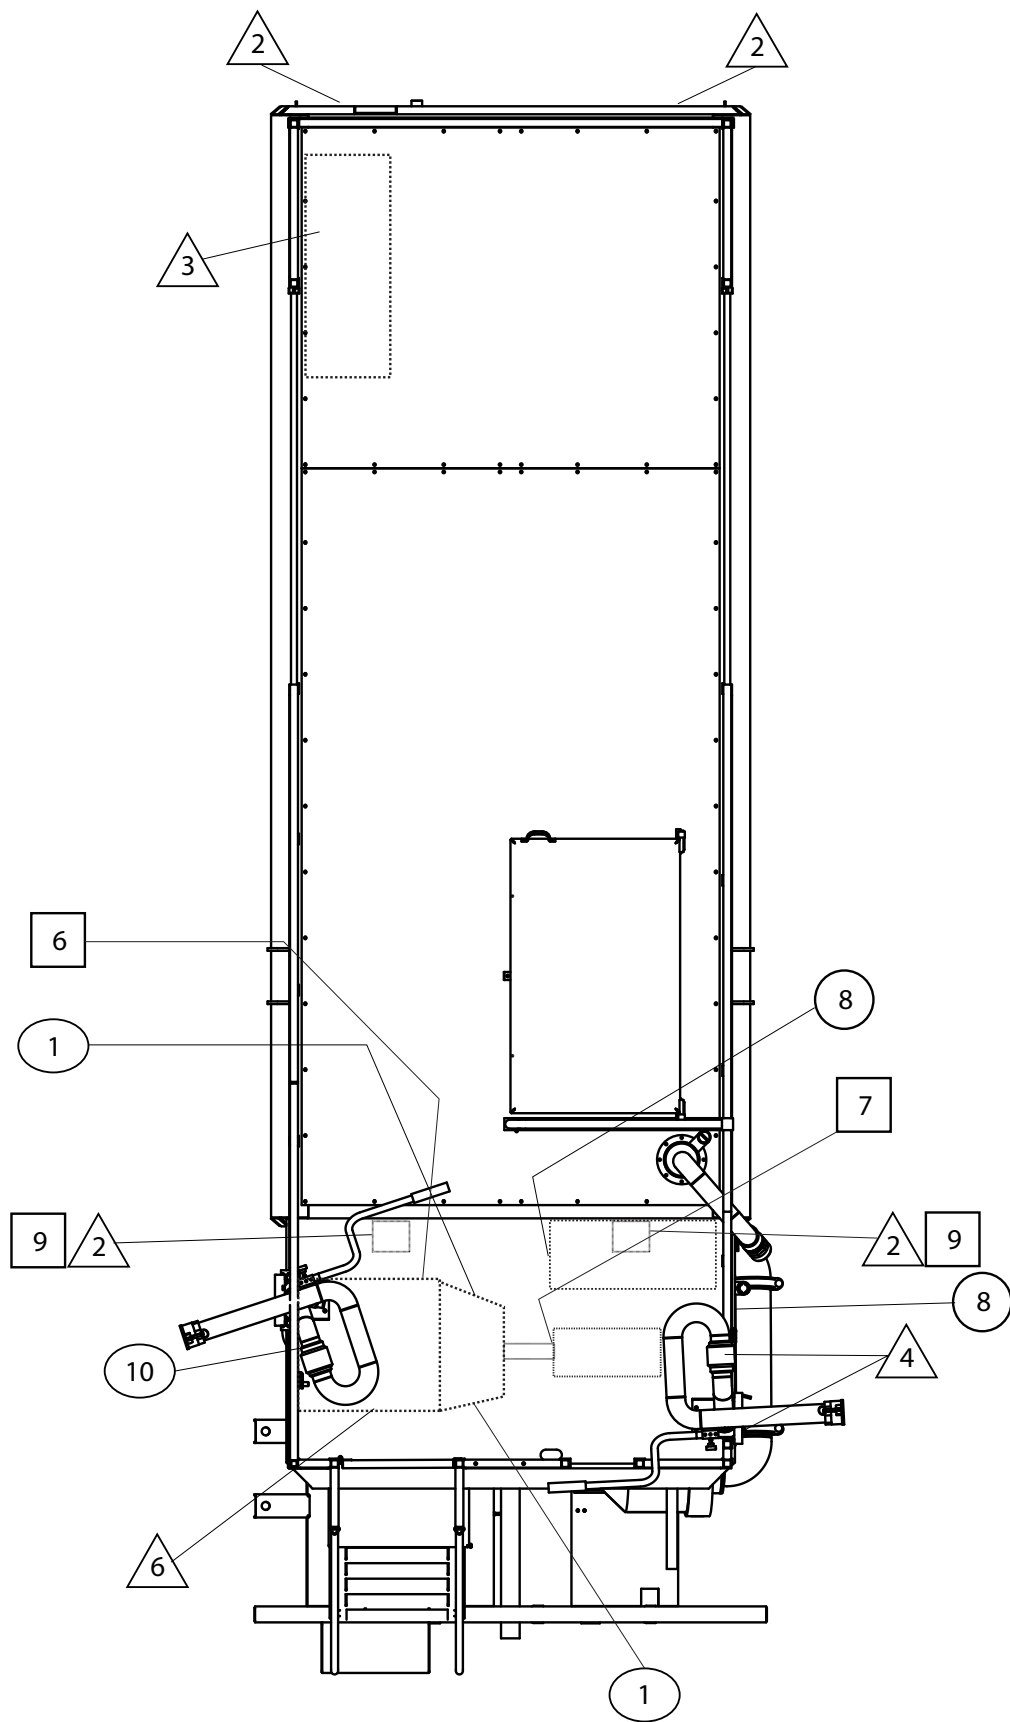






LUBRICATION CHART

Ref. No.	Location	Lubricant	Frequency	Number
1	Check Clutch Lever Bearings	CL	Weekly	2
2	Grease Agitator Shaft Bearings	CL	Daily	6
3	Check Fuel Level	DF	Daily	1
4	Grease Discharge Swivels	CL	Daily	2
5	Check Engine Oil Level	MO	Daily	1
6	Check Engine Oil and Filter	MO	See Engine Manual	1
7	Grease Pump Bearings	BL	See Pump Manual	2
8	Check Hydraulic Fluid Level	HO	Weekly	1
	Change Hydraulic Fluid and Filter	HO	Seasonally or 500 Hours	1
9	Check Agitator Gearbox Level	MO	See Gearbox Manual	2
10	Change Engine Coolant	AF	Seasonally	1

LUBRICANT OR FLUID USED

CL	Chassis Lubricant
MO	See Component Manual
HO	Mobil DTE-13M or Equivalent Hydraulic Oil
AF	50/50 Anti-Freeze and Water Mixture
DF	Diesel Fuel

TIME KEY

DAILY (8 hours)	
WEEKLY (40 hours)	
EACH LOAD	
SEASONALLY (500 hours)	
SEE COMPONENT MANUAL	

FLUID CAPACITIES

Fuel - 38 Gallons (143.8 L)
 Hydraulic Oil - 60 Gallons (227 L)
 Engine Coolant - 5 Gallons (19 L) 50/50 Mix Only
 Engine Oil - See Engine Manual


NOTES

TITAN280/TITAN330 TITAN400 HydroSeeder® Parts Manual


Model SRA

NOTES


PICTORIAL REFERENCE

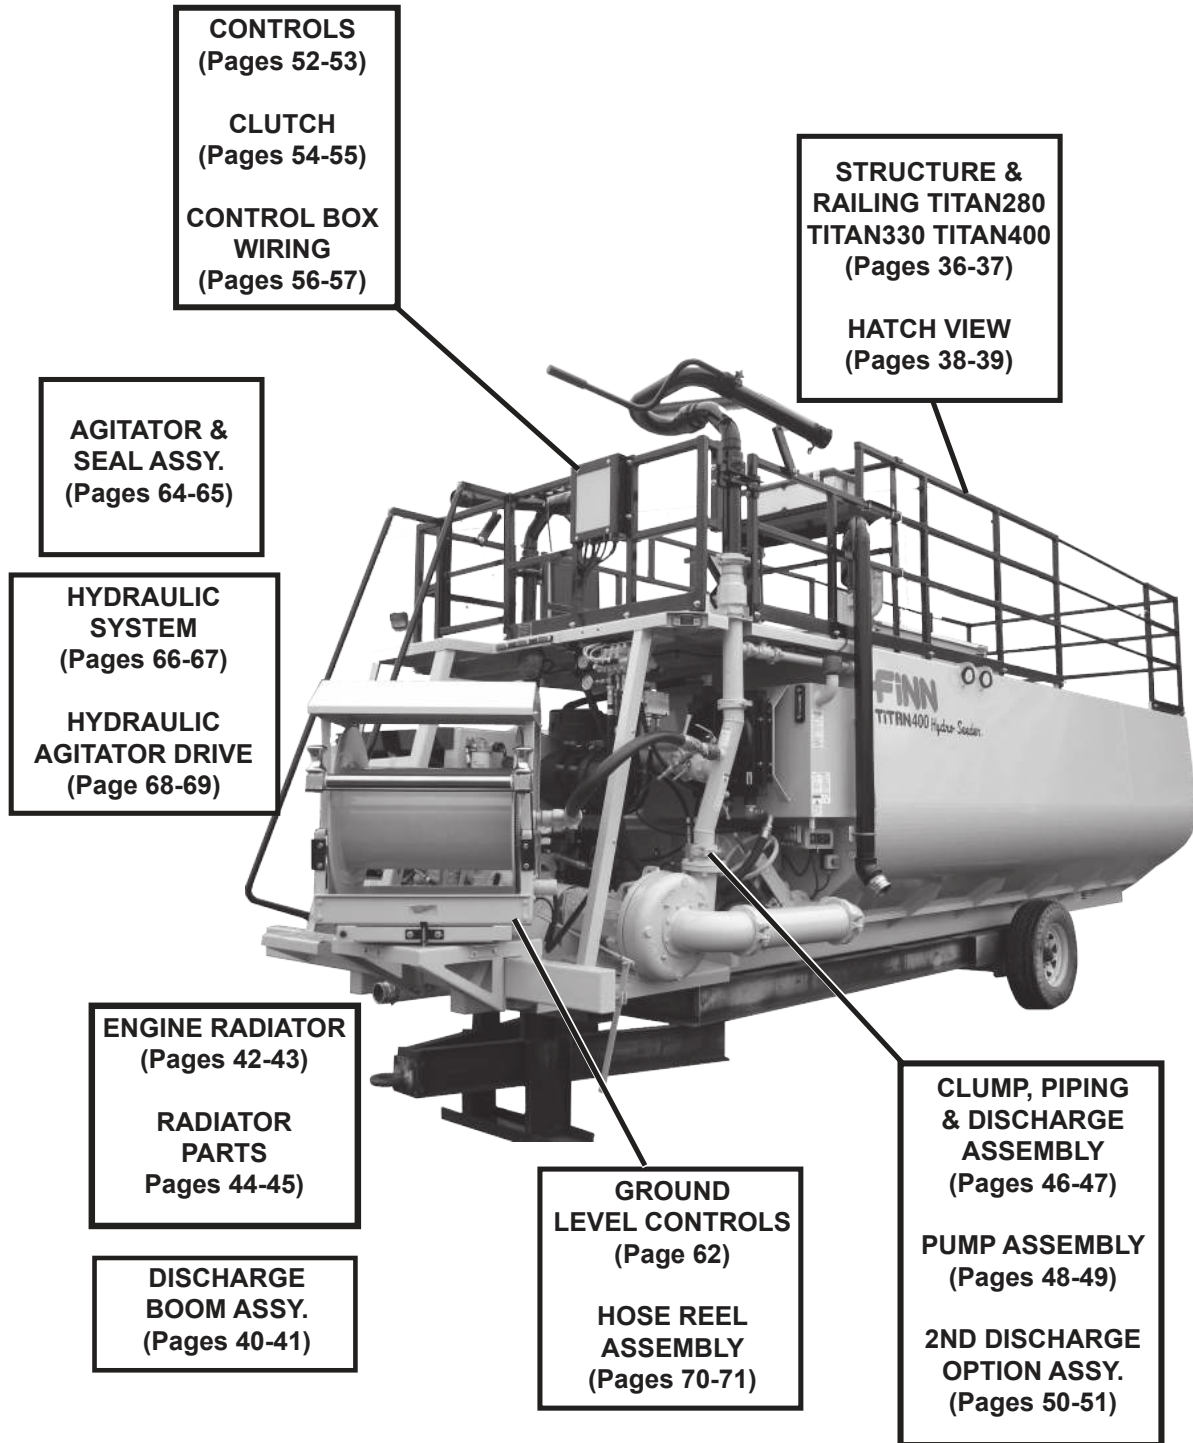

DECALS.....	Pages 72-73
TOOL KIT.....	Page 74
SPARE PARTS LIST.....	Page 75

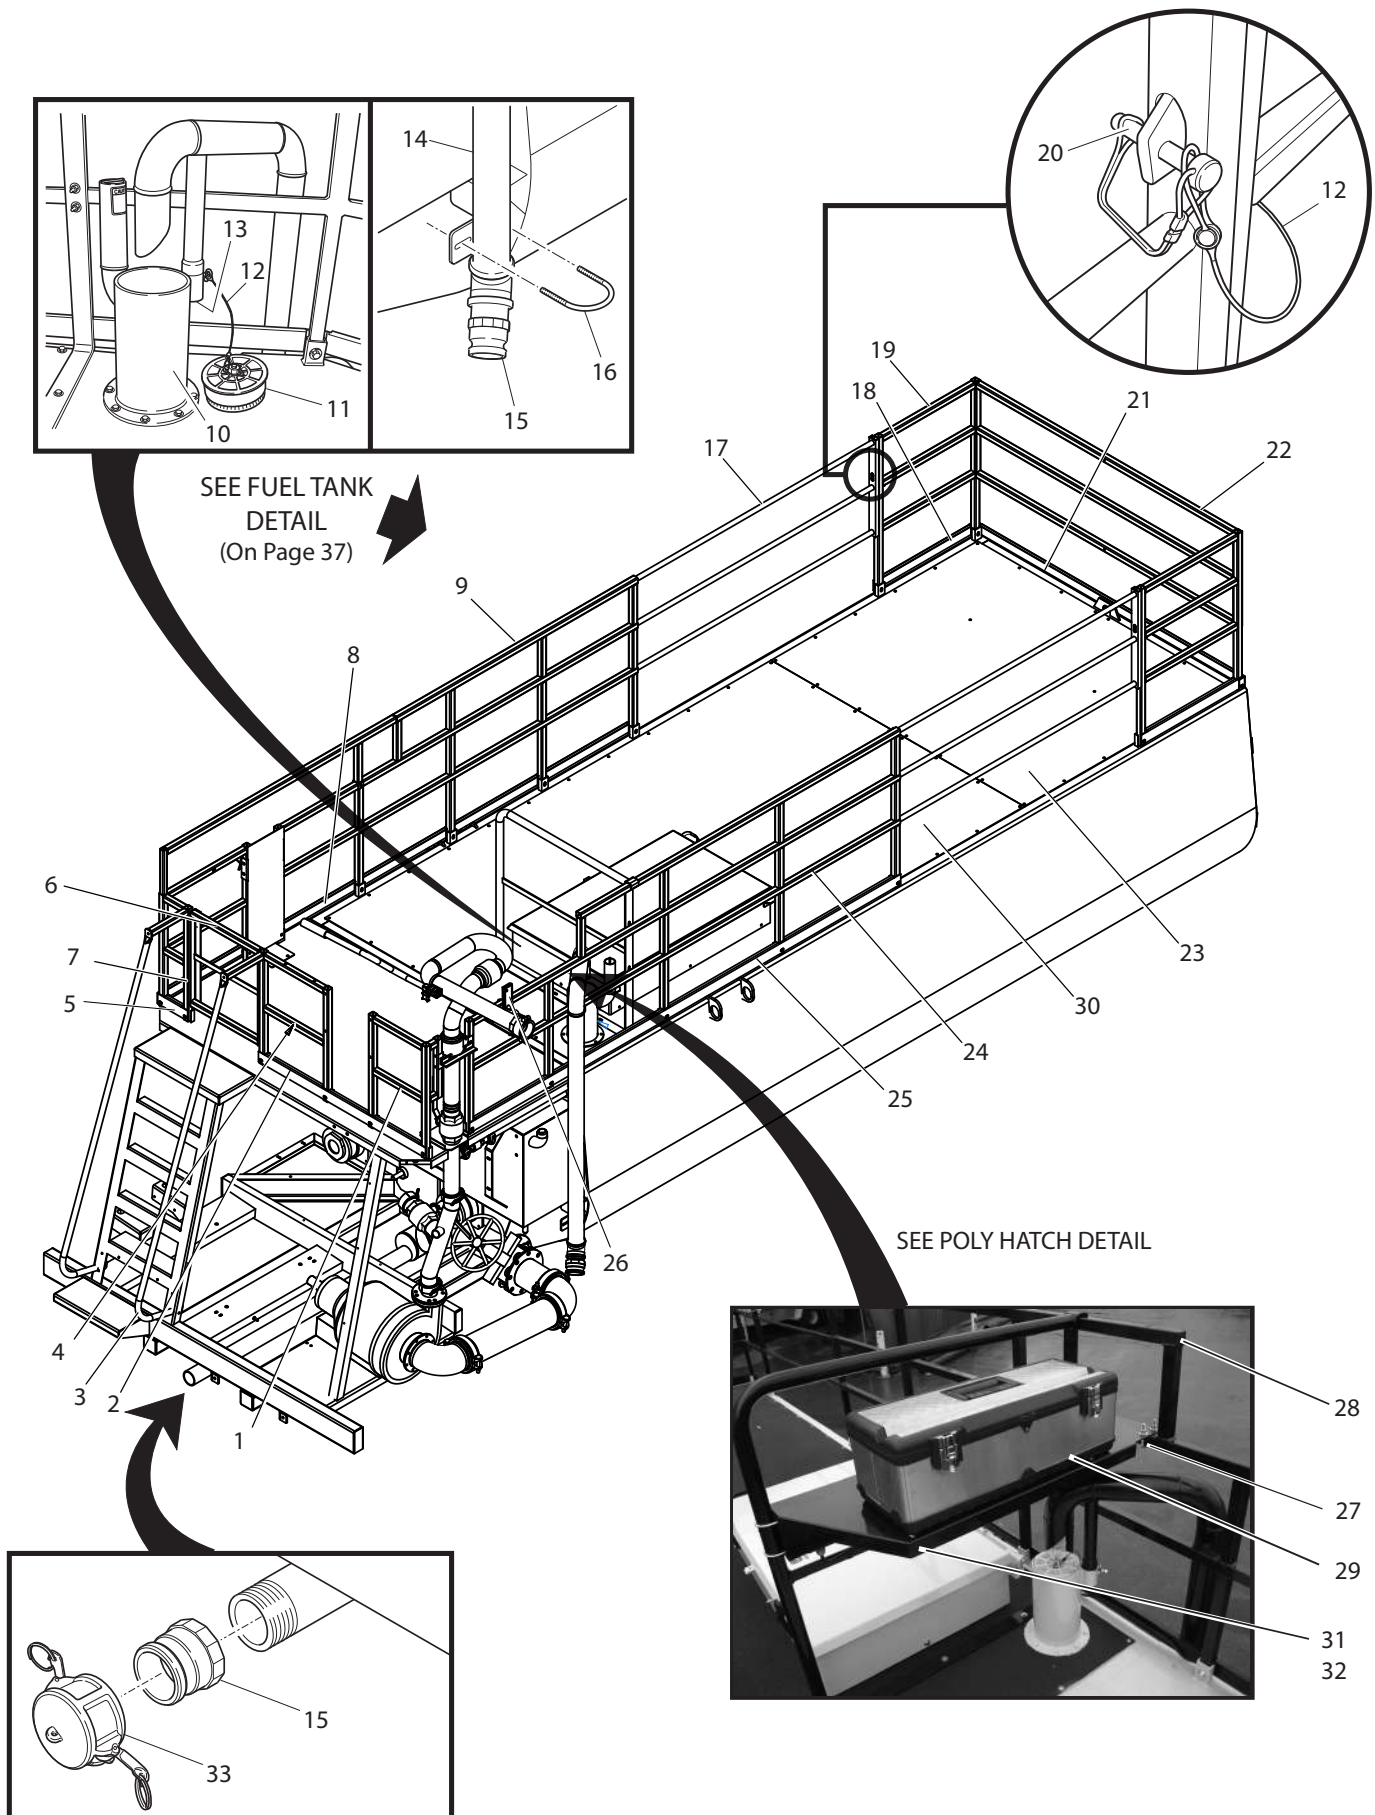


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

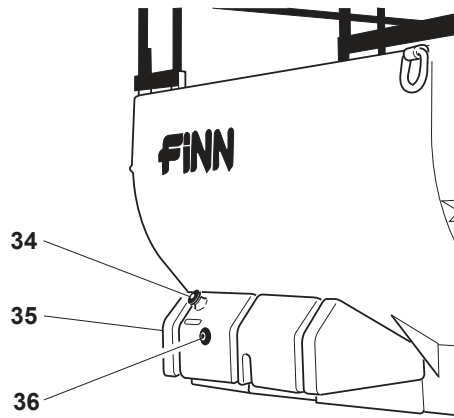

STRUCTURE & RAILING TITAN330/TITAN400

Ref. No.	Part Number	Description	No. Req'd
1	012919	Rear Right Corner Rail	1
2	F400-0015	Long Rear Toe Rail	1
3	012771	Hand Rail	2
4	012918	Rear Guard Rail	1
5	F400-0012	Left Corner Rear Toe Rail	1
6	012700	Swing Gate Weldment	1
7	012917	Rear Corner Guard Rail	1
8	F400-0013	Left Rear Toe Rail	1
9	012912	Left Rear Guard Rail	1
10	012750	Fill Stack Extension	1
11	008470	Fill Port Plug	1
12	005700	Nylon Lanyard	3
13	012515	1-1/4" Pipe Plug	1
14	012895	3" Fill Port	1
15	011741	3" Male Brass Adapter	2
16	055336	U-Bolt	1
17	012916	Slide Gate	2
18	F400-0016	Front Side Toe Rail (TITAN400)	2
	F280-0005	Front Side Toe Rail (TITAN280,TITAN330)	2
19	012914	Front Side Guard Rail (TITAN400)	2
	012737	Front Side Guard Rail (TITAN280,TITAN330)	2
20	FW71225	Slide Gate Snapper Pin	2
21	F330-0082	Front Toe Rail	1
22	012705	Front Rail	1
23	F330-0124	Tank Top Extension (TITAN400)	1
	F400-0004	Tank Top Extension (TITAN280,TITAN330)	1
24	012913	Right Rear Guard Rail	1
25	F400-0014	Right Rear Toe Rail	1
26	F400-0030	Boom Holdown	2
27	012514	Square U-Bolt for 1-1/2" Square Pipe	6
28	005613	Square Tubing Plug	10
29	012977	Tool Box	1
30	F400-0002	Main Tank Top	1
	F400-0009-03	Narrow Tank Top Support	3 (280) / 2 (330) / 6 (400)
	F400-0009-04	Wide Tank Top Support	0 (280) / 2 (330) / 2 (400)
31	F330-0078	Tool Box Mount	1
32	005619	U Bolt For 1-1/4" Round Pipe	2
33	041371	Dust Cap w/Gasket-Main Tank Drain	1
34	005726	Fuel Tank Cap	1
35	012693	Poly Fuel Tank	1
36	012694	Fuel Gauge	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

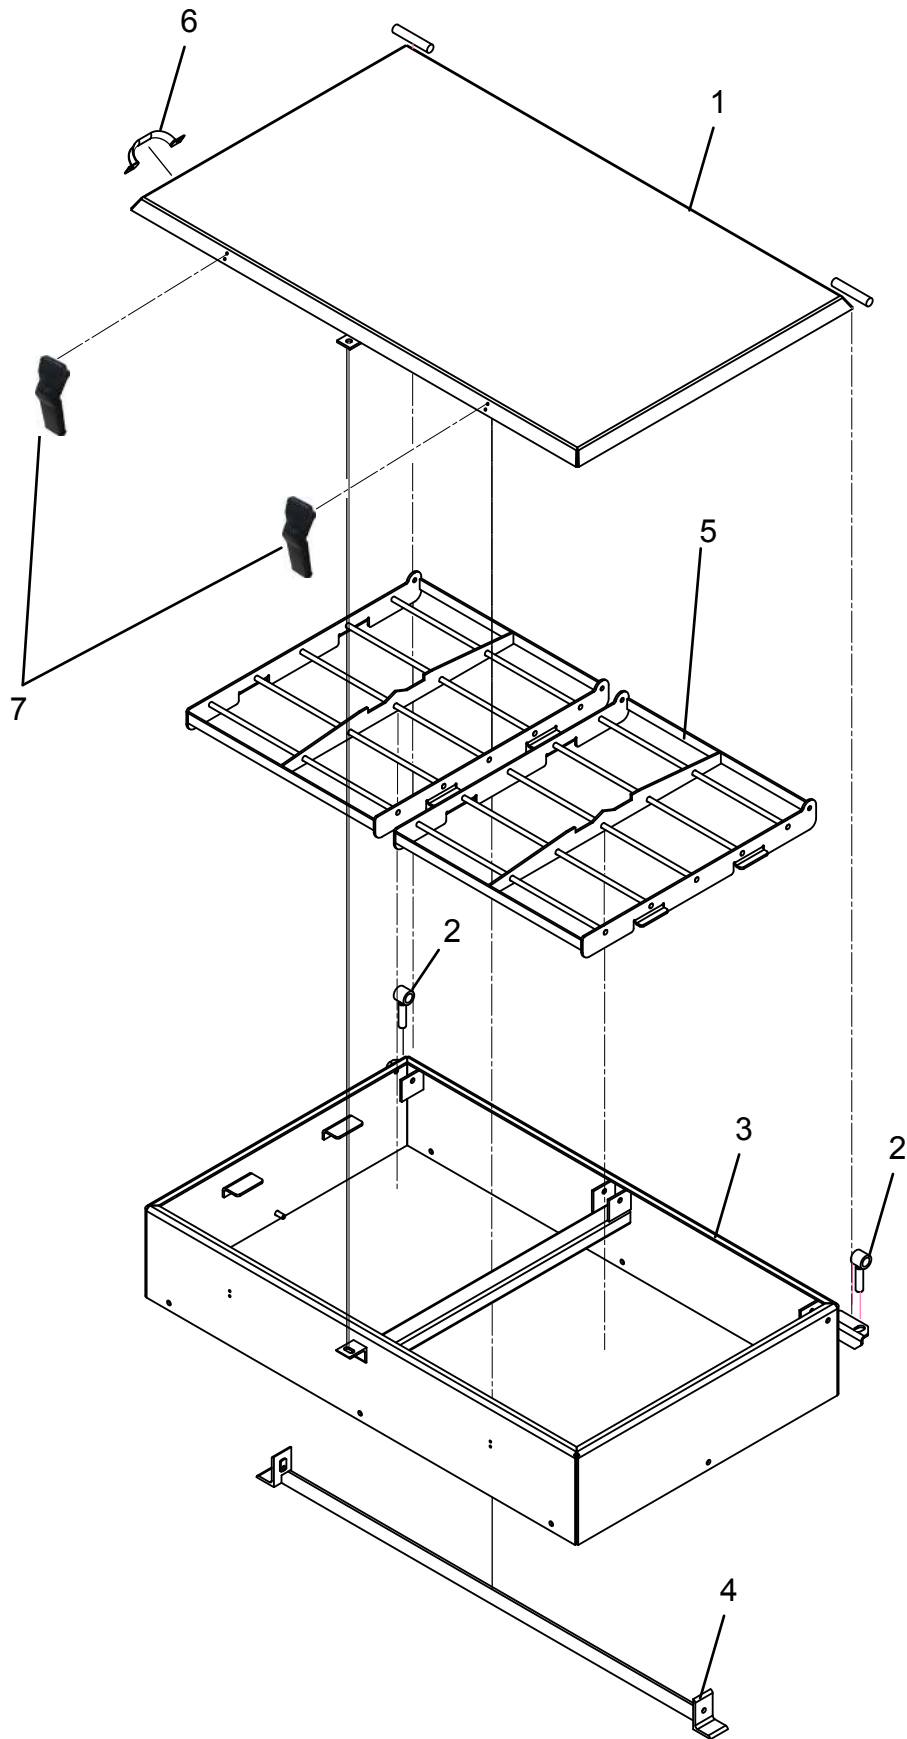


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

HATCH VIEW

Ref. No.	Part Number	Description	No. Req'd
1	012909	Hatch Lid Weldment	1
2	070627	Lid Hinge Weldment	2
3	012903	Hatch Liner Weldment	1
4	012938	Safety Cross Strap Weldment	1
5	012834	Bag Cutter Stainless	2
6	002909	Handle	1
7	005433	Latch	2

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

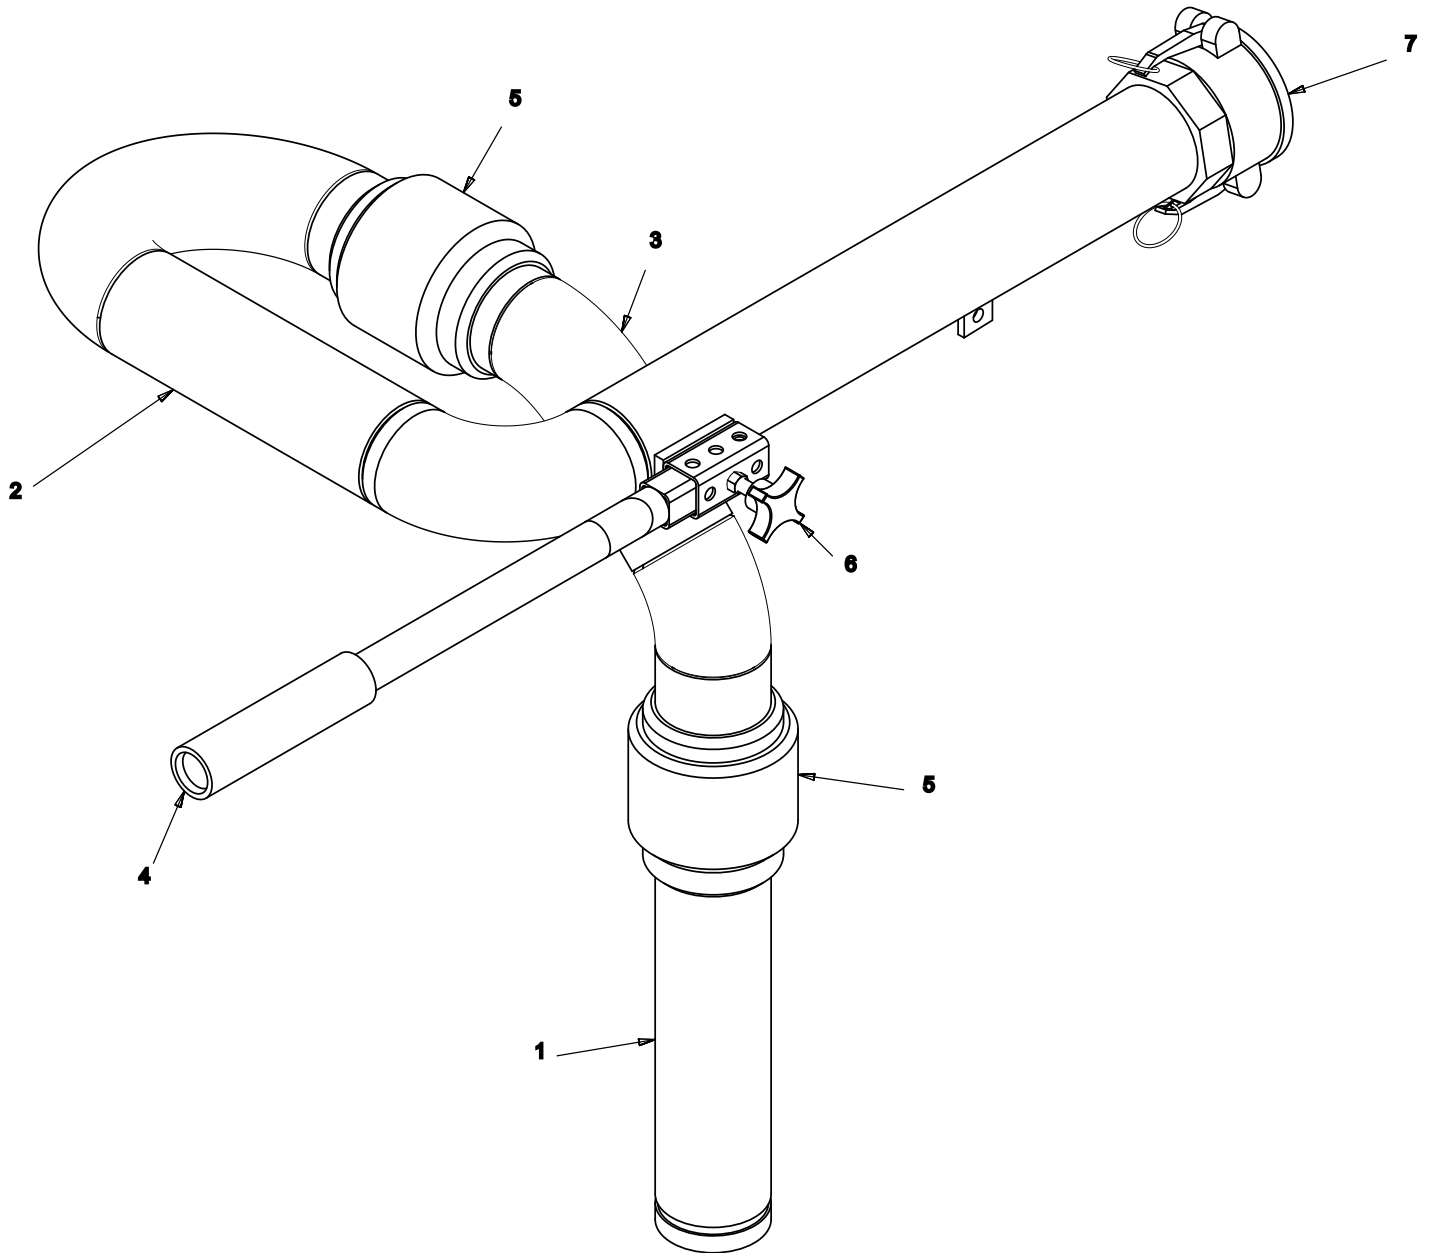


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

DISCHARGE BOOM ASSEMBLY

TITAN280/TITAN330/TITAN400

Ref. No.	Part Number	Description	No. Req'd
	012898	3" Discharge Boom Assembly	1
1	12900-01	Boom Stand Pipe	1
2	012896	Upper Boom Discharge Weldment	1
3	012897	Lower Boom Discharge Weldment	1
4	013016	Titan Boom Handle	1
5	012888	3" Straight Swivel	2
	013043	3" Swivel Repair Kit	1
6	011914	Black Knob/Set Screw	1
7	012886	3" Coupler	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

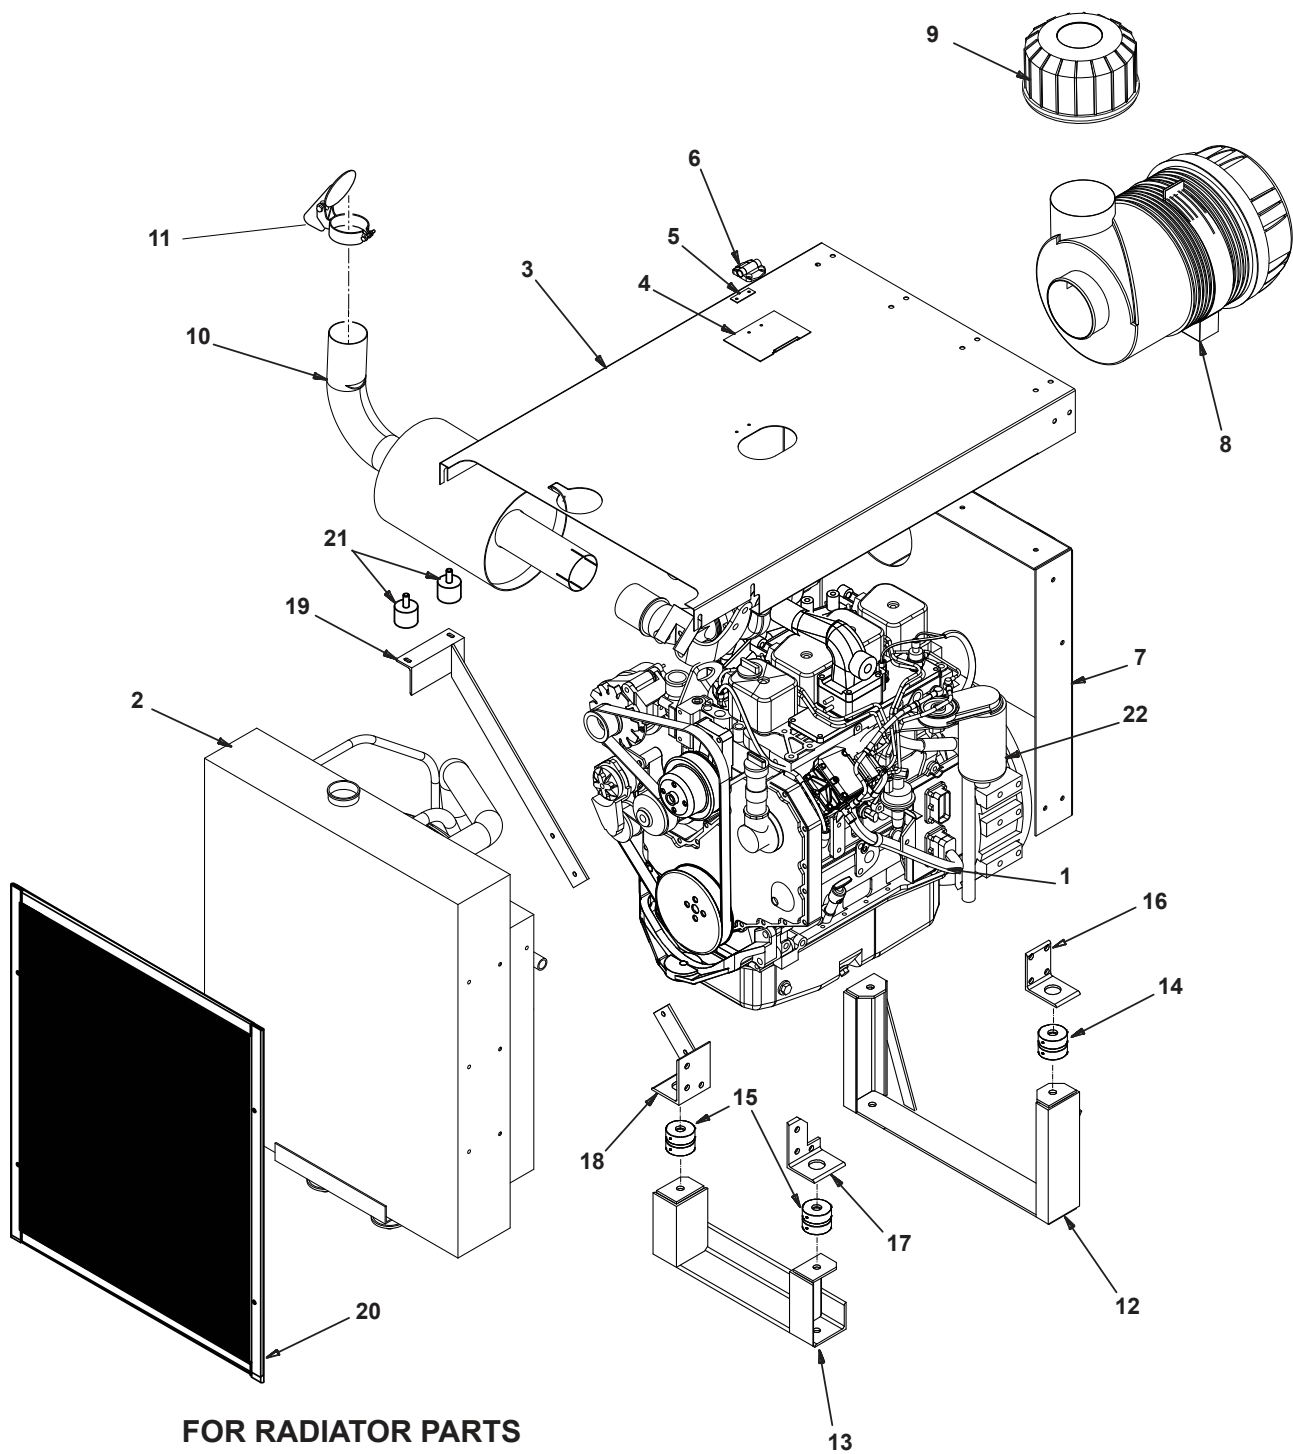

**FOR RADIATOR PARTS
REFER TO PAGES 44-45**





**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

ENGINE & RADIATOR

Ref. No.	Part Number	Description	No. Req'd
1	013107	Cummins Tier III Engine	1
2	013036	Radiator / Charge Air Cooler	1
3	F260-0032	Top Engine Sheet Metal	1
4	F260-0039	Oil Filler Door	1
5	F260-0040	Hinge Spacer	1
6	055669	Door Positioning Hinge	1
7	023906	Rear Engine Sheet Metal	1
8	023907	Breather Assembly	1
	023909	Main Filter	1
	023910	Safety Filter	1
9	023898	Filter Cap	1
10	012963	Modified Cummins Muffler	1
11	012991	3" Rain Cap	1
12	013067	Rear Engine Riser Weldment	1
13	013068	Front Engine Riser Weldment	1
14	013065	Rear Engine Isolator	2
15	013066	Front Engine Isolator	2
16	013069-03	Rear Engine Foot	2
17	013069-01	Front Engine Foot - L.H.S.	1
18	013077-01	Lower Muffler Mount	1
19	013077-02	Upper Muffler Mount	1
20	F400-0037	Radiator Screen	1
21	075206	Rubber Stud Mount	2
22	CU-FF5612-01	Main Fuel Filter	1
23	*CU-FF5612	Remote Fuel Filter	1
24	*CU-LF3970	Oil Filter	1
22	*F400-0055	Upper CPU Mount	1
23	*F400-0056	Lower CPU Mount	1

NOTE: Part number with an Asterik (*) is not shown

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

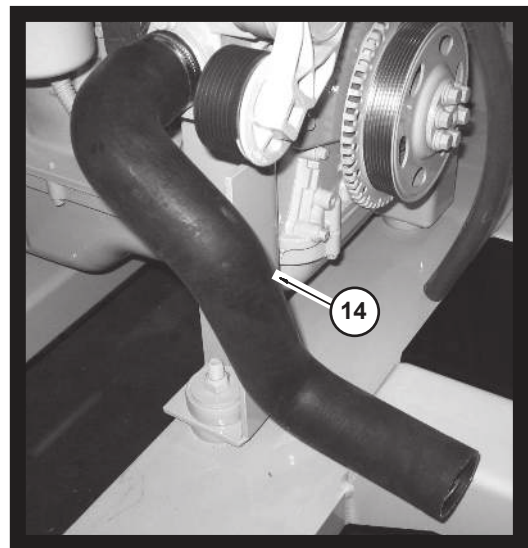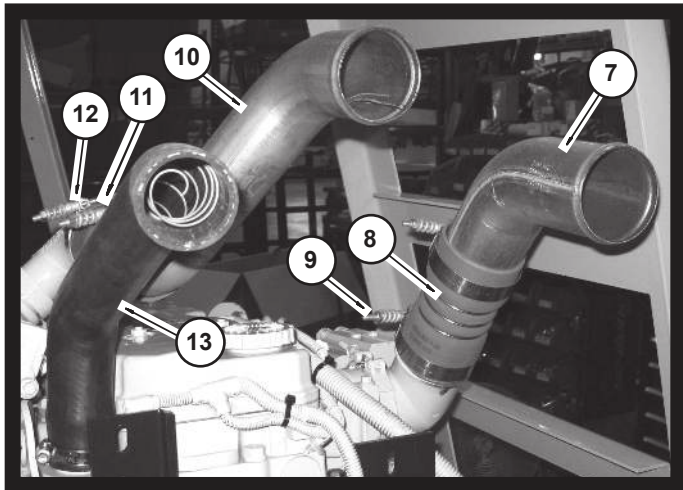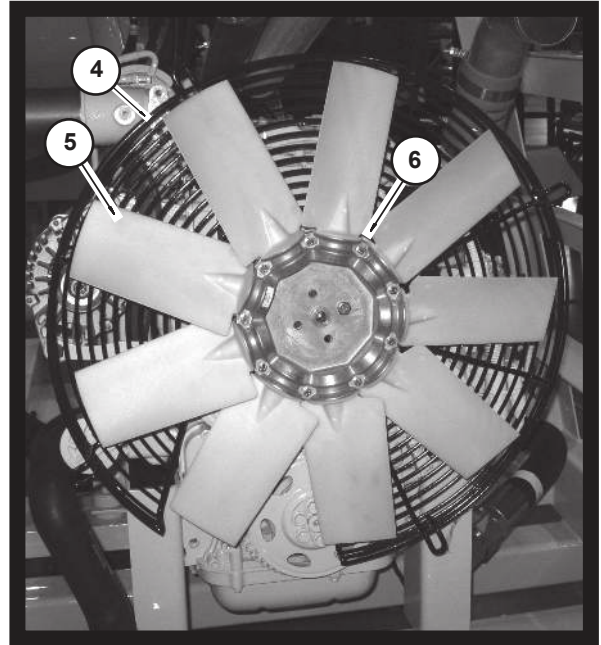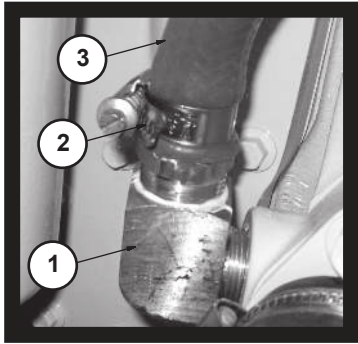


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

RADIATOR PARTS

Ref. No.	Part Number	Description	No. Req'd
1	CUM11000378	90° Elbow Fitting	1
2	CUM80000207	Hose Clamp	4
3	CUM50000491	3/4" Heater Hose	1
	CUM50000499	3/8" Heater Hose (Not Shown)	1
4	CUM110000827	Fan Guard	1
5	CUM10000737	Blower Fan	1
6	CUM3910128	Spacer	1
7	CUM50000887	Large Charge Air Cooler Tube	1
8	CUM50000437	Charge Air Cooler Hose 3" ID	1
9	CUM80000435	2-1/2" Charge Air Cooler Clamp	2
10	CUM50000886	Small CHarge Air Cooler Tube	1
11	CUM50000600	Charge Air Cooler Hose 2-1/2" ID	1
12	CUM80000220	3" Charge Air Cooler Clamp	2
13	CUM50000606	Upper Radiator Hose	1
14	CUM50000605	Lower Radiator Hose	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

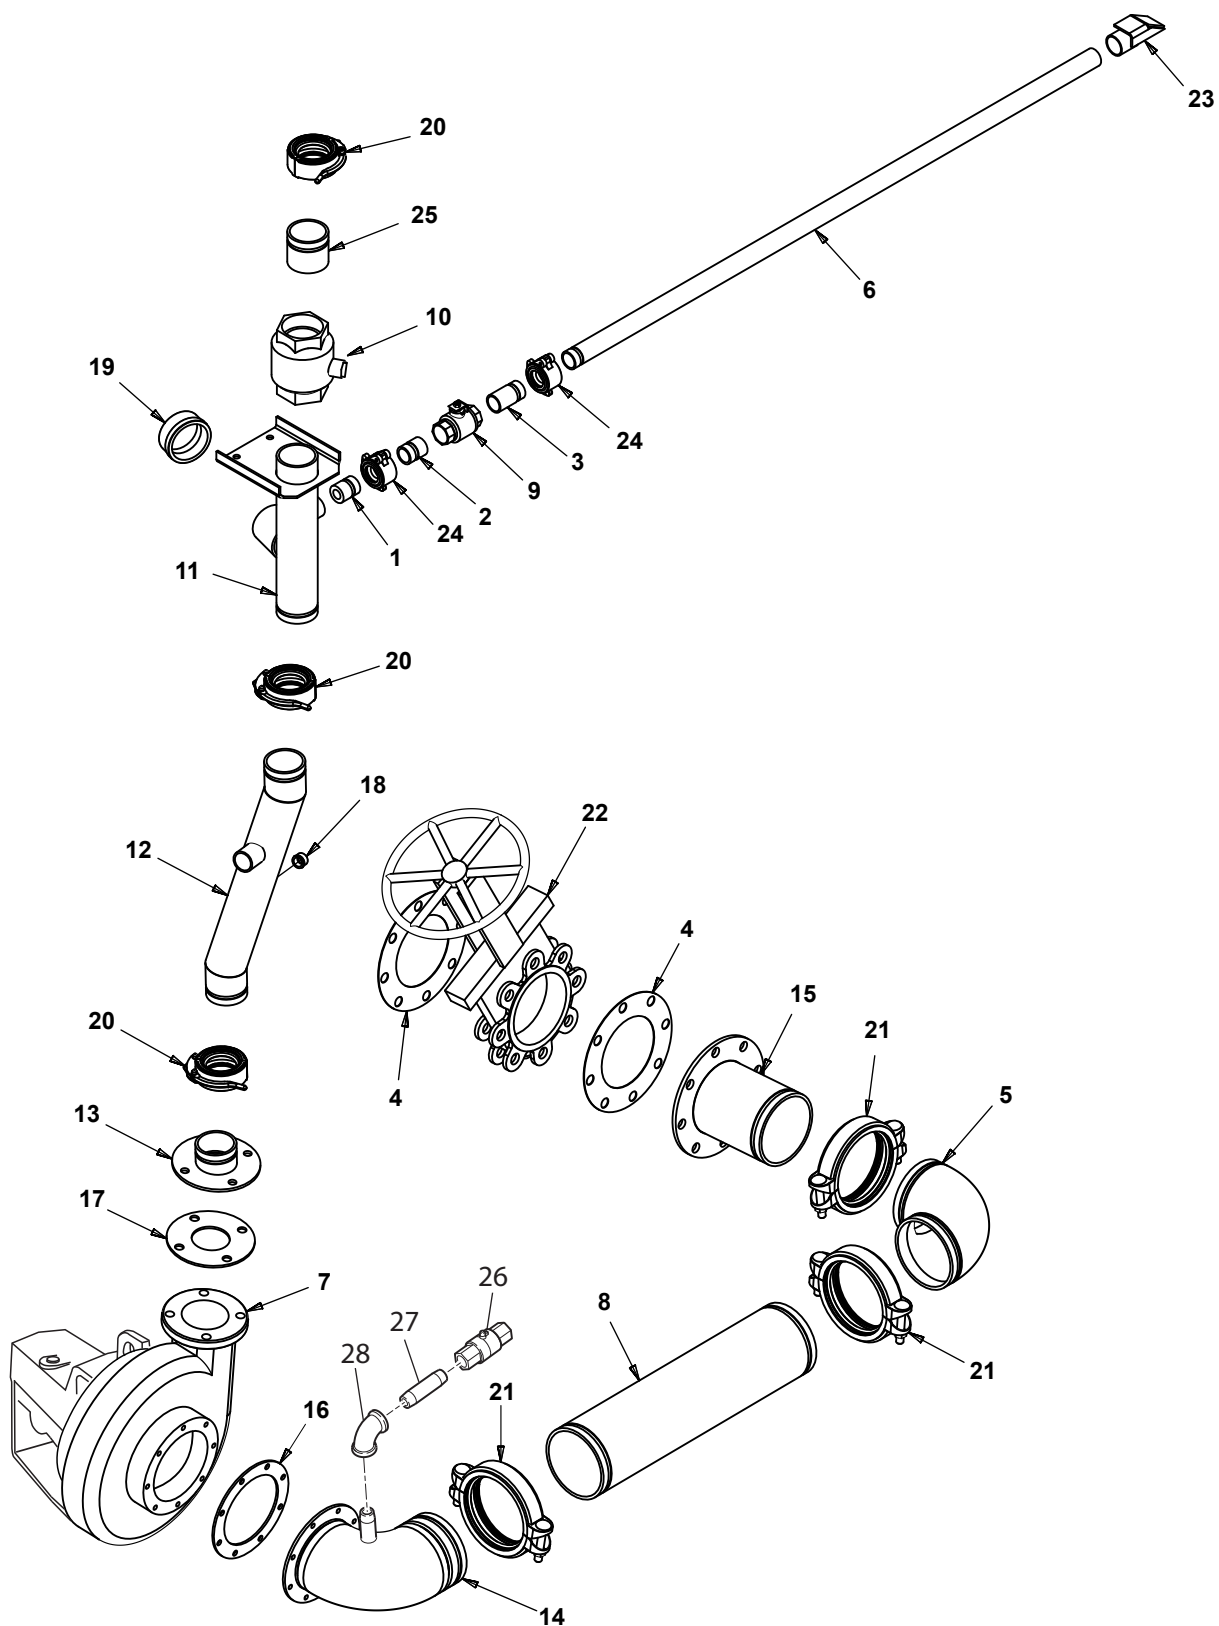


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

CLUMP, PIPING & DISCHARGE ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	011727-09	Recirculation Nozzle	1
2	011727-10	Recirculation Connector	1
3	011727-11	Recirculation Connector	1
4	012316	Flange Gasket	2
5	012385	6" Victaulic Elbow	1
6	012726-03	Recirculation Pipe	1
7	012976	Slurry Pump	1
8	012900-05	Suction Pipe	1
9	012901	1-1/4" Stainless Steel Ball Valve	1
9A	012971	Valve Handle	1
10	012902	3" Stainless Steel Ball Valve	1
11	012922	RH Discharge Valve Stand Pipe	1
12	012931	Lower Discharge Boom Weldment	1
13	012932	Pump Flange Weldment	1
14	012933	Suction Flange Weldment	1
15	012935	Elbow Suction Piping	1
16	012961-01	Suction Pump Gasket	1
17	012961-02	Pump Discharge Gasket	1
18	160259	1/2" Pipe Cap	1
19	160266	3" Pipe Cap	1
20	002438	3" Victaulic Clamp	3
	002439	Clamp Seal	1 Per
21	041368	6" Victaulic Clamp	3
	041368G	Clamp Seal	1 Per
22	041369	6" Knife Gate Valve	1
23	05703-02	1-1/4" Coupling Deflector Weldment	1
24	006721	1-1/4" Pipe Clamp	2
	006722	Clamp Seal	1 Per
25	080666-04	Suction Valve Pipe (GOE/TOE)	1
26	012457	1/2" Dia. Stainless Steel Ball Valve	1 Per
27	160428	1/2" Dia. x 4" Lg. SCH 40 Nipple	1 Per
28	160006	1/2" Dia. x 90° Elbow	1 Per

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

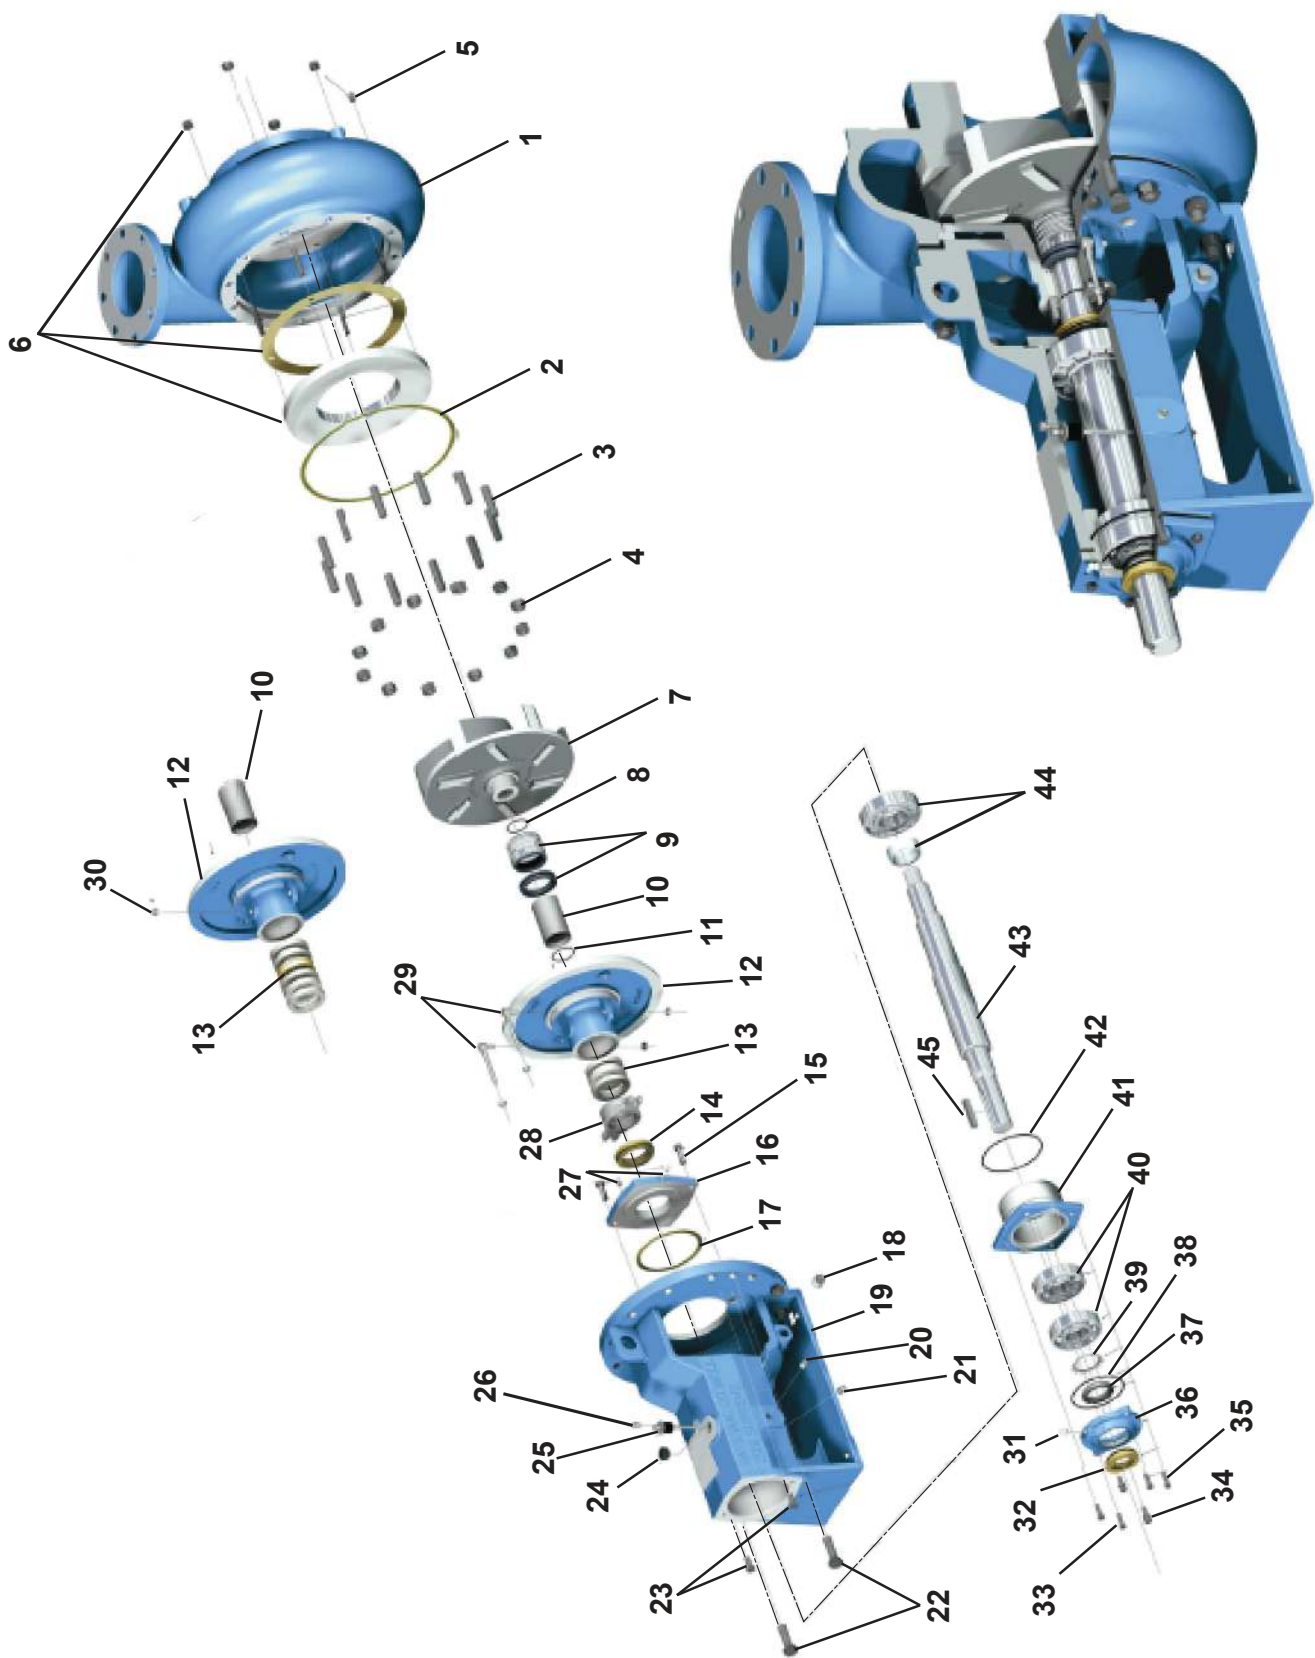


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

PUMP ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	012976-1	Casing w/Wear Pad 4x3x13	1
2	012976-1A	Casing Gasket	1
3	012976-1C	Casing Stud	12
4	012976-1B	Casing Nut	12
5	012976-1E	Casing Wear Pad 4x3x13	1
6	012976-1D	Wear Pad (Includes stds, nuts & Gasket)	1
7	012976-02	Impeller 4x3x13 Open	1
8	012976-2A	Impeller Seal	1
9	012976-5A	Mechanical Seal	1
10	012976-7A	Shaft Sleeve	1
11	012976-7C	Shaft Sleeve Seal	1
12	012976-3	Stuffing Box	1
13	012976-5B	Shaft Packing	1
14	012976-10C	Seal	1
15	012976-10D	Cover Bolt	2
16	012976-10A	Inboard Bearing Cover	1
17	012976-10B	Cover Gasket	1
18	012976-9C	Drain Plug	1
19	012976-9	Frame	1
20	012976-9B	Oil Plug	1
21	012976-9A	Oil Drain Plug	1
22	012976-9G	Casing Bolt	2
23	012976-3A	Stuffing Bolt	2
24	012976-9E	Oil Fill Plug	1
25	012976-9F	Dip Stick	1
26	012976-9D	Breather	1
27	012976-10E	Grease Fitting	1
28	012976-4	Packing Gland Assembly	2
29	012976-6	Gland Bolt	2
30	012976-3B	Grease Fitting	1
31	012976-13A	Bearing Cover	1
32	012976-13C	Bearing Cover Seal	1
33	012976-13D	Bearing Cover Bolt	2
34	012976-12C	Housing Nut	2
35	012976-12B	Housing Bolts	4
36	012976-13	Bearing Cover	1
37	012976-13B	Bearing Cover O-Ring	1
38	012976-14B	Bearing Locknut	1
39	012976-14A	Bearing Lockwasher	1
40	012976-14	Bearing	2
41	012976-12	Bearing Housing	1
42	012976-12A	Housing Seal	1
43	012976-7	Shaft	1
44	012976-11	Inboard Bearing	1
45	012976-7B	Shaft Key	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**


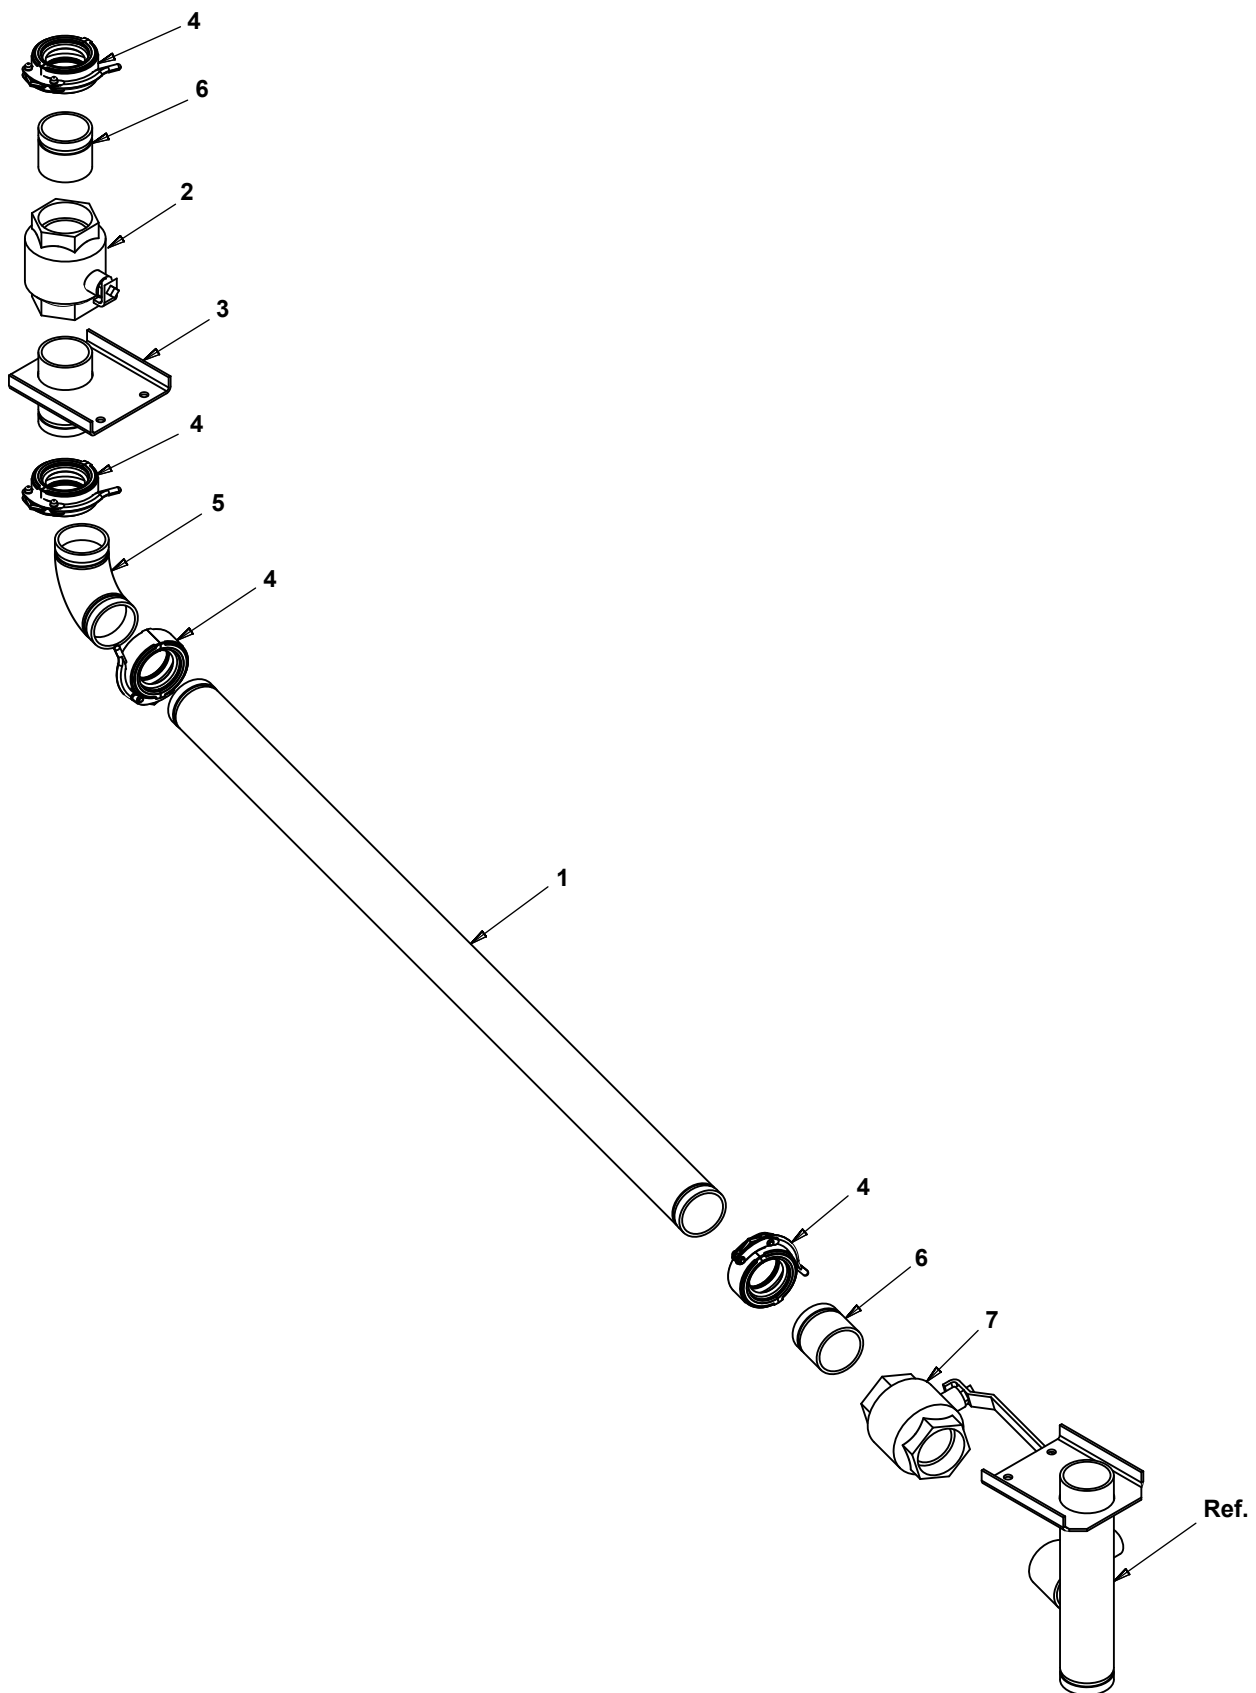


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

2ND DISCHARGE BOOM ASSEMBLY-OPTIONAL

Ref. No.	Part Number	Description	No. Req'd
1	012900-04	Long Boom Connector Pipe	1
2	012902	3" Stainless Steel Ball Valve	1
3	012921	LH Discharge Valve Stand Pipe	1
4	002438	3" Victaulic Clamp	4
	002439	Clamp Seal	1 Per
5	002868	3" Victaulic Elbow	1
6	080666-04	Suction Valve Pipe (GOE, TOE)	2
7	080739	Discharge Valve	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

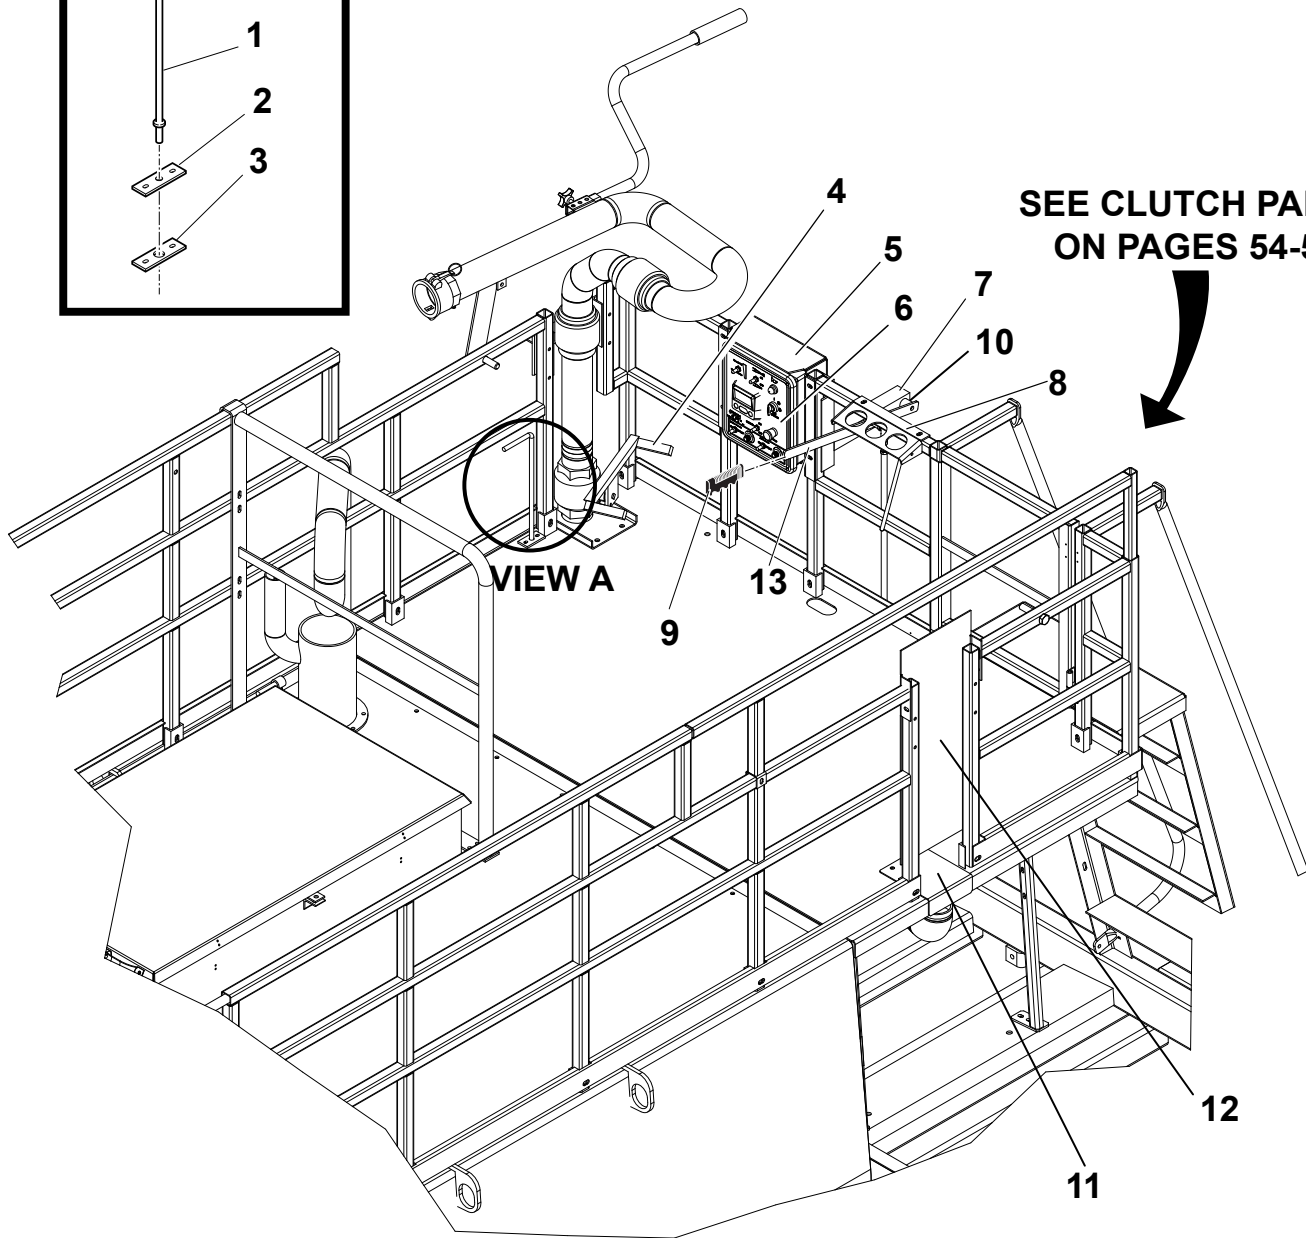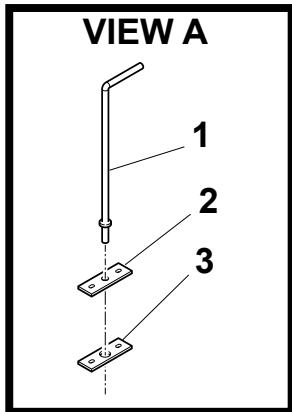


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

CONTROLS

Ref. No.	Part Number	Description	No. Req'd
1	013022	Handle Extension	1
2	013022-02	Top Seal	1
3	013022-03	Bottom Seal	1
4	013086	Foot Pedal Weldment	1
4A	013082	Foot Pedal Bushing	1
5	F400-0035	Control Box Mount	1
6	013095	TITAN400 Control Box	1
7	013026	Clutch Lever Mounting Weldment	1
	006737	Ball Joint (Not Shown)	2
	012780-14	Clutch Rod Assembly (Not Shown)	1
8	F330-0075	Nozzle Holder	1
9	000427	Handle Grip	1
10	013026-04	Handle Spacer	1
11	F400-0034	Platform Cover Plate	1
12	F400-0022	Boom Closure Plate	1
13	013026-01	Handle	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

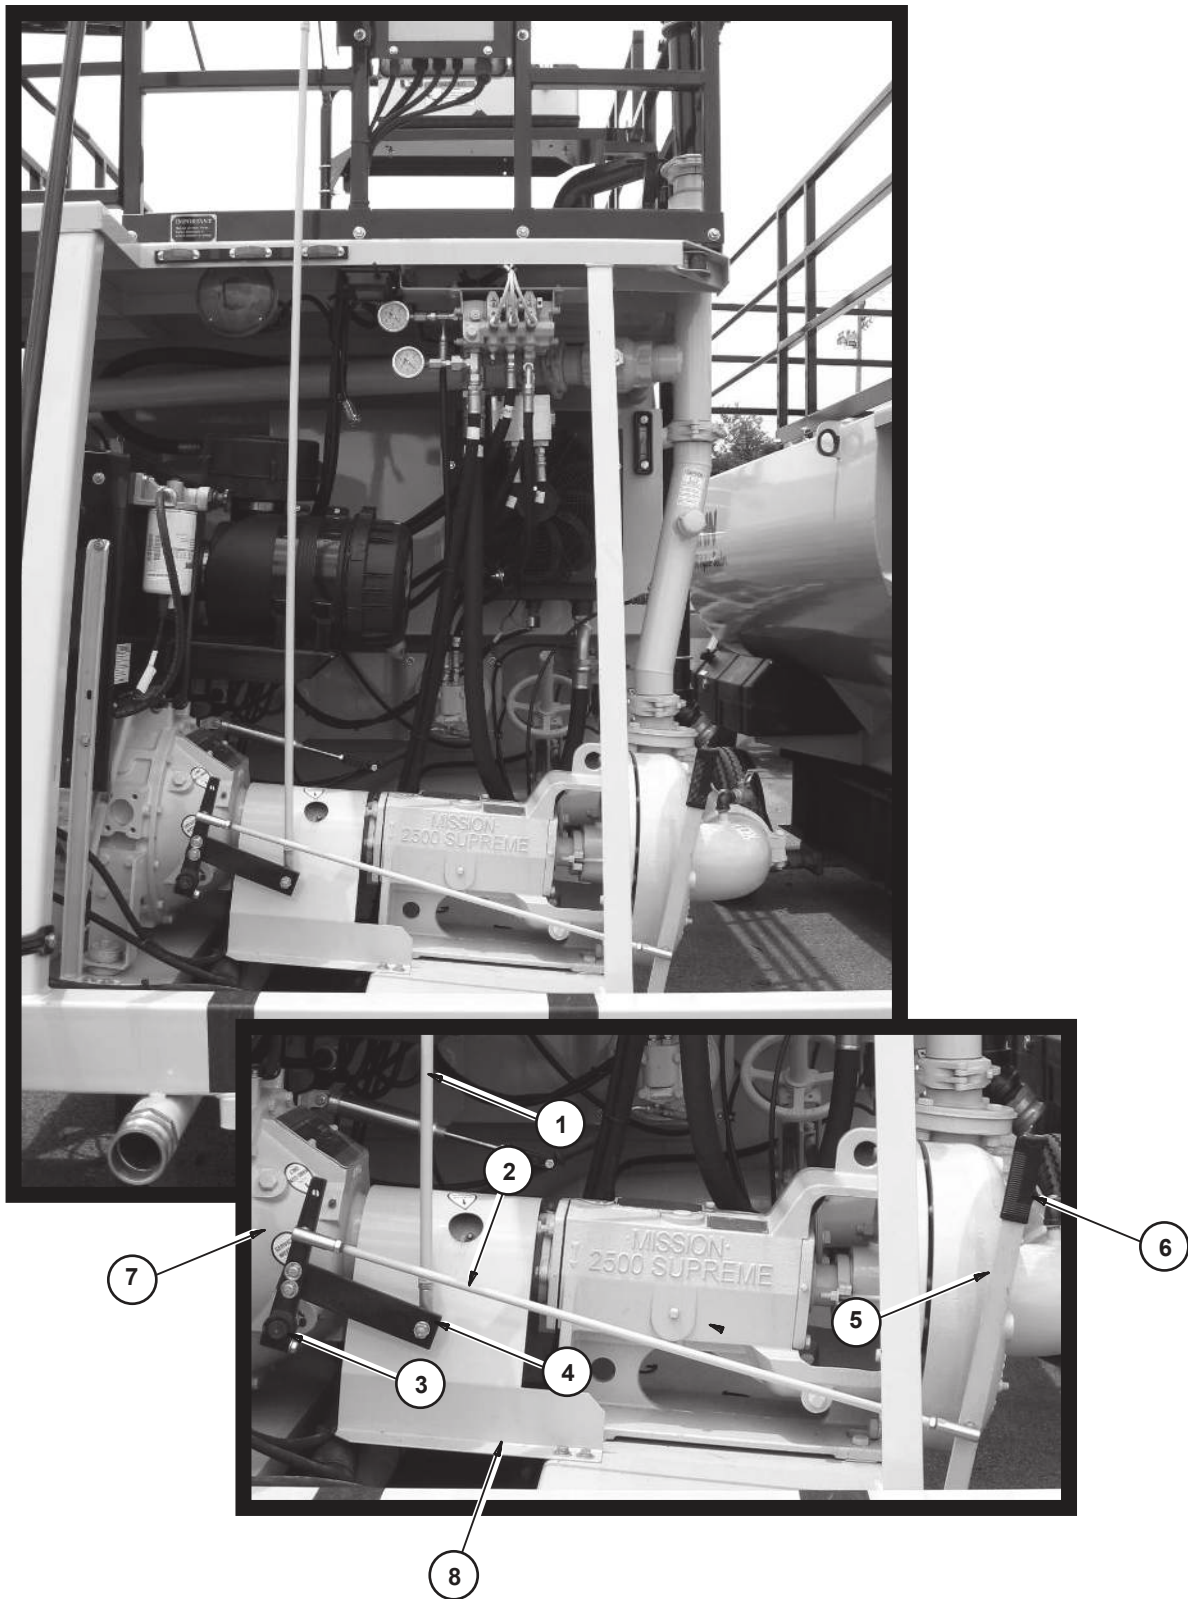

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

CLUTCH

Ref. No.	Part Number	Description	No. Req'd
1	012780-14	Clutch Rod - Platform	1
2	005182-08	Clutch Rod - Ground Level	1
2A	006737	Ball Joint	2
3	031219	Clutch Lever	1
4	013027	Clutch Handle Pivot Plate	1
5	012012-06	Clutch Handle	1
6	000427	Handle Grip	1
7	012887	PTO Assembly	1
8	F400-0054	Coupling Guard	1
9	*013078	Coupling Half - Engine	1
10	*013079	Coupling Half - Pump	1
11	*013080	Coupling Element	1

NOTE: Part number with an Asterik (*) is not shown


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

INTERNAL CONTROL BOX WIRING

Part Number	Description	No. Req'd
012739	Murphy Powerview	1
012940	Kar-Tech Valve Driver / Radio Receiver	1
013044	10 kohm Potentiometer	2
013071	Jumper Bar	10
013072	3-Pole Terminal Block	24
013074	Terminal Block End Cover	1
013075	Terminal Block w/ Fuse	4
013076	Fuse Block Jumper	1
013094	Potentiometer Knob	2
013096	Control Box Enclosure	1
013097	Sub Panel	1
013102	Terminal / Resistor Assembly	4
020886	Horn Button	1
023892	Powerview Cable Assembly	1
052076	Ignition Switch	1
055120	IDEC Relay	1
055123	IDEC Socket	1
055449	10-Amp Fuse	4
080525	Toggle Switch	2
080526	Switch Boot	4
366164	E-Stop Switch	1
FW71555	Toggle Switch	2
FW71749-02	30 Amp Relay	3

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

EXTERNAL CONTROL BOX WIRING


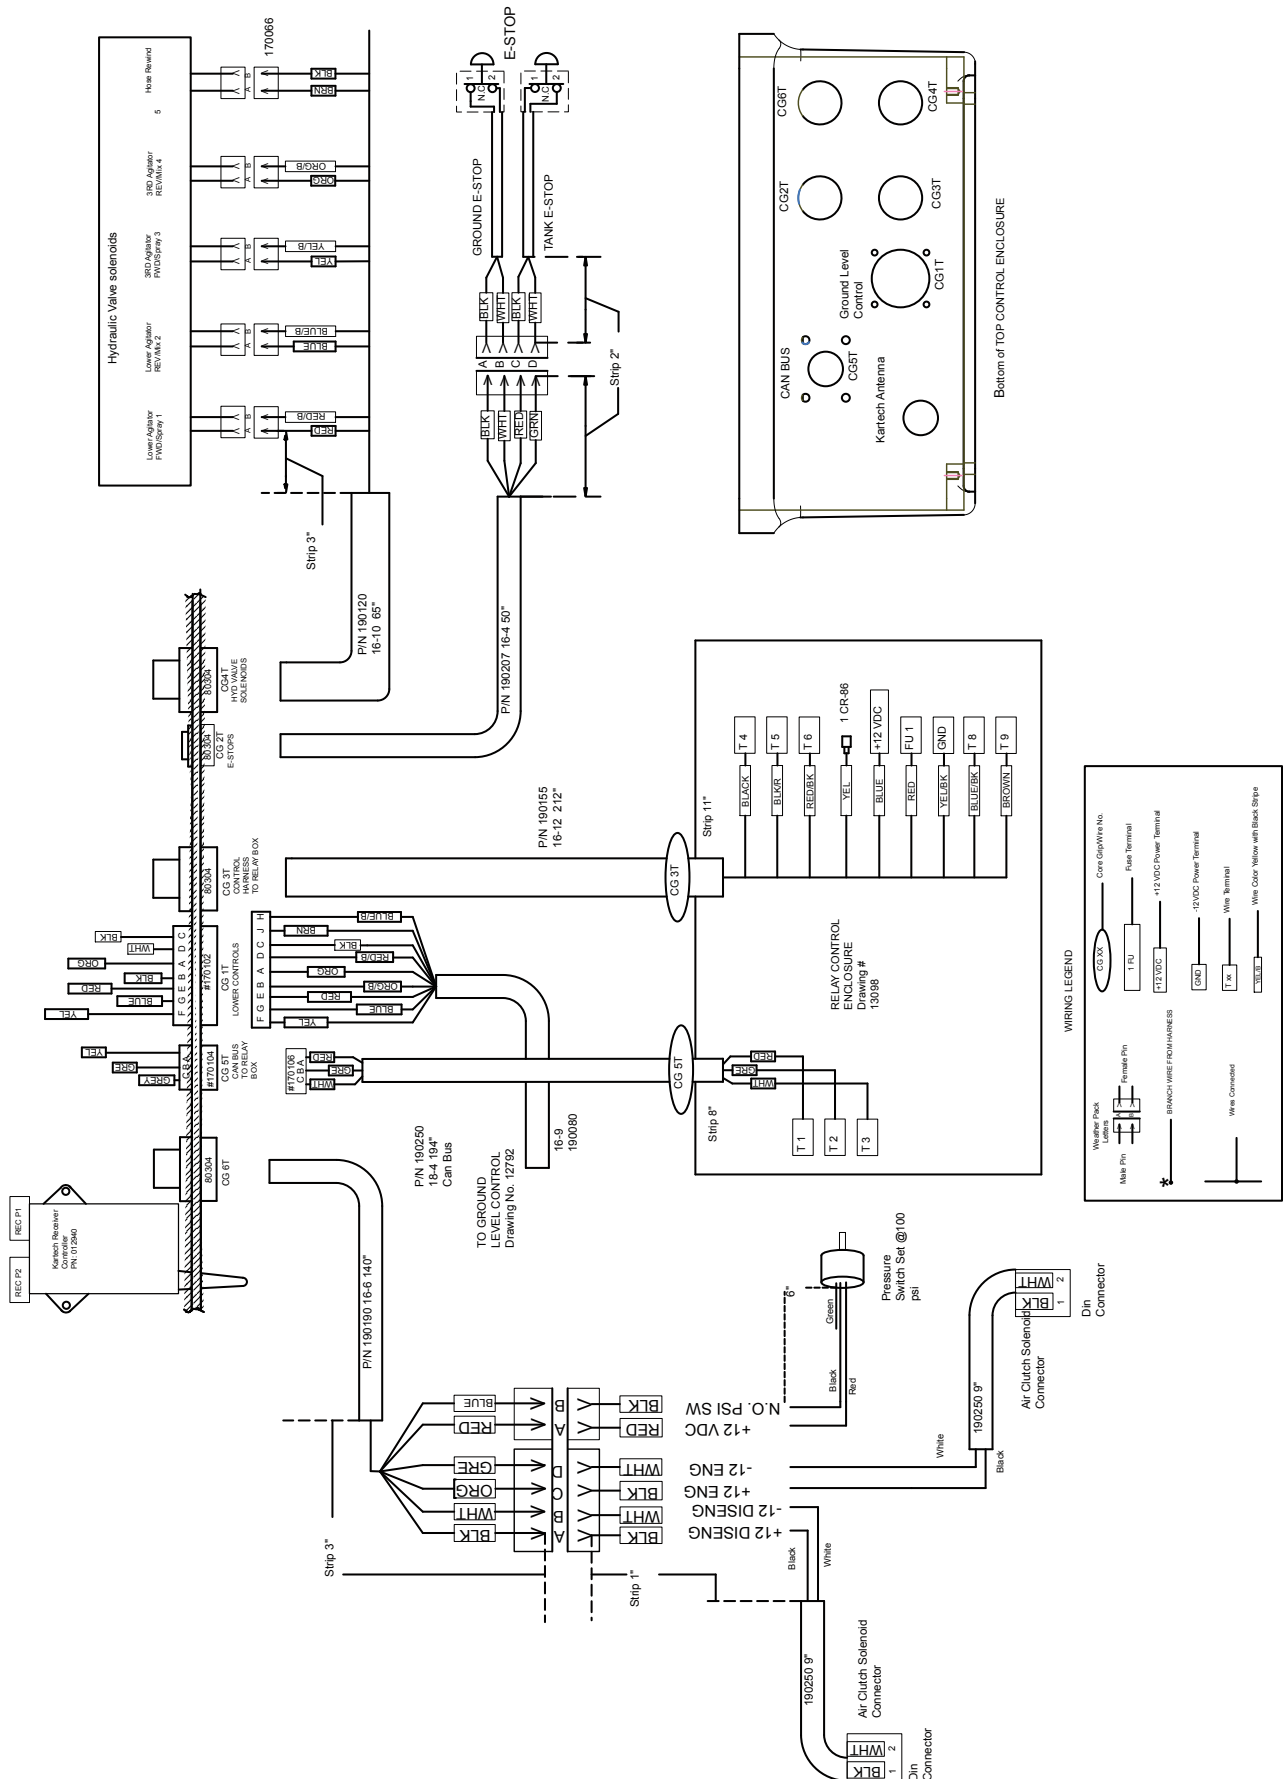


WHEN ORDERING PARTS, BE SURE TO STATE SERIAL NUMBER OF MACHINE



NOTES

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**



TITAN Relay Control

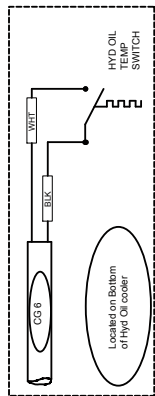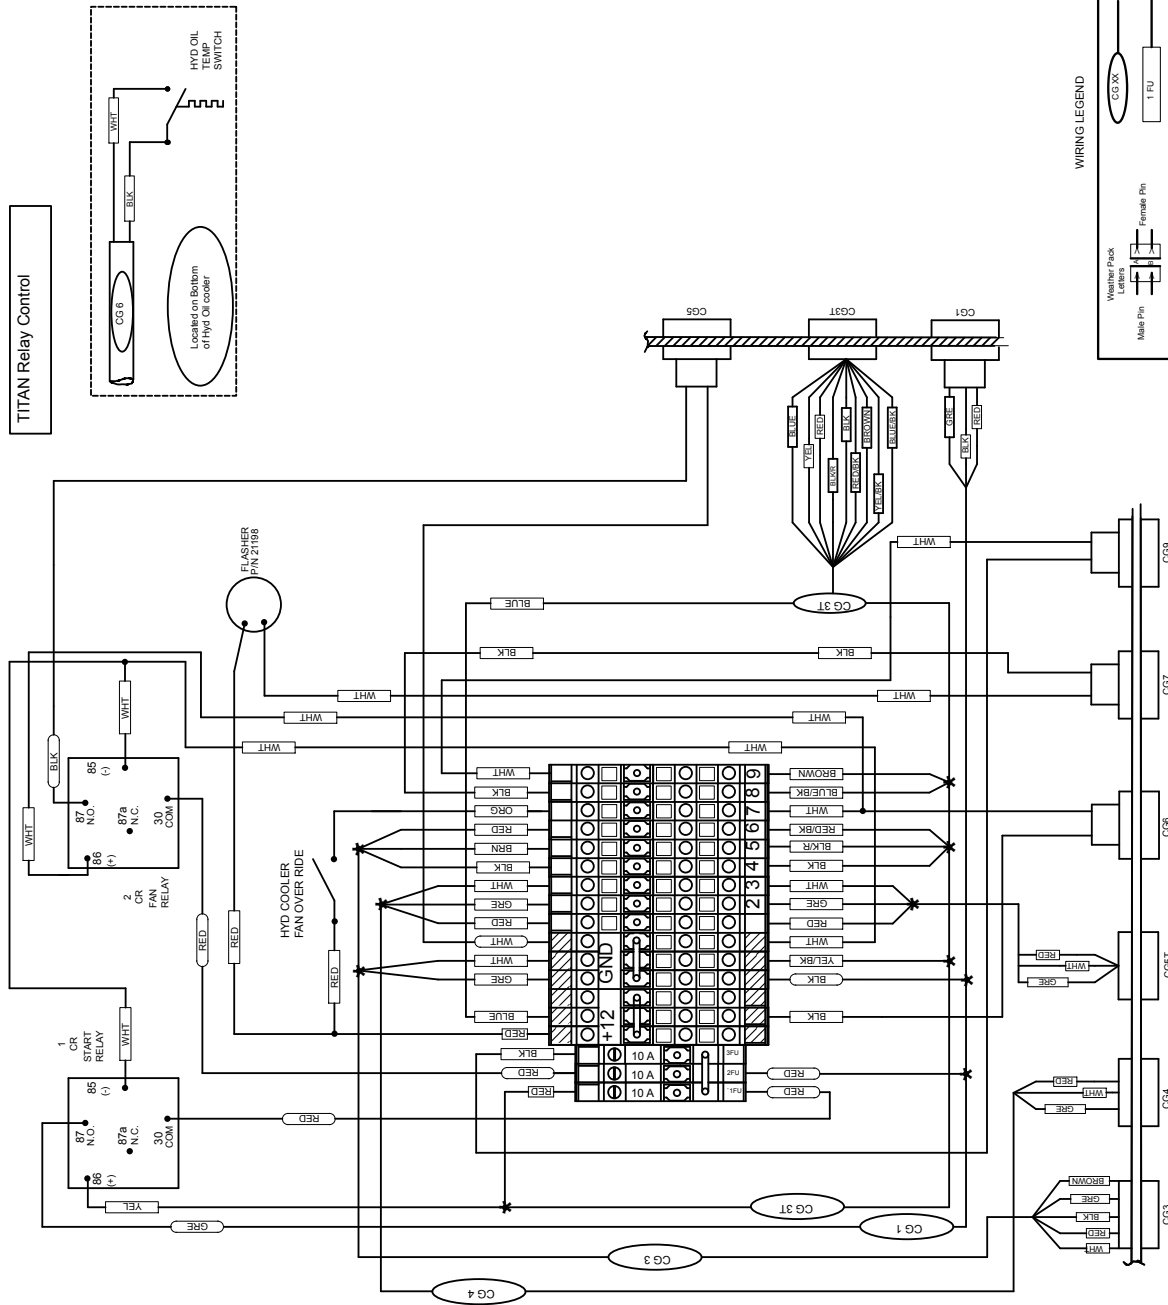

WIRING LEGEND

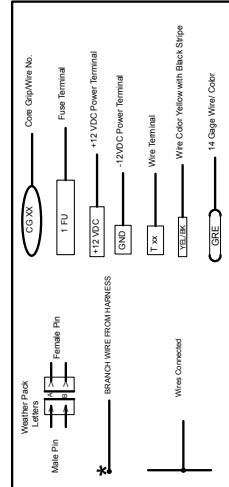


WHEN ORDERING PARTS, BE SURE TO STATE SERIAL NUMBER OF MACHINE

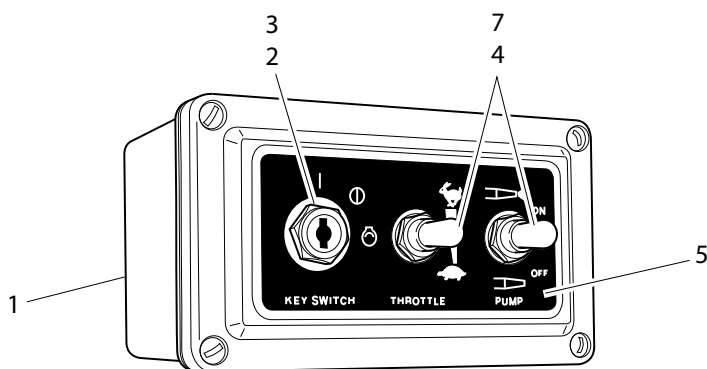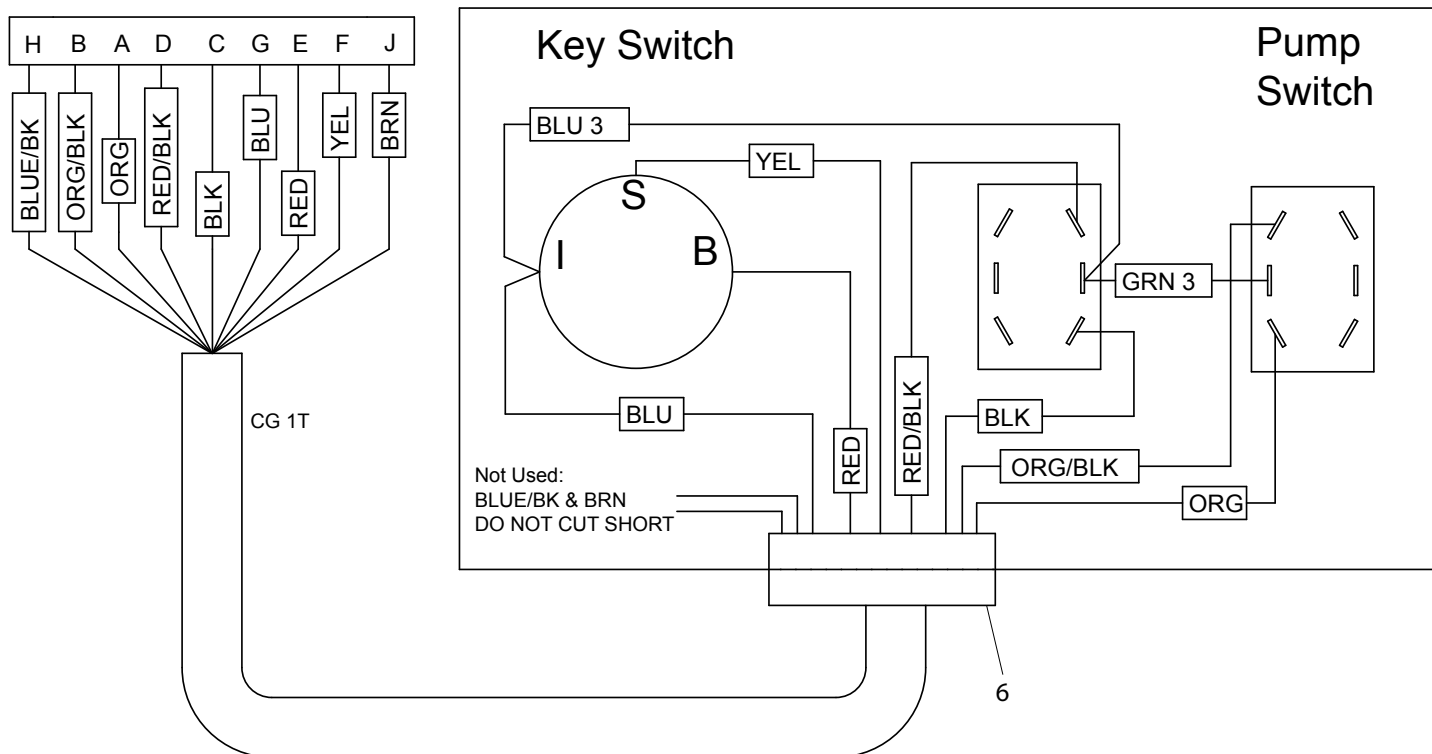

GROUND LEVEL CONTROLS

Ref. No.	Part Number	Description	No. Req'd
1	012792	Ground Level Control Box	1
2	052076	Ignition Switch	1
3	023076	Key For Ignition Switch	1
4	FW71555	Toggle Switch	2
5	012759-02	Ground Level Control Box Decal	1
6	080304	Water Tight Fitting	1
7	080526	Switch Boot	2

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

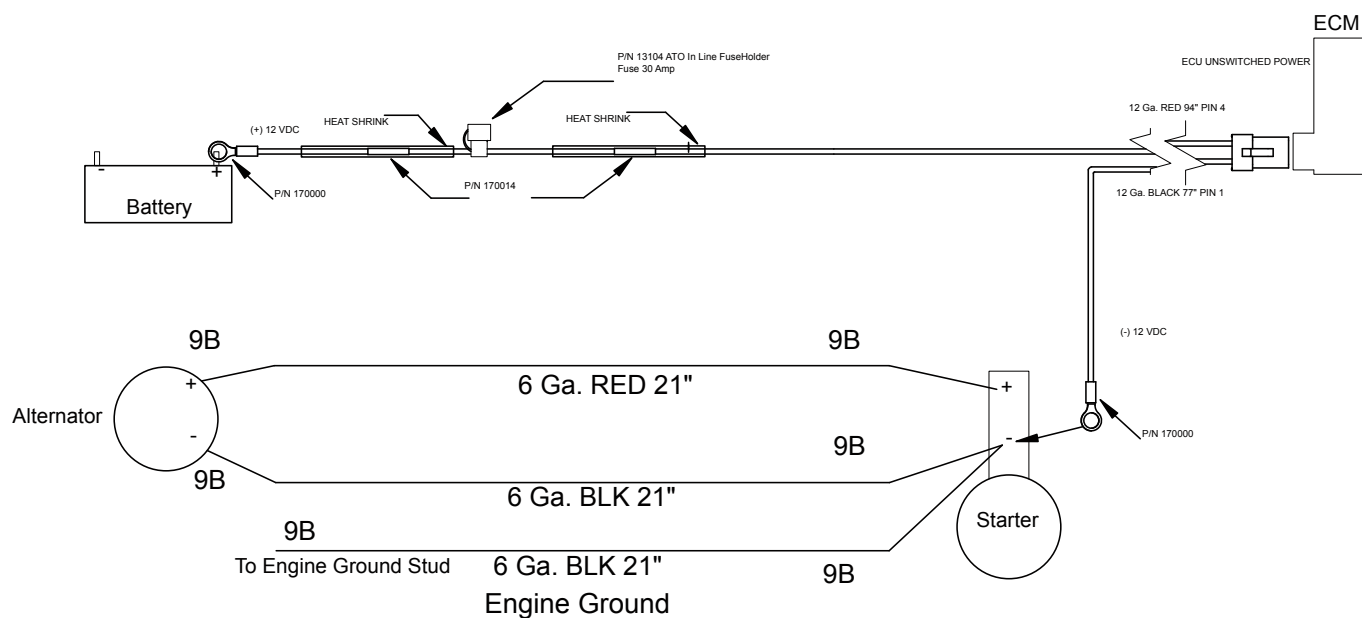

ENGINE WIRING HARNESS


Part Number	Description	No. Req'd
013104	In-Line Fuse Holder	1
052119	30-Amp Fuse	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

BEARING & SEAL ASSEMBLY


NOTE:

ITEM #1 (BEARING & SEAL ASSY)
INCLUDES ITEMS #2 - 9.

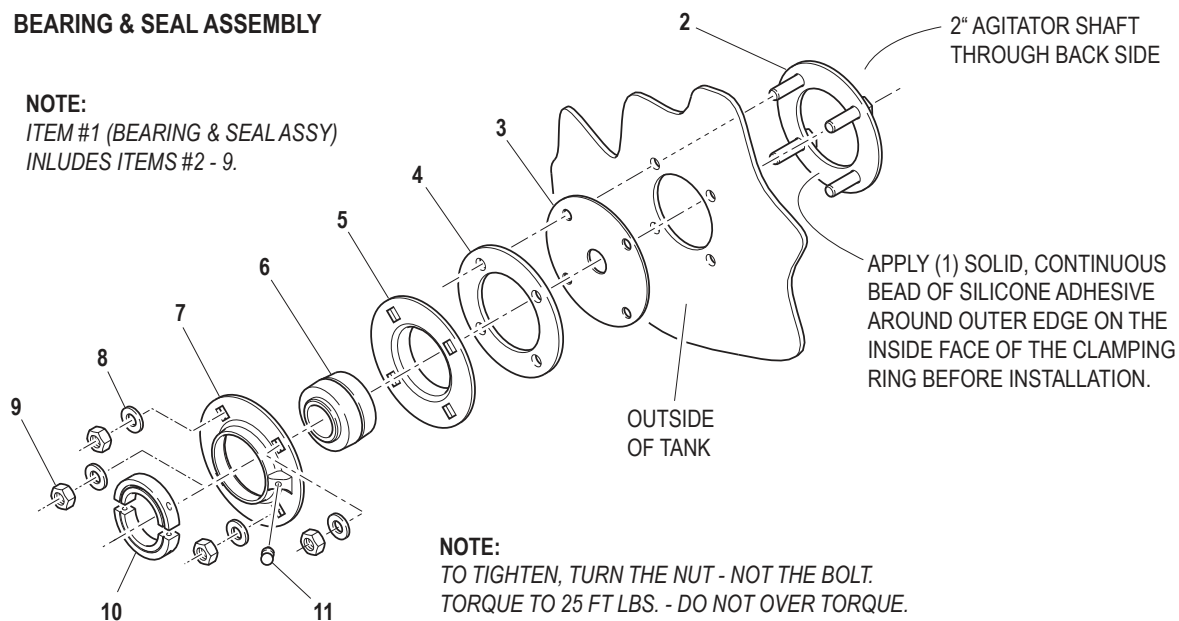

DRIVE END AGITATOR ASSEMBLYS


UPPER LEFT-HAND AGITATOR

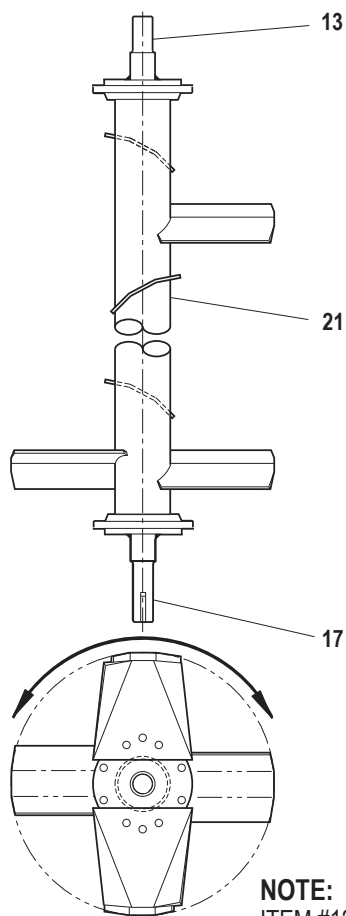

NOTE:

ITEM #12 (LEFT HAND
AGITATOR ASSEMBLY)
INCLUDES ITEMS #13 - 17.


LOWER LEFT-HAND AGITATOR

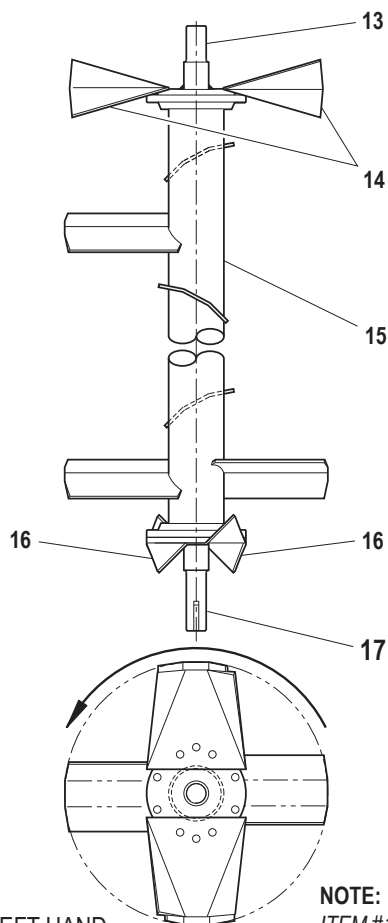

NOTE:

ITEM #18 (RIGHT HAND
AGITATOR ASSEMBLY)
INCLUDES ITEMS #19 - 23.

RIGHT-HAND AGITATOR


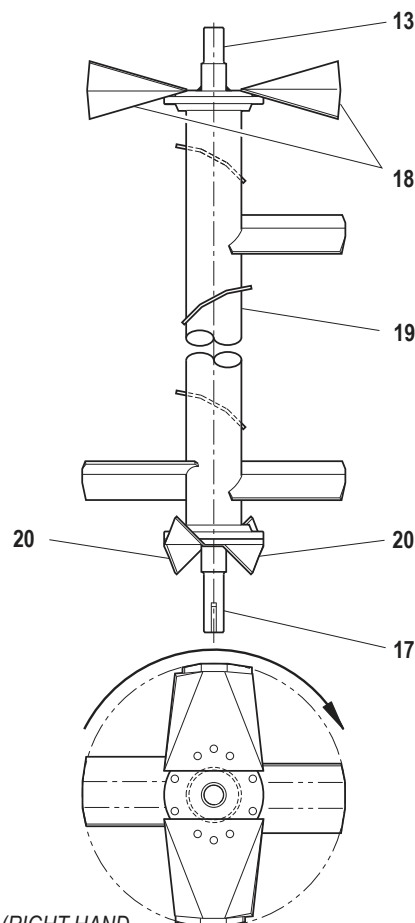


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

AGITATOR & SEAL ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	012529	Bearing and Seal Assembly	6
2	012527	Inner Clamping Ring w/Studs	1 per
3	012528	Agitator Shaft Seal	1 per
4	012525	Outer Clamping Ring	1 per
5	012451	Flangette	1 per
6	012450	2" Dia. Ball Bearing	1 per
7	012452	Flangette w/Lube Coupling	1 per
	008154	Lube Coupling Adapter	1 per
8	012605	Agitator Seal Washer	4 per
9	000Y08	Agitator Hex Nut	4 per
10	012625	2" Split Lock Collar	6
11	007705	Grease Fitting	6
	022407	Grease Line Elbow	6
	012520	Bulk Head Fitting	6
	012521	Grease Line Hose - Lower Agitator	4
	012956-16	Grease Line Hose - Upper Agitator	2
13	012496-01	Idle Stub Shaft	1 per
14	F330-0010-01	Bolt-On Paddle	2 per
15	012501-02	Left-Hand Agitator Section (TITAN280)	1 per
	012500-02	Left-Hand Agitator Section (TITAN330)	1 per
	SE0064-03-02	Left-Hand Agitator Assembly (TITAN400)	1
16	F330-0010-02	Bolt-On Paddle	2 per
17	012495-01	Drive Stub Shaft	1 per
18	F330-0010-01	Bolt-On Paddle	2 per
19	012501-01	Right-Hand Agitator Section (TITAN280)	1 per
	012500-01	Right-Hand Agitator Section (TITAN330)	1 per
	SE0064-03-01	Right-Hand Agitator Assembly (TITAN400)	1
20	F330-0010-02	Bolt-On Paddle w/Identification Hole	2 per
21	013037	Third Agitator (TITAN280)	1 Per
	SE0181-03	Third Agitator (TITAN 330)	1 per
	SE0224-01	Third Agitator (TITAN400)	1 per

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

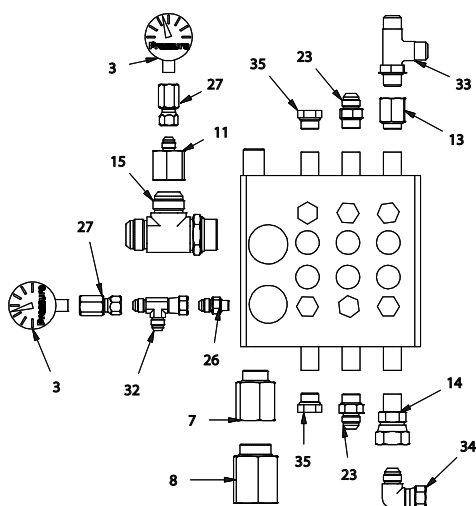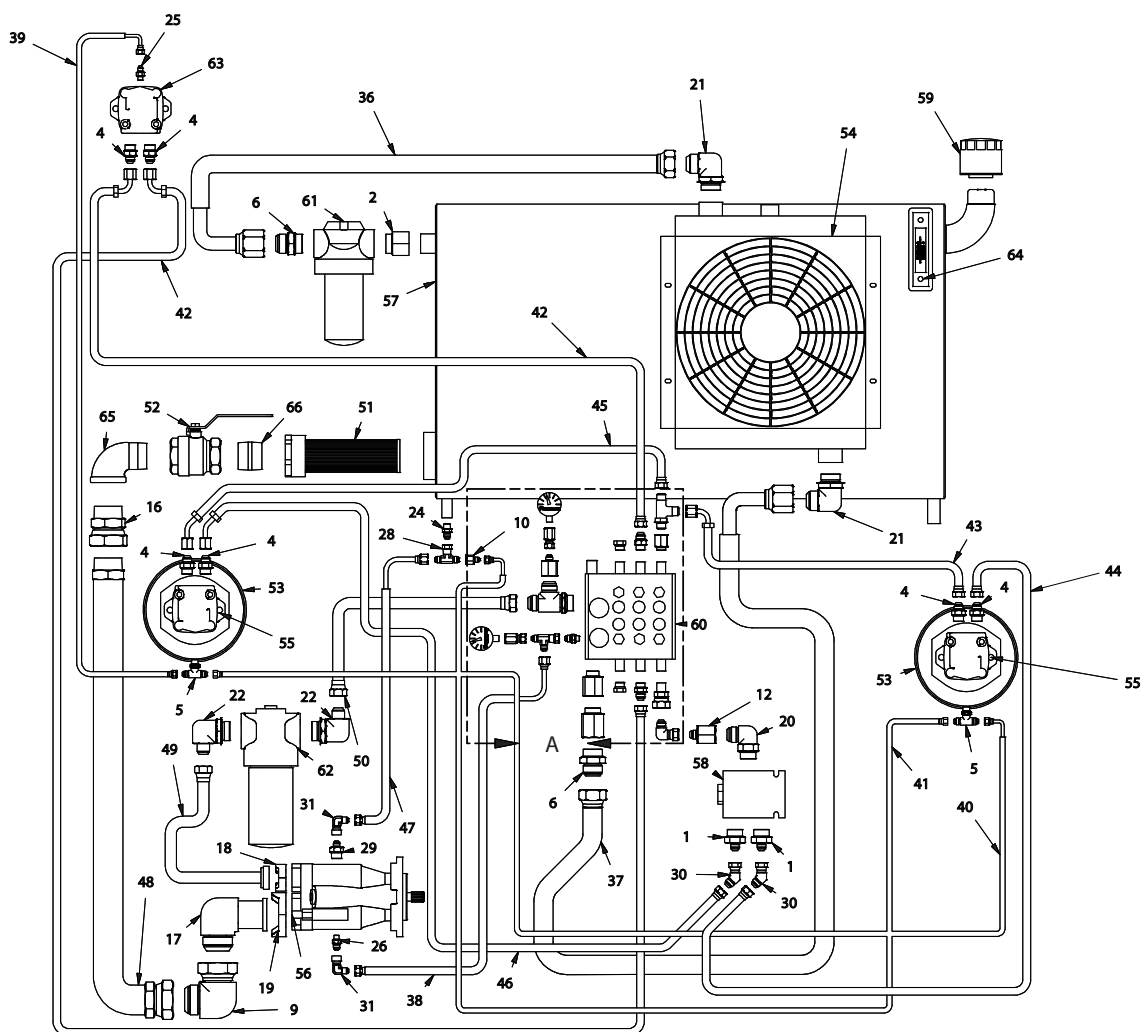


DETAIL A
SCALE 1 / 5

NOTE: ITEMS MARKED 1 THROUGH 53 ARE PART
OF HYDRAULIC HOSE & FITTING KIT #13051

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

HYDRAULIC SYSTEM

Ref. No.	Part Number	Description	No. Req'd
1	008606	MSAE-MJIC Adapter	2
2	008708	FNPT-MSAE Adapter	1
3	012044	Pressure Gauge	2
4	012086	MSAE-MJIC Adapter	6
5	012309	Branch Tee	2
6	012580	MSAE-MJIC Adapter	2
7	013000	SAE Reducer	1
8	013001	SAE Reducer	1
9	013004	JIC 90° Swivel Elbow	1
10	013005	JIC Reducer	1
11	013006	JIC Reducer	1
12	013007	JIC Reducer	1
13	013008	SAE Reducer	1
14	013009	MSAE-FJIC Swivel Adapter	1
15	013010	Run Tee	1
16	013011	NPT Swivel Adapter	1
17	013012	MJIC 90° Elbow Flange Adapter	1
18	013013	Flange Kit	1
19	013014	Flange Kit	1
20	023620	MSAE-MJIC 90° Elbow	1
21	052401	MSAE-MJIC 90° Elbow	2
22	053078	MSAE-MJIC 90° Elbow	2
23	055232	MSAE-MJIC Adapter	2
24	055238	MNPT-MJIC Adapter	1
25	055308	MSAE-MJIC Adapter	1
26	055602	MSAE-MJIC Adapter	2
27	075552	FNPT-FJIC Swivel Adapter	2
28	075643	Swivel Branch Tee	1
29	085014	MSAE-MJIC Adapter	1
30	FW71504	JIC 45° Swivel Elbow	2
31	FW71636	JIC 90° Swivel Elbow	2
32	FW71784	Swivel Run Tee	1
33	FW71869	Run Tee	1
34	FW71870	JIC 90° Swivel Elbow	1
35	FW71920	MSAE Plug	2
36	012956-01	1-1/4" Hose x 51"	1
37	012956-02	1-1/4" Hose x 66"	1
38	012956-04	3/8 Hose x 105"	1
39	012956-06	1/4" Hyd. Hose x 50"	1
40	012956-07	1/4" Hyd. Hose x 41"	1
41	012956-08	1/4" Hyd. Hose x 37"	1
42	012956-09	1/2" Hyd. Hose x 68"	2
43	012956-10	1/2" Hyd. Hose x 45"	1
44	012956-11	1/2" Hyd. Hose x 33"	1
45	012956-12	1/2" Hyd. Hose x 63"	1
46	012956-13	1/2" Hyd. Hose x 55"	1
47	012956-14	3/8" Hyd. Hose x 92"	1
48	012956-15	2" Suction Hose x 96"	1
49	013051-01	3/4" Hyd. Hose x 128"	1
50	013051-02	3/4" Hyd. Hose x 32"	1
51	011927	Suction Strainer	1
52	012287	2" Ball Valve	1
53	012881	Auburn Gear Box	2
54	012891	AKG Heat Exchanger	1
55	012892	Hydraulic Motor	2
56	012893	Eaton Load Sense Pump	1
57	012894	Hydraulic Reservoir	1
58	012942	DanFoss Flow Divider	1
59	013028	Breather Cap	1
60	012945	Parker Hydraulic Valve	1
61	013048	Hydac Low Pressure Filter	1
	013049	Low Pressure Filter Element	1
62	053077	Hydac High Pressure Filter	1
	008705	High Pressure Filter Element	1
63	055397	Hydraulic Motor	1
64	080329	Hydraulic Level Gauge	1
65	160068	90° Pipe Elbow	1
67	160311	Close Nipple	1

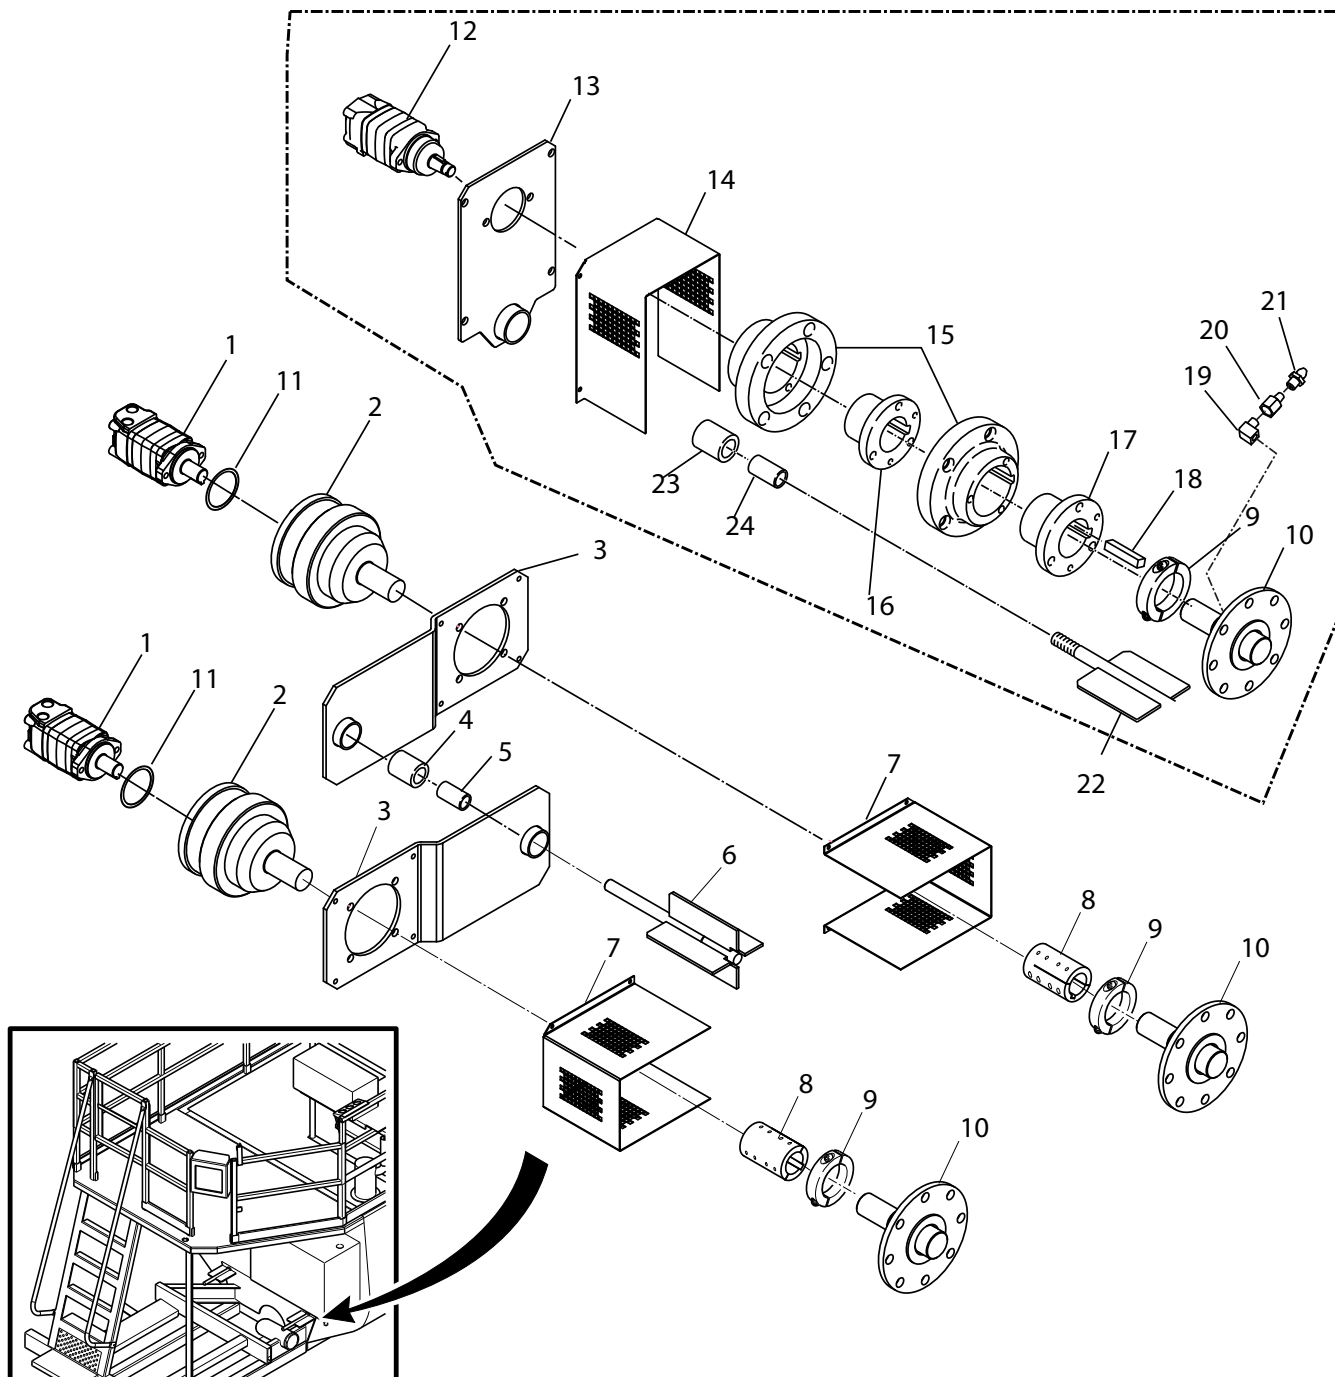


**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

HYDRAULIC AGITATOR DRIVE

Ref. No.	Part Number	Description	No. Req'd
1	012892	Hydraulic Motor	2
2	012881	Auburn Gearbox	2
3	F400-0008	Torque Arrestor Plate	2
4	012522-02	Rubber Bushing	2
5	012522-04	Torque Arm Insert	2
6	012930	Torque Arm Weldment	Ref
7	F400-0019	Coupling Guard	2
8	053023	2" x 2" ID Steel 2 Piece Coupling	2
9	012625	Splitcollar	3
10	012496-01	Idle Stub Shaft	3
11	013060	O-Ring	2
12	055698	Hydraulic Motor	1
13	SE0181-08	Hydraulic Motor Mnt.	1
14	F330-0029	Agitator Coupling Guard	1
15	011780	Coupling	1
16	010059	Bushing w/ 1" Bore	1
17	055103	Bushing w/ 2" Bore	1
18	190127-40	Key	1
19	022407	1/8M NPT X 18F NPT-90	6
20	008154	Adapter Male to Female	6
21	007705	Grease Fitting 1/8"	6
22	012377	Torque Arm Weldment	Ref
23	012522-02	Rubber Bushing	1
24	012522-04	Torque Arm Insert	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

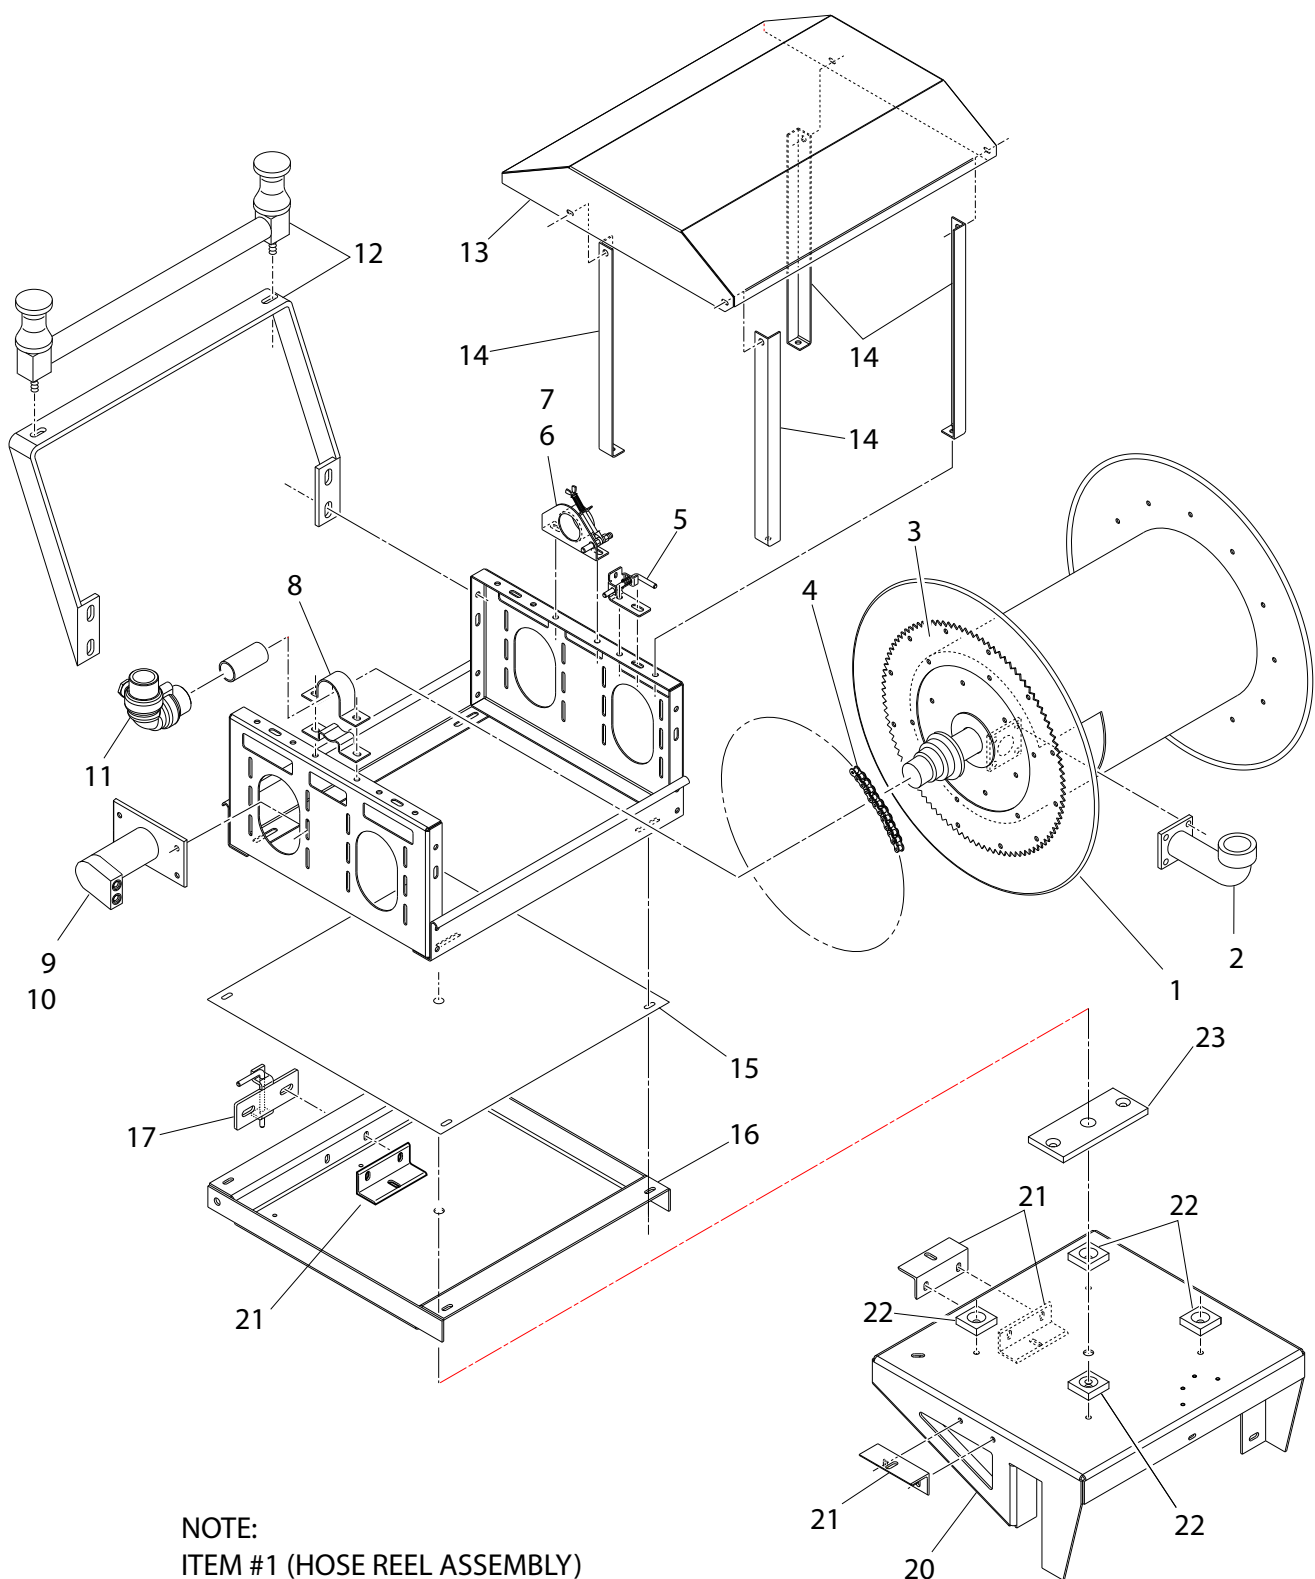






NOTE:
ITEM #1 (HOSE REEL ASSEMBLY)
INCLUDES ITEMS #2 - 10.

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

HOSE REEL ASSEMBLY

Ref. No.	Part Number	Description	No. Req'd
1	008212	Hose Reel and Swivel Assembly	1
2	080302	Flanged Riser	1
3	008144	Hose Reel Gear	1
4	008200	Hose Reel Chain - 69" Lg.	1
5	008433	Pinlock w/Brackets Assembly	1
6	008313	Idle Side Bearing	1
7	008111B	Brake Assembly	1
8	008314	Drive Side Bearing	1
9	008635	Hydraulic Motor	1
9A	008634	Motor Mount	1
10	008199	Chair Sprocket - 11 Tooth	1
11	003207	1-1/2" Dia. X 90 Degree Swivel Joint	1
12	011894	Hose Roller and Spool Guide	1
13	F330-0077	Hose Reel Canopy	1
14	F330-0094	Hose Reel Canopy Support	4
15	F330-0104	Hose Reel Mount Cover	1
16	F330-0017	Upper Hose Reel Bracket	1
17	052928	Pinlock w/Brackets Assembly	1
18	F330-0018	Lower Hose Reel Bracket	1
19	012781	Hose Reel Lock Angle	3
20	012798	Hose Reel Bearing Block	4
21	012860	Hose Reel Pinlock Support Weldment	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

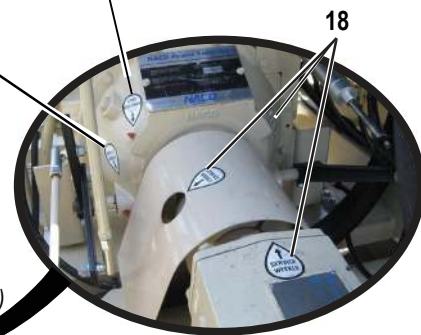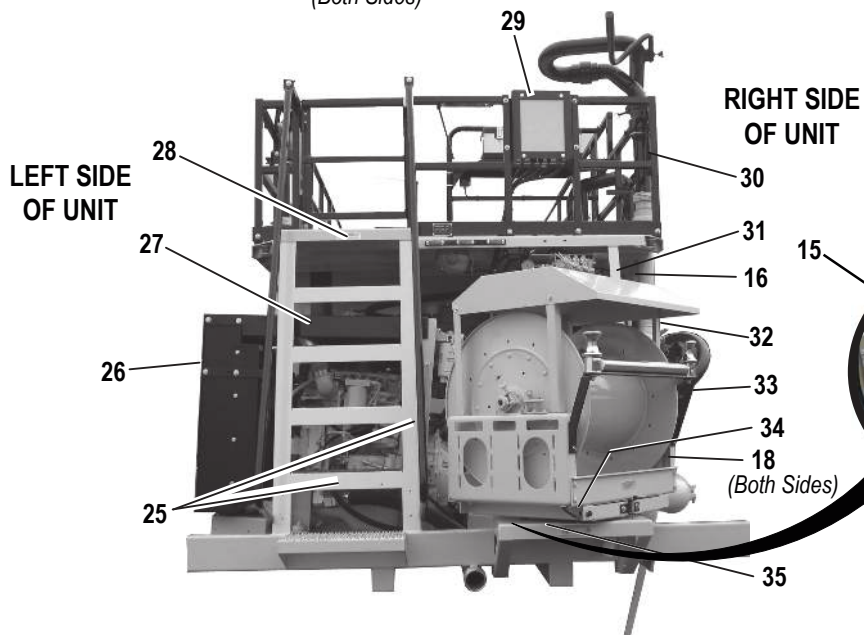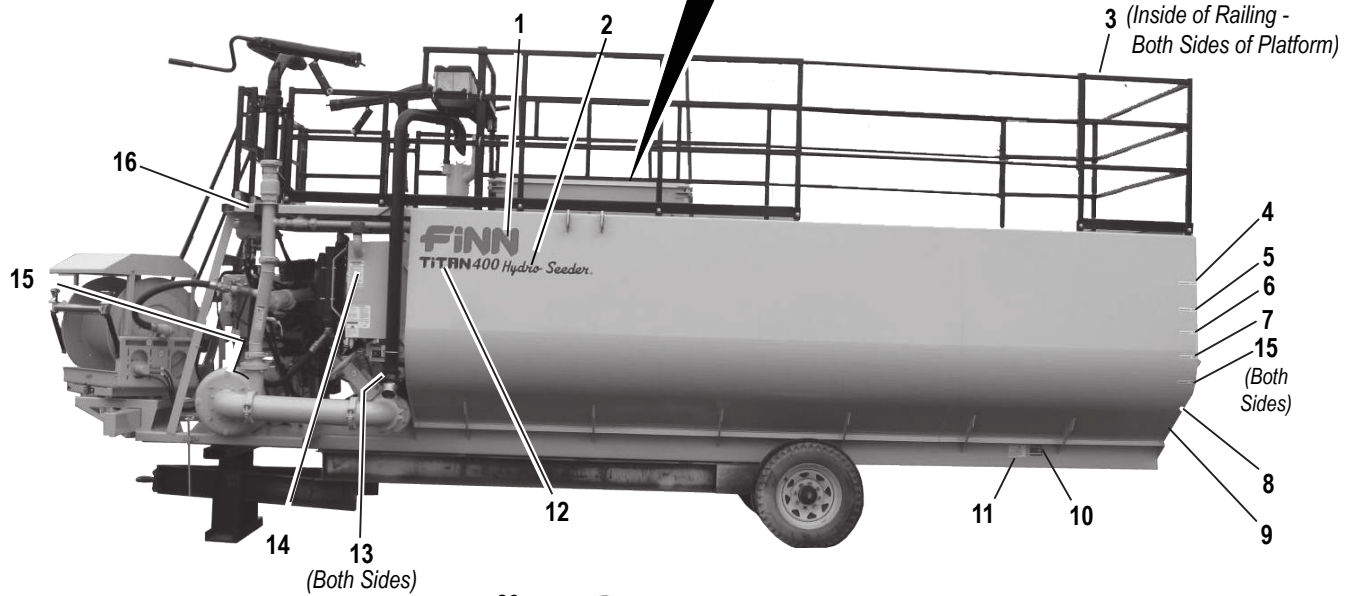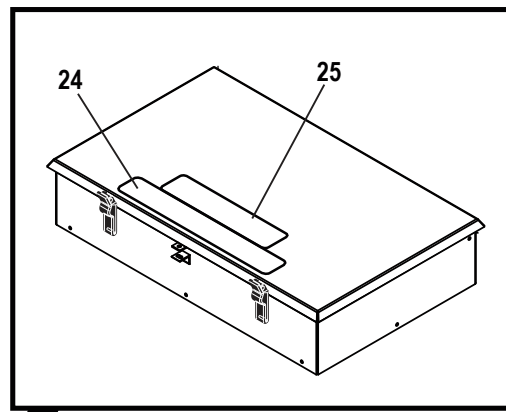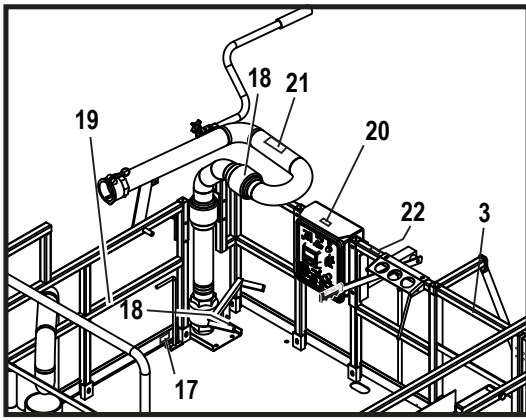

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

DECALS

Ref. No.	Part Number	Description	No. Req'd
	012820	TITAN280/TITAN330/TITAN400 Decal Sheet	1
1	023174**	"FINN" Decal	2
2	011595**	"HydroSeeder®" Decal	2
3	012821	"Fall Hazard" Decal	3
4	011793	"3,000 Gallon" Decal (<i>TITAN330 Only</i>)	1
5	011792	"2,500 Gallon" Decal	1
6	011791	"2,000 Gallon" Decal	1
7	011790	"1,500 Gallon" Decal	1
8	005188	"1,000 Gallon" Decal	1
9	005186	"500 Gallon" Decal	1
10	011690**	FINN Nameplate	1
11	011662**	"U.S. Patent No." Decal	1
12	012661-08**	"TITAN400" Decal	2
	012661-01**	"TITAN330" Decal	2
	012661-02**	"TITAN280" Decal	2
13	012179	"WARNING! Do Not Operate . . ." Decal	2
14	012687	"CAUTION. Hydraulic System Instructions" Decal	1
15	007231-01	"Service Weekly" Decal	3
16	007230-01	"Service Daily" Decal	1
17	012819	"BLEEDER VALVE - Open/Close" Decal	2
18	007231	"Service Weekly" Decal	7
19	012817	"RECIRCULATION VALVE - Close/Open" Decal	1
20	005735	"VALVE - Open/Closed" Decal	1
21	011567	"DANGER! Electrocution Hazard . . ." Decal	1
22	012818	"CLUTCH - Engage/Disengage" Decal	1
23	012886-02	"DANGER! Confined Space Hazard . . ." Decal	1
24	012041-01	"HydroSeeder® Operating Instructions . . ." Decal	1
25	012278	"DANGER! HOT EXHAUST!" Decal	2
26	031462	"WARNING! Burn Hazard . . ." Decal	1
27	031463	"WARNING Sever Hazard . . ." Decal	1
28	012688	"CAUTION. Fall Hazard!" Decal	1
29	020970	"CAUTION. Do Not Ride . . ." Decal	1
30	012597	"IMPORTANT - This is a Tank Vent . . ." Decal	2
31	011569	"CAUTION. Hose Reel Remote . . ." Decal	1
32	012272	"HYDRAULIC FLUID ONLY" Decal	1
33	005216	"DANGER! Do Not Use Remote . . ." Decal	1
34	012180	"Tighten Suction Cover . . ." Decal	1
35	006869	"Pressure Lubricator" Decal	1
36	007351	"Hand Gun Only" Decal	1
NOT ILLUSTRATED			
	023391*	"DIESEL FUEL ONLY" Decal	1

NOTES:

- * This Decal is located on the fuel tank on the left side of the unit.
- ** These Decals are not included on the 012820 Decal Sheet.

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

TOOL KIT

Part Number	Description	No. Req'd
410121-01	Titan Tool Kit	1
011775	Nozzle 2 1/2" Long Distance	1
021741	12" Whip Hose W/1/8" Male Ends	1
021375	Grease Gun (Hose Not Included)	1
012305	Adhesive Label (Removal Aerosol Can)	1
020365	Multi Purpose Grease	1
012681A	FINN Beige Aerosol Paint	1
012681T	FINN Beige Touch - Up Paint	1
006532	Coupler Gasket 3"	1
041371	3" Evertite Dust Cap-Brass	1
012992	Titan Nozzle Adapter Assembly	1
002427	Adapter 3" Male Brass	1
160776	Reducer Bushing 3" x 2-1/2" Galvanized	1
160313	Close Nipple 2-1/2" STD	1
013035	Coupler Female 2-1/2"	1
012993	Titan Long Distance Nozzle Assembly	1
001042	Brass Nozzle 1-1/2" Long Distance	1
160309	Close Nipple 1-1/2" STD Galvanized	1
002427	Male Brass Adapter 3"	1
160774	Reducer Bushing 3" x 1-1/2" Galvanized	1
012994	Titan Wide Fan Nozzle Assembly	1
006604	Veejet Brass Nozzle	1
002427	Male Brass Adapter 3"	1
160772	Reducer Bushing 3" x 1" Galvanized	1
012995	Titan Narrow Fan Nozzle Assembly	1
006605	Veejet Brass Nozzle	1
002427	Male Brass Adapter 3"	1
160772	Reducer Bushing 3" x 1" Galvanized	1
012996	Titan Wide Fan Nozzle Assembly	1
011861	Veejet Brass Nozzle	1
002427	Male Brass Adapter 3"	1
160775	Reducer Bushing 3" x 2" Galvanized	1
012997	Titan Narrow Fan Nozzle Assembly	1
011860	Veejet Brass Nozzle	1
002427	Male Brass Adapter 3"	1
160775	Reducer Bushing 3" x 2" Galvanized	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**

TITAN SPARE PARTS LIST

Part Number	Description	No. Req'd
013028	Hydraulic Reservoir Cap	1
008705	High Pressure Hydraulic Filter Element	1
013049	Low Pressure Hydraulic Filter Element	1
CU-LF3970	Oil Filter	1
CU-FF5612	Fuel Filter	1
023910	Safety Air Filter	1
023076	Ignition Key	2
002439	3" Victaulic Pipe Gasket	2
006722	1-1/4" Victaulic Pipe Gasket	2
041368G	6" Victaulic Pipe Gasket	2
002190	Dust Cap 2-1/2" Main Tank Drain	2
005726	Fuel Cap	1
006532	3" Nozzle Coupler Gasket	6
012529	2" Bearing Assembly	2
013043	Swivel Kit	1
100347	Clutch Assy 11 1/2"	1

**WHEN ORDERING PARTS, BE SURE TO STATE
SERIAL NUMBER OF MACHINE**