



9281 LeSaint Drive • Fairfield, Ohio 45014 Phone (513) 874-2818 • Fax (513) 874-2914

Sales: 1-800-543-7166



T30 HydroSeeder[®] Parts and Operator's Manual

Model MO Serial No.

NOTES



ACTIVATE YOUR FINN EQUIPMENT WARRANTY

IMPORTANT INFORMATION ON ACTIVATING YOUR FINN EQUIPMENT WARRANTY!!!

IT IS <u>IMPERATIVE</u> THAT YOU, THE PURCHASER, COMPLETE THE FOLLOWING STEP IN ORDER TO ACTIVATE THE FINN CORPORATION LIMITED WARRANTY.

(P

COMPLETE THE EQUIPMENT REGISTRATION FORM AND MAIL TO THE FINN CORPORATION.

IF FINN CORPORATION DOES NOT HAVE YOUR COMPLETED REGISTRATION FORM ON FILE, YOUR WARRANTY CLAIM <u>WILL BE DENIED.</u>

Once your FINN equipment has been registered, your FINN Limited Warranty will be activated per the warranty statement on the next page.

< <what do="" if="" need="" or="" parts="" repairs="" should="" under="" warranty?="" you="">></what>			
1. NOTIFY FINN CORPORATION OF THE FAILURE OF MATERIAL OR WORKMANSHIP 1-800-543-7166 Extension (246) WARRANTY@FINNCORP.COM			
\Im AFTER YOU OR YOUR SERVICE DEALER NOTIFY FINN, FINN WILL:			
VERIFY THAT WE HAVE YOUR REGISTRATION ON FILE			
VERIFY THAT THE WARRANTY PERIOD IS IN EFFECT			
VERIFY THAT THE RELATED PART(S) ARE INCLUDED IN THE SCOPE OF WARRANTY (PENDING FINN'S INSPECTION OF DEFECTIVE PARTS)			
SEND YOU REPLACEMENT PART(S) AND A WARRANTY INFORMATION PACKET			
REQUEST YOU FOLLOW ALL INSTRUCTIONS AS NOTED IN THE PACKET			
 Completely fill out the Parts Tag. Attach the Parts Tag to the defective part(s). Return the part(s) and the completed Warranty Claim Form to FINN Corporation using the return shipping label. (Within 2 weeks) Tape the Orange identifier sheet, marked with the W/RMA number, on the outside of the box in which you are shipping the defective part(s). 			



Warranty period:

Hydroseeders & Straw Blowers 2 years or 2000 hrs which ever comes 1st All other equipment 1 year or 1200 hrs which ever comes 1st

Commercial Limited Warranty Effective 4/1/2011

OUR WARRANTY TO YOU:

Finn Corporation warrants to you, the original purchaser, for use (or rental to others for use) all new construction machinery, parts and attachments (except those referred to herein) that are manufactured by Finn to be free from defects in material and workmanship for a period noted above. Replacement parts provided under the terms of this warranty are warranted for the remainder of the warranty period applicable to the product to which parts are installed, as if parts were original components of the product.

WHAT FINN WILL DO:

Upon notification of Finn concerning a failure of material or workmanship in accordance with the above stated Warranty, Finn Corporation will:

- Verify claim falls within the valid warranty time frame.
- Verify the product and equipment has been <u>registered</u> with Finn in order to be eligible for warranty coverage.
- Upon affirmation of warranty period and registration, Finn will send to you a new or repaired replacement part(s), whichever Finn elects and a "Warranty Claim Information packet" containing instructions for processing the warranty claim.
- Evaluate the part when defective part is returned. Note: Failure to
 return defective part within <u>two weeks</u> will result in an invoice being
 sent to the customer. In addition, if damage to a part is determined not
 to be covered under the warranty, the customer will be billed.
- Reconcile costs with customer for parts and shipping, as determined by our inspection of failed parts, and confirmation of warranty coverage, per the terms of this warranty.
- Correction of nonconformities, in the manner provided above, shall constitute fulfillment of all liabilities of Finn Corporation.

WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE:

- As the purchaser covered under the above limited warranty you must <u>REGISTER</u> the equipment with Finn FAILURE TO REGISTER WILL VOID THE WARRANTY.
- <u>Claim Number</u>: Notify the warranty Dept. same day or next day of any intent to do warranty work and obtain a "Warranty Claim Number,"
- All warranty <u>labor</u> must be pre-approved by providing Finn with an estimate of labor costs. Once approved, Finn will issue you a Work <u>Authorization Number</u>, prior to work being performed.(EXCEPTION: Unless the labor is per the Labor Allowance Schedule or less)
- The labor costs reimbursement will be based on the <u>Labor Allowance</u> <u>Schedule</u> established by Finn and where not applicable, on a reasonable number of hours as determined by Finn.
- Notify Finn Corporation of any failure of material or workmanship as described under this warranty.
 - > Web notification: Warranty@Finncorp.com
 - Phone 1-800-543-7166 extension 246
- Complete the required steps in the "Warranty Claim Information packet" (which Finn will send you) and return the defective part(s) as directed in the packet to Finn Corporation.
- Should the failed part, be a hydraulic component, Finn may send you an "Oil Analysis Kit," requesting that a sample of oil from the hydraulic system be taken, and mail it to a lab. Follow the instruction sheet, on how to use your Finn Oil Analysis Kit that comes with the Kit. Failure to comply when requested will void the warranty.

WHAT THE WARRANTY DOES NOT COVER:

- Normal wear parts and Allied Equipment or trade accessories not manufactured by it, such as but not limited to items such as various filters, fluids, brakes, clutch linings, belts, hoses, light bulbs, mechanical seal, over center clutches, tires, ignitions, starters, batteries, magnetos, carburetors, engines and labor, or like or unlike equipment or accessories. (Such being subject to the warranty, if any, provided by their respective manufacture).
- 2. Secondhand, used, altered, or rebuilt machines or parts.
- Defects, malfunctions or failures resulting from accidents, abuse, misuse, improper servicing, or neglect of required operational guidelines and maintenance service, as outlined in the Finn Corporation's Operators Manual(s).

4. The warranty shall be null and void to the extent any defect or failure of the products warranted arises out of or is caused by accessories or component parts not manufactured or supplied by Finn Corporation, whether same are supplied by purchaser, dealers, or any other party.

5. This Warranty does **NOT** cover any costs associated with transporting the equipment for warranty service, such as mileage, fuel, or man hours; such is the responsibility of the equipment owner.

6. Dealers & Customers are responsible to follow <u>all</u> guidelines related to Seasonal & Long Term Storage of Equipment, as advised in operation & equipment manuals. i.e. Finn, Engine, Clutch, Pump, Motor, etc. Equipment failures caused by neglect of these guidelines are <u>not</u> warrantable.

THIS IS THE ONLY EXPRESS WARRANTY ON OUR PRODUCTS:

We neither assume nor authorize anyone to assume for us any other express warranty. The Distributor/Dealer has no authority to make any representation or promise on behalf of Finn Corporation or to modify the terms or limitations of this warranty in any way.

THIS WARRANTY THEREFORE SHALL BE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATIONS ON OUR RESPONSIBILITY WITH RESPECT TO PRODUCTS PURCHASED:

THE REMEDIES OF THE USER SET FORTH HEREIN ARE EXCLUSIVE, WITHOUT REGARD TO WHETHER ANY DEFECT WAS DISCOVERABLE OR LATENT AT THE TIME OF DELIVERY OF THE PRODUCT TO THE PURCHASER.

ALL WARRANTY REPAIR MUST BE DONE BY A FINN AUTHORIZED SERVICE PROVIDER OR AUTHORIZED REPAIR SHOP OF FINN'S CHOICE.

TRANSPORTATION, HAULING, STORAGE, OR OTHER SIMILAR COSTS ARE NOT PART OF FINN'S OBLIGATION UNDER THE LIMITED WARRANTIES AND IS THE RESPONSIBILITY OF THE EQUIPMENT OWNER.

THE ESSENTIAL PURPOSE of this exclusive remedy shall be to provide the original purchaser with repair or replacement of parts that prove to be defective within the period and under the conditions previously set forth. This exclusive remedy shall not have failed of its essential purpose (as that term is used in the Uniform Commercial Code) provided Finn remains willing to repair or replace defective parts within a commercially reasonable time after it obtains actual knowledge of the existence of a particular defect.

IN NO EVENT shall Finn be liable for any special, consequential, incidental or indirect damages, including lost profits or lost commercial opportunities, with respect to the sale of the above warranted product or anything done in connection therewith, or for property damage sustained by a person claiming to be a third party beneficiary of a surviving warranty under the law of any jurisdiction.

NOTICE:

FINN CORPORATION URGES the use of only Finn corporation supplied parts and attachments to assure proper performance and safe operation of Finn corporation equipment. Insist on parts and attachments manufactured or supplied by Finn corporation when you purchase, repair or replace your Finn equipment and attachments. Because Finn corporation cannot assure that parts and attachments not manufactured or supplied by Finn meet Finn corporation's quality standards, specifications, or operating requirements, our warranty is not effective to the extent any failure of or defect in a Finn corporation product arises from or is caused by parts, attachments or components not originating with Finn corporation. Use of Finn corporation equipment with parts and attachments not manufactured or supplied by Finn could result in personal injury.

Safety First
HYDROSEEDER® SAFETY SUMMARY SECTION
Definition of Hydroseeding6
The FINN HydroSeeder® And How It Works6
Towing Vehicle
Mounting the HydroSeeder ${}^{\textcircled{R}}$
Attachments (Optional)7
Pre-Start Check
Equipment Check
Valve Operation
Starting Procedure
Area Coverage – Material Capacities
Tank Capacity Chart
Loading Procedure
Loading and Mixing BFM, FGM, SMM and Other Viscous Slurries 14–15
Prior to Application
Discharge Nozzle Selection
A 15 15 (O) (77 40)
Application of Slurry
Application of Slurry 17–18 I. General Application Techniques 17
I. General Application Techniques
I. General Application Techniques 17 II. Procedure When Using Hoses 18
I. General Application Techniques 17 II. Procedure When Using Hoses 18 Reloading Procedure 18
I. General Application Techniques 17 II. Procedure When Using Hoses 18 Reloading Procedure 18 Cleaning and Maintenance 19–20
I. General Application Techniques 17 II. Procedure When Using Hoses 18 Reloading Procedure 18 Cleaning and Maintenance 19–20 Daily 19
I. General Application Techniques17II. Procedure When Using Hoses18Reloading Procedure18Cleaning and Maintenance19–20Daily19Weekly or After 40 Hours of Operation19
I. General Application Techniques17II. Procedure When Using Hoses18Reloading Procedure18Cleaning and Maintenance19–20Daily19Weekly or After 40 Hours of Operation19Seasonal and Winter Storage Maintenance20
I. General Application Techniques17II. Procedure When Using Hoses18Reloading Procedure18Cleaning and Maintenance19–20Daily19Weekly or After 40 Hours of Operation19Seasonal and Winter Storage Maintenance20Lubrication and Fluids Chart21

Continued . . .

INDEX

Troubleshooting your HydroSeeder [®]
Leaks
Machine Jumps During Operation
Foaming of Solution and Lack of Distance
Valve
Clutch
Pump
Parts Section
Common Loose Parts
Suction, Discharge, And Recirculation
Clutch/Pump Assembly
Hydraulic System
Hydraulic Pump Drive Assembly
Hydraulic Agitator Drive Assembly41
Agitator and Bearing Assembly42–43
Engine Parts
Hose Reel Parts
Hose Reel Assembly
Control Panel Wiring48
Tool Kit
Seal Repair Kits
Decals

SAFETY FIRST

With any piece of equipment, new or used, the most important part of its operation is **SAFETY!**

FINN Corporation encourages you and your employees to familiarize yourselves with your new equipment and stresses safe operation.

The first five pages of this manual are a summary of the main safety aspects associated with this unit. Be sure to read and understand completely before operating the machine.

The symbols below are used throughout the operation and maintenance sections of this manual to call attention to safety procedures.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates practices that are not related to personal injury

NOTE:

Gives helpful information

CALIFORNIA

Proposition 65 Warning

The engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

HYDROSEEDER[®] SAFETY SUMMARY SECTION

It is important that operators of this machine are familiar with all safety aspects covered in this section and have read the entire Operator's Manual before operating the machine. Always keep a copy of this manual with the machine. It is the responsibility of the operator of the machine to fully understand this safety summary section. Remember that YOU are the key to safety. Good safety practices protect not only you, but also the people working with and around you. Keep in mind that this safety section is written for this type of machine only. Practice all other usual and customary safe working precautions. Above all, remember that safety is up to you.

The FINN HydroSeeder® is designed to mix and apply water, seed, fertilizer, agricultural lime, and hydraulic mulch to the prepared seedbed. The resultant slurry from mixing one or more of the above materials may react, causing harmful or deadly gasses within the tank. Heat, evaporation, or extended emptying period can/will accelerate the formation of these gasses. Please contact your supplier(s) of these slurry components regarding their potential reactivity.

I. PRE-START EQUIPMENT CHECK (equipment check is to be made with the engine off)


 If you have a chassismounted unit, check devices securing HydroSeeder® to the truck or trailer frame.



- 2. If HydroSeeder® is a trailer unit, check hitch and hitch bolts, lights, brakes, and all safety components.
- Make sure loading hatch bag cutter is in place and secure.
- 4. Check that all guard railing is in place and secure.
- 5. Verify that all guards are in place.
- 6. With the ignition switch ON, verify that the signal horn is operating correctly.
- By carefully looking down through the loading hatch, inspect the slurry tank for foreign objects. Never enter the tank without following the procedures described in step 3 of section IV. MAINTENANCE on page 4.
- 8. Remove unnecessary objects (or material) from the tank top.
- 9. Make sure no one is working on or inside the machine. Give a visual and audible signal that all is clear, before starting the engine.
- 10. Inspect all hydraulic hoses for cracks, bulges, or damage. If hoses are bad, replace immediately.
- 11. Inspect all discharge hoses for cracks, bulges, or damage. If hoses are bad, replace immediately.

II. MACHINE OPERATION

 Always wear safety goggles when operating the machine. Other safety attire such as safety shoes, ear protection, gloves, hard hats, dust masks, etc. should be worn as required by warning decals on machine, operator's manuals, or job site require-

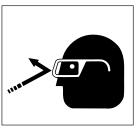

ments. Remove rings, watches, etc. Avoid wearing loose-fitting clothing that may get caught in rotating machinery.

 Do not operate the machine without all guards in place.



- 3. Do not load unit while in transit. Load only when parked and unit is as level as possible. Take care not to drop pens, lighters, etc. or pieces of paper or plastic bags into the tank as these objects might plug the slurry system. Should any object be dropped into the tank, do NOT reach into the tank to retrieve the foreign object. See step 3 under section IV. MAINTENANCE on page 4 before allowing any personnel to enter the tank.
- 4. Make sure area to be sprayed is clear of all persons, animals, etc.

- 5. The driver of the carrying or towing vehicle is responsible for the safety of the operator(s) of the machine. Make sure the driver is aware of and avoids all possible hazards to the operator(s) of the machine, such as low tree limbs, low power lines, etc. Vehicles on which equipment is mounted or towed must be stopped and started gradually. Avoid abrupt starts or stops. Never operate on a slope or a hill that may endanger the driver and/or the operator(s). All personnel should review and be familiar with stop/start signals between the driver and operator(s) before going into operation. Only the operator.
- Operator(s) of equipment should never ride on the machine at speeds of greater than 5 mph (8 km/h).



 Never operate machine in an enclosed area without venting the engine exhaust of both the equipment and vehicle on which the equipment is mounted. Deadly carbon monoxide fumes can accumulate.




- Never operate this or any other machinery when fatigued, tired, under the influence of alcohol, illegal drugs, or medication. You must be in good physical condition and mentally alert to operate this machine.
- Never modify the machine. Never remove any part of the machine (except for service and then reinstall before operating).
- Use proper means (steps, ladder) for mounting and dismounting of the machine. Never mount or dismount a moving machine.




III. SLURRY APPLICATION


 Do not aim discharge spray toward power-lines, transformers, or other high voltage electrical conductors. Also do not aim discharge spray towards people, animals or anything other than the intended application area.

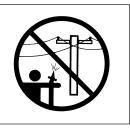

 Never engage (turn on) clutch when both the recirculation and discharge valves are closed. Operation with both valves closed will result in extreme heat generation that could cause severe bodily injury and damage to the equipment.

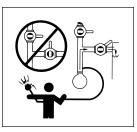

- Recirculation valve must be open and material flowing back into the tank when using the remote valve. A closed or plugged recirculation line will cause extreme heat in the pump or discharge lines that will result in severe bodily injury and damage to the equipment.
- 4. During application through a hose, high pressure can be exerted at the end of the hose. Hose-holding personnel must establish good footing. The operator should apply gradual pressure to the hose only after hose-holding personnel are firmly positioned and have firm control of the hose. Additional personnel to direct hose may be necessary if working on slopes. The proper technique for grasping the hose used by hose-holding personnel is to route and firmly grasp the hose over the shoulder or under both arms. Never route/hold the hose so it goes between the legs. If the hose-holding personnel finds that it is uncomfortable for him to handle the hose by himself additional hose-holding personnel should be positioned at the end of the hose.
- 5. Plan application so that the farthest area is covered first, then work back toward the HydroSeeder®, so individuals are not walking back over slippery ground.
- Before opening any valves or pipe clamps, shut machine down and check if material in the pipe is hot. If hot, do NOT open valve or pipe clamps as the hot material may cause severe personal injury. Allow to cool and open with caution.

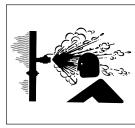


- 7. Except when loading materials, keep loading hatch lid closed to protect operator and prevent splashing of wet material onto the tank top.
- 8. Wash off spillage of slippery mulch or slurry additive from the tank top and platform before operating equipment.

IV. MAINTENANCE

1. Before servicing the machine, turn off engine and allow all moving parts to stop. To prevent accidental starting, disconnect battery cables. Tag the engine operating area to show that the machine is being serviced. Use lockout/tagout procedure (Occupational Health and Safety Administration (OSHA) 29 CFR 1910.147).




2. Certain hydroseeding amendments, when combined with or without the addition of water or heat or the element of time, may react causing harmful or deadly gasses. Consult your material suppliers regarding reactivity information. The slurry tank

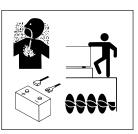

must be flushed and drained after each day of operation.

- 3. Your slurry tank may be considered a confined space by OSHA under 29 CFR 1910.146. Before entering any confined space, your company must develop a procedure for safe entry. Make sure your company's plan meets all the requirements of 29 CFR 1910.146. or local legal requirement including the following:
 - Drain, flush, and ventilate tank interior. a)
 - Turn off engine, disconnect battery cables, and b) perform lockout/tagout procedures (29 CFR 1910.147).
 - c) Provide continuous ventilation or proper breathing apparatus.
 - d) If tank must be entered, personnel entering the tank must be tethered to a lifeline.
 - e) Provide a stand-by individual outside of tank who is able to communicate with person inside and haul him out with the lifeline if necessary.
- 4. Before loosening any clamps or opening any valves, determine if material in the line is hot by feeling the pipe. Do NOT allow material to come in contact with personnel. Severe bodily injury could result.

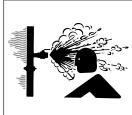


- 5. On trailer units, perform general maintenance such as checking the safety chains, hitch and hitch bolts, tires, and brakes. Repair or replace if worn or broken. Never operate machine on improperly inflated or damaged tires. Always use a safety cage or cable restraints when inflating a repaired tire.
- 6. Radiator maintenance: Liquid cooling systems build up pressure as the engine gets hot. Before removing radiator cap, stop the engine and let the system cool. Remove radiator cap only after the coolant is cool.
- 7. Battery maintenance: Lead-acid batteries contain sulfuric acid, which will damage eyes or skin on contact. Always wear a face shield to avoid getting acid in the eves. If acid contacts the eves, flush immediately with clean water and get medical attention. Wear rubber gloves and protective clothing to keep acid off skin. Lead-acid batteries produce flammable and explosive gasses. Keep arcs, sparks, flames, and lighted tobacco away.
- 8. Filling of fuel: Never fill the tank with the engine running, while smoking, or when near an open flame. Never smoke while handling fuel or working on the fuel system. The fumes in an empty fuel container are explosive. Never cut or weld on fuel lines, tanks, or containers. Move at least 10 ft (3 m) away from fueling point before starting engine. Wipe off any spilled fuel and let dry before starting engine.


IMPORTANT: Be careful not to allow fuel, lubricant, hydraulic fluid, or cooling fluids to penetrate into the ground or be discharged into the water system. Collect all fluids and dispose of them in accordance with local municipal regulations.


- 9. It is recommended that only authorized, genuine FINN replacement parts be used on the machine.
- 10. Do not use either cold start fluid, if engine is equipped with glow plug type preheater, or other intake manifold type preheater. It could cause an explosion or fire and severe injury or death.
- 11. Diesel fuel or hydraulic fluid under pressure can penetrate the skin or eyes and cause injury, blindness, or death. Pressure may build up in the hydraulic system; use caution when removing the cap.
- 12. Make certain that all decals on the machine are maintained in good legible condition. Replacement decals are available through FINN Corporation by specifying part number shown in the lower right-hand corner of the decal. See page 5 for the current safety decals mounted on the unit. See pages 50 and 51 in the PARTS MANUAL for the location and quantity of all decals on this unit.

CURRENT SET OF SAFETY DECALS

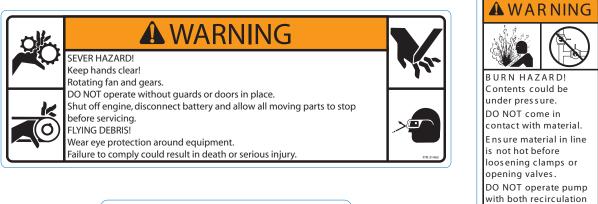



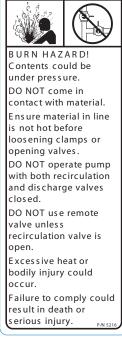

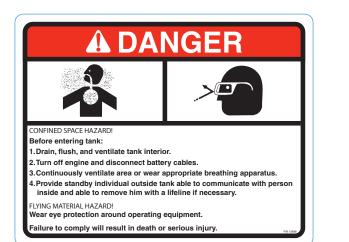





OPERATION AND MAINTENANCE MANUAL FOR FINN T30 HYDROSEEDERS®

This manual gives you step-by-step instructions for the operation and maintenance of the FINN T30 HydroSeeder[®]. For best results and to ensure longer life of the equipment, please follow the instructions carefully. For your safety, read the entire manual before operation of this unit.

DEFINITION OF HYDROSEEDING

Hydroseeding is the process whereby seed, fertilizer and/or lime, and fiber mulch (using water as a carrying medium) are applied on the soil to establish vegetation.

THE FINN HYDROSEEDER[®] AND HOW IT WORKS

The FINN HydroSeeder[®] will apply seed, fertilizer and/or lime, fiber mulch, or stabilizing materials in any prescribed or desired combination. The materials placed in the HydroSeeder[®] slurry tank are mixed with water and kept in suspension by a dual-agitation process, recirculation of slurry and mechanical agitation, thus, forming a slurry that is pumped to the discharge assembly and directed onto the seed bed by the operator. This equipment is designed to accomplish hydroseed-ing in one easy operation with maximum efficiency.

TOWING VEHICLE

The trailer-mounted HydroSeeder[®] is to be mounted on a truck or trailer that can carry a payload of at least 4,560 lbs (2,068 kgs). This is the weight of the fully loaded HydroSeeder[®]. Any auxiliary loads due to material storage or optional equipment, as well as the weight of the carrier vehicle, must be added to obtain the proper carrier vehicle capacity. Once the proper carrier has been selected, the HydroSeeder[®] must be securely mounted to it.

	HYDROSEEDER	TRUCK REQUIREMENTS
Туре	Maximum Weight (Loaded)	
T30S	4,560 lb (2,068 kg)	Carrier vehicle must be able to support 4,560 lb (2,068 kg) in addition to its own weight

Your FINN HydroSeeder® should be mounted by a qualified truck body installer. Failure to comply could result in minor or moderate personal injury. Product damage could also occur.

MOUNTING THE HYDROSEEDER[®]

When mounting the HydroSeeder^{\mathbb{R}} to the truck, one of the following methods of mounting is acceptable:

- 1. Bolt the HydroSeeder[®] directly to the truck bed. Installer must ensure that the bed-to-truck and HydroSeeder®-to-bed connections are adequate for the maximum weights loaded that are shown on page 6.
- 2. Mount the HydroSeeder[®] to the truck frame. The T30 HydroSeeder[®] is provided with an adapter frame that also allows the unit to be mounted directly to the truck's 34 in.- (86.4 cm-) wide frame, using U-bolts.

NOTICE

Mounting the HydroSeeder® to the truck must allow for tire clearance and frame twist. Place hard wood spacers along the length of truck rails or use FINN spring-mounting kit (part number 011562) or equivalent.

When using a truck with a tilt bed, be sure to chain the truck bed down to prevent the bed from being accidentally hoisted. Failure to comply could result in minor or moderate personal injury. Failure to comply could also result in product or property damage.

This machine is equipped with two lifting devices: forklift channels and a lift ring. Do NOT lift unit with water or material in it. The lifting devices are designed to carry only the empty weight of the machine, approximately 1,480 lbs (671 kgs). Failure to comply could result in severe personal injury or death.

ATTACHMENTS (OPTIONAL)

1. Discharge hoses: Discharge hoses are available in 50 ft (15 m) and 100 ft (30 m) lengths, up to a total of 150 ft (45 m). Hoses of a greater length may adversely affect the discharge distance and the discharge time of the HydroSeeder[®]. All connections are camlock quick-operating fittings, including the connection to the end of the discharge piping. A nozzle is connected to the end of the hose, next to the remote discharge valve. Once the hose is connected, the HydroSeeder[®] is ready to operate. Flow through the hose and the nozzle is controlled by the remote discharge valve. When using this valve, the recirculation valve on the HydroSeeder[®] <u>MUST BE OPEN</u> to allow flow at times when the remote valve is closed. See Figure 2 on page 9.

The recirculation valve must be open when using a remote valve. Failure to comply will result in death or serious injury.

- 2. Hose Reel: The live hose reel mounts on top of the unit. The 100 ft- (30 m-) capacity electric -rewind reel will wind up and store empty hose. It is wired to the unit's battery.
- 3. Air Gap Fill Pipe: A bolt on the air-gap fill pipe is available that mounts directly to the raised hatch liner and swings into position when the hatch lid is open.

PRE-START CHECK


The following safety check should be made to ensure operator safety:

- 1. Check condition of all mounting hardware that secures the HydroSeeder® to truck bed and frame rails.
- 2. Ensure that all guards are in place.

EQUIPMENT CHECK

Equipment check should be made with the engine OFF and all rotating parts stopped. Failure to comply could result in death or serious injury.

- 1. See that TOOL KIT contains all the prescribed items. See PARTS MANUAL.
- 2. Inspect the slurry tank for foreign objects. See steps 2 and 3 in section IV. MAINTENANCE of the HYDROSEEDER[®] SAFETY SUMMARY SECTION on page 4.
- 3. Check fuel level. Fill if necessary.
- 4. Check hydraulic oil level and fill if necessary. See HYDRAULIC SYSTEM on page 23 for oil specifications.
- 5. Check engine oil level and fill if necessary. For oil type, refer to the engine manual.
- 6. Inspect air cleaner for dust and dirt. Clean if necessary.
- 7. Secure the tank drain plug in the drain pipe, located in the center of the bumper.
- 8. Check to be certain that the pump drain plug is in place.
- 9. Lubricate equipment See LUBRICATION AND FLUIDS CHART on page 21.
 - A. Each lubrication point on the machine is marked with a decal.
 - B. Check automatic pressure lubricator at pump. If the stem is fully extended, with thumb nut all the way up, the automatic pressure lubricator contains lubricant. If not, lubricant must be replaced by the following procedure:
 - 1. Turn thumb nut (Figure 1) clockwise until stem rises to maximum height.
 - 2. Remove cap (Figure 1) and fill cap with sodium- (water soluble) base grease (FINN part number 000698). Do not use lithium-base (chassis lube) grease.
 - 3. Replace cap.
 - 4. Turn thumb nut (Figure 1) counterclockwise until thumb nut is at the top of the stem. The spring and pressure disc in the automatic pressure lubricator forces the grease, under pressure, to the pump seal.

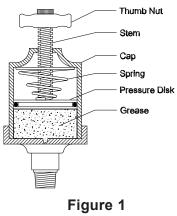

Automatic Pressure Lubricator

IMPORTANT: When the thumb nut has moved down to within 1/2 in. (1.25 cm) of touching the cap, service the automatic pressure lubricator.

- 10. Check and clean the nozzles and hoses of any obstructions.
- 11. Check pump discharge, recirculation, and remote valve handles for free movement.

VALVE OPERATION

The base HydroSeeder[®] is equipped with three independently operated ball valves to control slurry flow (Figure 2). The first valve is the recirculation valve. An open recirculation valve allows flow back into the tank. The second valve is the pump discharge valve. An open pump discharge valve allows slurry to flow through the discharge hose. The third valve, located at the end of the discharge hose, is the remote valve. An open remote valve allows discharge of the slurry onto the area being covered.

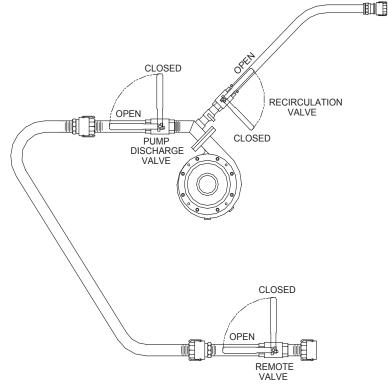


Figure 2 – Valve Operation



Never engage (turn on) slurry pump clutch when recirculation valve and either the pump discharge or remote valve is closed. This would create a situation where the pump is running with slurry flow closed off, which will result in extreme heat generation, causing damage and/or bodily injury. The recirculation valve must always be open and material flowing back into the tank when using the remote valve. A closed remote valve in conjunction with a closed or plugged recirculation valve will cause extreme heat. Failure to comply could result in death or serious injury. Failure to comply could also result in property damage.

STARTING PROCEDURE



See HYDROSEEDER® SAFETY SUMMARY SECTION of pages 2 through 4 before operating the machine. Failure to comply could result in death or serious injury. Failure to comply could also result in product or property damage.

Before starting, open recirculation valve, close the discharge valve, disengage (turn off) the clutch, and place the agitator control in the NEUTRAL position.

- 1. Set throttle about 1/4 open.
- 2. Pull choke control out.
- 3. Turn key clockwise until starter engages and engine starts.
- 4. Push choke control in for even running.
 - **NOTE:** This engine has a safety system that will shut the engine off if the engine temperature increases above, or if the oil pressure decreases below an acceptable level.

AREA COVERAGE – MATERIAL CAPACITY

To determine the coverage per load for any HydroSeeder[®], three questions must be answered prior to the application. First, is the job to be done one step (which is when the seed, fertilizer, and mulch are applied proportionally per load) or two step (which is when the seed and fertilizer are applied alone and then covered by mulch as a second operation)? Second, at what rates (usually in Ibs per 1,000 sq ft, or Ibs per acre) are the seeding materials to be applied? Finally, what are the loading capacities of the HydroSeeder[®]?

Application rates vary for different geographic locations, but in general, seed is applied at 6 to 10 lbs (2.7 to 4.5 kgs) per 1,000 sq ft. Fertilizer is applied at a rate of approximately 400 lbs (181 kgs) per acre, and fiber mulch is applied at 1,500 to 2,000 lbs (680 to 907 kg) per acre. (Note: There are 43,560 square feet in an acre). Local agronomists, agricultural extension agents, or soil and water conservation officials should be contacted for more specific information on application rates for a given area.

The tables, on page 11, show loading versus coverage rates for the FINN T30. Table A shows rates for one-step applications. The coverage area is determined by the fiber mulch capacity of the HydroSeeder[®] and the rate at which it is applied. Table B shows the area coverage when seeding only, where little or no mulch is applied. The coverage area is determined by the granular solids capacity of the HydroSeeder[®] and the rate at which the solids are applied.

USING SEED, FERTILIZER, AND MULCH

<u>Unit</u>	Amount of Ma	Amount of Material in Tank in pounds (kilograms) Coverage A			
	<u>Seed</u>	<u>Fertilizer</u>	Mulch	<u>sq ft (sq m)</u>	
T30	28 (13)	32 (15)	120 (54)	3,485 (324)	

Table is based on 1,500 lbs (680 kgs) of mulch, 400 lbs (181 kgs) of fertilizer, and 345 lbs (156 kgs) of seed at 8 lbs (3.6 kgs) / 1,000-sq-ft-per-acre.

TABLE A EXAMPLE:

120 lbs (54 kgs) Mulch per Tank 1,500 lbs (680 kgs) Mulch per Acre

400 lbs (181 kgs) Fertilizer per Acre x 0.08 Acre = 32 lbs (15 kgs) Fertilizer per Load 345 lbs (156 kgs) Seed per Acre x 0.08 Acre = 28 lbs (13 kgs) Seed per Load

NOTE: 1000 sq ft = 92.9 sq m

TABLE B

SEED AND FERTILIZER ONLY

<u>Unit</u>	Amount of Material in Tank in pounds (kilograms)			Cover	<u>age Area</u>
	Seed	<u>Fertilizer</u>	<u>Total</u>	<u>sq ft (sq m)</u>	<u>Acreage (Hectare)</u>
T30	230 (104)	270 (122)	500 (226)	28,750 (2,670)	0.66 (0.27)

Table is based on rates of 8 lbs (3.6 kgs) of seed and 9.2 lbs (4.2 kgs) of fertilizer per-1,000-sq-ft.

TABLE B EXAMPLE:


500 lbs (226.8 kgs) Tank Capacity (Solids)	= 28,750 sq. ft per Load
8 lbs (3.6 kgs) of Seed + 9.2 lbs (4.2 kgs) of Fertilizer per-1,000-sq-ft	- 20,700 Sq. It per Load

 $\frac{8 \text{ lbs (3.6 kgs) of Seed}}{1,000 \text{ sq ft}} \times 28,750 \text{ sq ft} = 230 \text{ lbs (104.3 kgs) of Seed per Tank}$

NOTE: 1000 sq ft = 92.9 sq m

NOTE: 1 Acre = 0.405 Hectare

TANK CAPACITY CHART

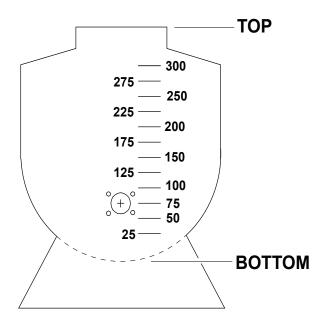

Т-30				
Gallons	in. (cm) from	in. (cm) from		
(Liters)	top	bottom		
300 (1136)	6.25 (15.9)	32.75 (83.2)		
275 (1041)	8.75 (22.2)	30.25 (76.8)		
250 (946)	11 (27.9)	28 (71.1)		
225 (852)	13.5 (34.3)	25.5 (64.8)		
200 (757)	16 (40.6)	23 (58.4)		
175 (662)	18.25 (46.4)	20.75 (52.7)		
150 (568)	20.5 (52.1)	18.5 (47.)		
125 (473)	23 (58.4)	16 (40.6)		
100 (379)	25.25 (64.1)	13.75 (34.9)		
75 (284)	27.75 (70.5)	11.25 (28.6)		
50 (189)	30.75 (78.1)	8.25 (21.)		
25 (95)	34 (86.4)	5 (12.7)		

LOADING PROCEDURE

Take care not to lose pens, lighters, etc. from shirt pockets, or drop pieces of paper or plastic bags into the tank, as these might plug the slurry system. Failure to comply could result in death or serious injury. Failure to comply could also result in product or property damage.

- 1. With clutch disengaged (turned off) and agitator control in the NEUTRAL position, start engine and allow it to warm up. See STARTING PROCEDURE on page 10.
- 2. Start filling unit with water from one of the water sources as listed below. When water reaches the top of agitator shaft, move agitator control to full REVERSE position.

Tank can be filled by using one of the sources of water as follows:

- A. Water from any stream or pond using a fill pump. When filling from a pond or stream, be sure to use a suction strainer to filter out contaminants that could damage the pump and unit.
- B. Any pressure source, eg. fire hydrant. An optional air gap fill port is available for this unit but it is necessary to consult with local authorities before using a water main, in order to abide by all local ordinances.
- C. Water tanker.
- 3. Piping System Cleanout Procedure (Purging Line):
 - A. Remove discharge nozzle and coupler gasket from remote valve coupler at the end of the discharge hose (or from boom on the platform option).
 - B. Aim discharge hose (or boom on the platform option) into an open area away from any persons, obstructions, or high voltage power lines.
 - C. Open discharge and remote valves and close recirculation valve.

- D. Open throttle to approximately 1/2 to 3/4 full.
- E. Engage (turn on) clutch.
- F. When discharge stream is clear, open recirculation valve and close discharge valve. After recirculation stream is clear, disengage (turn off) clutch.
- G. Replace coupler gasket in the remote valve coupler (or in boom on the platform option).
- 4. Continue filling tank with water.
- 5. Open throttle to full.
- 6. Start loading dry material, loading the lightest material first. Agitator control should be in full REVERSE for mixing.



Keep hands and arms away from tank interior and agitator. Failure to comply WILL result in serious personal injury or death.

A. Seed – Cut open the seed bag and dump contents into slurry tank. (When using inoculant, add it in the tank along with the seed.) When using quick-swelling seeds, load them just prior to application.



Hydraulic system will overheat if agitator shaft is jammed for extended period. This will damage hydraulic oil and system components. Failure to comply could result in death or serious injury. Failure to comply could also result in product or property damage.

- B. Fiber mulch Empty the entire bag in or cut bag open and drop in the sections of fiber. The amount of mulch to be used should be loaded by the time the water level is at 3/4 full. If agitator stalls, or a high pitch squeal comes from the hydraulic sytem, reverse agitation to forward for a moment to clear the obstruction, then return agitation to reverse.
- C. Fertilizer Cut the fertilizer bag and dump contents into slurry tank.
- D. All other additives Consult with manufacturer for proper loading technique.
- 7. When all materials are loaded and in suspension, and the tank is full, move agitator to the NEUTRAL position, then full speed FORWARD to ensure all material is mixed. It may be necessary to change the agitator direction more than once to ensure a thorough mixture.
- 8. After material is thoroughly mixed, slow agitator in forward direction to 1/2 to 3/4 speed or enough to create movement in all of the corners of the tank. Do not over-agitate the slurry. Always discharge material with the agitator control in the FORWARD position.
- 9. Close the hatch lid on the slurry tank.
 - **NOTE:** The slurry should not be recirculated for more than 15 minutes prior to discharge to reduce wear and keep the seed from swelling. If foaming occurs, reduce agitator speed.

LOADING AND MIXING BFM, FGM, SMM AND OTHER HIGHLY VISCOUS SLURRIES

- 1. With clutch disengaged (turned off) and agitator control in the NEUTRAL position, start engine and allow it to warm up. See STARTING PROCEDURE page 10.
- 2. Start filling unit with water from one of the water sources as listed below. When water reaches the top of agitator shaft, move agitator control to full REVERSE position.

Tank can be filled by using one of the sources of water as follows:

- A. Water from any stream or pond using a fill pump. When filling from a pond or stream, be sure to use a suction strainer to filter out contaminants that could damage the pump and unit.
- B. Any pressure source, e.g. fire hydrant. An optional air gap fill port is available for this unit but it is necessary to consult with local authorities before using a water main, in order to abide by all local ordinances.
- C. Water tanker.
- 3. Piping System Cleanout Procedure:
 - A. Remove discharge nozzle and coupler gasket from the remote valve coupler at the end of the discharge hose (or from boom on the platform option).
 - B. Aim discharge hose (or boom on the platform option) into an open area away from any persons, obstructions, or high voltage power lines.
 - C. Open discharge and remote valves and close recirculation valve.
 - D. Open throttle to approximately 1/2 to 3/4 full.
 - E. Engage (turn on) clutch with a firm snap. Do NOT allow clutch to slip.
 - F. When discharge stream is clear, open recirculation valve and close discharge valve. After recirculation stream is clear, disengage (turn off) clutch.
 - G. Replace coupler gasket in the remote valve coupler (or in boom on the platform option).
- 4. Continue filling tank with water.
- 5. Increase throttle to 3/4 of full throttle.
- 6. Start loading dry material, loading the lightest materials first. Agitator control should be in full REVERSE for mixing.

Seed - Cut open the seed bag and dump contents into slurry tank. (When using inoculant, add it in the tank along with the seed.) When using quick-swelling seeds, load them just prior to application.

BFM, FGM, SMM, and other highly viscous slurries - When the water level is above the top of the agitator blades, begin adding the entire bag of material into the tank. It may become necessary to slow the rate of water being added to the tank. Add all bales before the tank is 3/4 full. If agitator stalls or a high pitch squeal comes from the hydraulic system, reverse agitation to FORWARD for a moment to clear obstruction, then return agitator to REVERSE.

NOTE: BFM, FGM, and other viscous slurries will entrain air if proper mixing procedures are not followed. Ensure that the agitator blades are completely submerged prior to the addition of this material. This will prevent air from entering the slurry. Follow manufacturers suggested rates of materials as indicated on the packaging. Generally, this recommendation is 50 pounds of material to 125 gallons of water.

Fertilizer – Cut open the fertilizer bag and dump contents into slurry tank.

All other additives - Consult with manufacturer for proper loading technique.

- 7. When all materials are loaded and in suspension, and the tank is full, move the agitator to NEUTRAL then full speed FORWARD to ensure all material is mixed. It may be necessary to change the agitator direction more than once to ensure a thorough mixture.
- 8. Agitate per the manufacturer's recommendations. Generally, the agitation time is 10 minutes to allow the proper viscosity to be generated. Follow manufacturer's recommendations.
- 9. Once material is thoroughly mixed, place the agitator in FORWARD direction to 1/4 speed, or just enough to create movement in all corners of the tank. DO NOT OVER-AGITATE the slurry. Always discharge the material with the agitator control in FORWARD and at a slow speed.
 - **NOTE:** As the application process commences and the slurry level is decreased, which will expose the agitator blades, it is extremely important to ensure that the speed of the agitators is slow.
 - **NOTE:** Use of recirculation should be kept to a minimum.
 - **NOTE:** If foaming occurs, reduce agitator speed.
 - **NOTE:** When mixing multiple loads of BFM, FGM, SMM, and other viscous slurries, make sure to purge the lines with clear water before mixing the next load.

PRIOR TO APPLICATION

- 1. Operator should familiarize themselves with the area to be seeded and develop a plan to ensure uniform application.
- 2. Develop a plan for communication between operator and driver of the carrying or towing vehicle to signal for start, stop, turn, etc. through the use of the signal horn.
- 3. Operator takes up position on the platform. From this point, application will be controlled by the use of the clutch, valve, discharge assembly, and throttle.

DISCHARGE NOZZLE SELECTION

Nozzles are stored in the tool box. This HydroSeeder[®] is equipped with three nozzles – one long distance and two fan nozzles. The following chart tabulates the approximate distance, width, and discharge time of the nozzles when used with the platform option. When using the base unit, these factors will vary according to the type and length of hose being used.

Nozzle	Distance (A)	Width (B)	Discharge Time
Long Distance	Up to 70 ft (21 m)	-	12 min
Narrow Fan	Up to 45 ft (14 m)	10 ft (3 m)	8 min
Wide Fan	Up to 35 ft (10 m)	20 ft (6 m)	8 min
	Figure 4 – Disch Spray Pa	•	

APPLICATION OF SLURRY

I. GENERAL APPLICATION TECHNIQUES



Do not spray toward power lines, transformers or other high voltage conductors. Failure to comply will result in death or serious injury.

The driver of the carrying vehicle should remain alert for hazards to the operator, such as low power lines, hanging branches, etc. Driver should never start or stop abruptly. Failure to comply could result in minor or moderate personal injury. Failure to comply could also result in product or property damage.

- 1. Determine which nozzle will best suit the application needs according to the DISCHARGE NOZZLE SELECTION table on page 16.
- 2. When applying seed and fertilizer, elevate discharge nozzle no less than 10 degrees above the area to be sprayed, allowing the slurry to gently rain onto the seed bed.
- 3. When applying wood and paper fiber, whenever possible, aim the stream toward the ground to create a surface with small pockmarks which helps get seed in contact with ground. Do not allow the stream to blast away the surface of the seed bed.
- 4. Generally, the most remote area of the seed bed should be covered first. Distance is controlled by engine speed and nozzle selection.

Do NOT partially close the valve to control the distance. Failure to comply could result in minor or moderate personal injury. Failure to comply could also result in product or property damage.

- 5. While moving along area to be seeded, operator should move nozzle back and forth in a slow, even arc.
- 6. If application is to be interrupted for a short period of time, leave the valves open and disengage (turn off) clutch. Re-engage (turn on) clutch to continue application.
- 7. It may be necessary to slow the agitator as tank empties, to reduce foaming.

II. PROCEDURES WHEN USING HOSES

Always pump clear water through hose before pumping mulch. If the inside hose liner is dry, it will dewater the mulch, causing hose to plug.

DISCHARGE THROUGH HOSE OR HOSE REEL WITH REMOTE VALVE

- 1. Open recirculation valve, close discharge valve, and close remote valve at the end of hose.
- 2. Engage (turn on) clutch. When stream is flowing freely through the recirculation line, open pump take-off valve.



The high pressure on the hose can exert strong forces, causing the potential for the hose operator to lose control of hose or footing. The hose will require additional hose holders when this operation occurs on slopes. Open the pump take-off valve and the remote valve slowly and only after the hose operator is firmly positioned and has firm control of hose. Failure to comply could result in minor or moderate personal injury. Failure to comply could also result in product or property damage.

- 3. With the engine at 3/4 speed, open the remote valve at the end of hose to discharge load.
- 4. When finished spraying, close remote valve, disengage (turn off) clutch, and stop engine. If using fiber mulch, retain as much water as possible in hose by elevating the hose ends or by coupling the hose ends together.
- 5. If another load is to be done, see RELOADING PROCEDURE below. If finished for the day, follow the clean-up procedure described in DAILY CLEANING AND MAINTENANCE section on page 19, and flush out the hose.

The recirculation valve must be open when using a remote valve. Failure to comply will result in death or serious injury.

RELOADING PROCEDURE

- 1. Start at step 2 in LOADING PROCEDURE on pages 12 and 13.
- 2. After last load of the day, refer to CLEANING AND MAINTENANCE on pages 19 and 20.

CLEANING AND MAINTENANCE

DAILY

- 1. Cleaning the HydroSeeder[®]
 - A. Fill slurry tank to center of agitator shaft with clear water.
 - B. Move agitator lever to full speed to flush off inside of tank top and walls.
 - C. Remove discharge nozzle and coupler gasket from remote valve coupler at the end of the discharge hose.
 - D. While aiming discharge toward an open area, open DISCHARGE and remote valve and engage (turn on) clutch. Allow to discharge until clear water is coming out.
 - E. Open RECIRCULATION valve and allow to run until stream is clear.
 - F. Disengage (turn off) clutch, idle the engine, move DISCHARGE valve handle to discharge position, move agitator handle to NEUTRAL, and turn off the engine. (Remember to replace coupler gasket.)
 - G. Always remove drain plug and allow tank to drain.
 - H. In freezing weather, leave main tank drain plug out and remove pump drain plug. Move all slurry valves to OPEN position.
 - I. Wash the outside of HydroSeeder[®] to remove any corrosive materials.
 - J. Replace coupler gasket before re-installing discharge nozzle onto remote valve coupler.
- 2. Lubricating the HydroSeeder® See LUBRICATION AND FLUIDS CHART on page 21.



Lubrication should be performed IMMEDIATELY AFTER cleaning of the equipment, with the engine not running.

- A. Lubricate agitator shaft bearings located on the outside-front and rear of slurry tank.
- B. Service automatic pressure lubricator on pump as needed. See page 8.
- C. Check engine oil and replenish when necessary. Change oil and filter after first 5 hours, then every 100 hours thereafter. Consult the engine operator's manual for correct grade of oil and the engine break-in procedure.

NOTICE

Change engine oil and filter at least once annually, even if the 100 hours have not been met.

WEEKLY OR EVERY 40 HOURS OF OPERATING TIME

- 1. Clean the air cleaner following the instructions in the engine operator's manual.
- Lubricate all the points on the HydroSeeder[®] as outlined in DAILY of the CLEANING AND MAINTENANCE section. Additionally, lubricate the two grease fittings on clutch/pump.
- 3. Check the level in the hydraulic oil reservoir maintain level with dipstick on filler cap.
- 4. Inspect slurry tank for build up of residue in suction area and clear if necessary.

SEASONAL AND WINTER STORAGE MAINTENANCE

- 1. Drain slurry tank of all water prior to storage, and leave the drain plug uninstalled.
- 2. Park unit in suitable location and chock wheels to prevent inadvertent movement.
- 3. If possible, cover machine with tarp or park inside of an enclosure.
- 4. Store the HydroSeeder[®] with all slurry valve handles in the open position. To prevent damage from freezing, it is advisable to remove all slurry valves and store in a heated area.
- 5. Pour 1 qt (0.95 L) of mineral oil or environmentally safe lubricant into pump housing and spin pump by hand to prevent rust in pump. Remove drain plug.
- Chip and steel-brush any interior rust spots in slurry tank and touch-up with paint. See numbers 2 and 3 in IV. MAINTENANCE of the HYDROSEEDER[®] SAFETY SUMMARY SECTION on page 4.
- 7. Lubricate all fittings.
- 8. Lubricate equipment again just prior to starting operation after storage.
- 9. Change hydraulic oil and filter (400 hours).
- 10. Disconnect battery cables. In cold weather, remove battery and store in safe, warm place.
- 11. Add fuel stabilizer to fuel tank.

Ref. No.		-	ubricant	Frequency	Number
1 2 3 4 5 6 7	Check Grease Level in Automatic Pressure Luk Grease Agitator Shaft B Check Engine Oil Level Change Engine Oil and Grease Pump Bearings Check Hydraulic Fluid L Change Hydraulic Fluid Check Fuel Tank	oricator searings Filter .evel	SL CL MO MO CL HO HO FU	Daily Daily Daily See Engine Mar Weekly Weekly Seasonally Daily	1 2 1
	LUBRI	CANT OR F	LUID USE	D	
	CL Chass MO Motor	ulic Oil, ISO (ine Manual	Recommendatic	ons)
-	ΓΙΜΕ ΚΕΥ			FLUID CAPA	CITIES
DAIL	Y (8 hours)	\triangle		oline – 6.6 gal (2	
WEE	KLY (40 Hours)			Engine Oil – 2 qt (2 L) Iydraulic Fluid – 6 gal (23 L)	
SEAS	SONALLY (500 hours)	\bigcirc			
	ENGINE MANUAL				
ULL				2	
		о С С С С С С С С С С С С С			

LUBRICATION AND FLUIDS CHART

Figure 5 – Lubrication and Adjustment Points

Ref. No.	Desciption No. R	lequired	Ref. No.	Desciption	No. Required
1	Suction Cover	1	8B	Bearing Bolt	4
1B	Suction Cover Bolt	4	8LW	Bearing Washer	4
1N	Suction Cover Nut	4	9	Pump Shaft	1
2	O-ring	1	10	Snap Ring	1
3	Pump Impeller	1	11	Drive Hub	1
4	Mechanical Seal	1	11B	Drive Hub Bolt	2
5	Pump Casing	1	11N	Drive Hub Nut	2
5B	Suction Cover Bolt	8	12	Clutch Retainer	1
5W	Suction Cover Washer	8	12B	Locking Bolt	1
6	Radial Lip Seal	1	12W	Lockwasher	1
7	Casing Bearing	1	13	Clutch	1
7B	Bearing Bolt	4	14	Clutch Spacer	1
7LW	Bearing Washer	4	15	Pump Frame	1
8	Frame Bearing	1	16	Casing Drain Plug	1

PUMP ASSEMBLY

NOTE:

See parts manual for FINN part number.

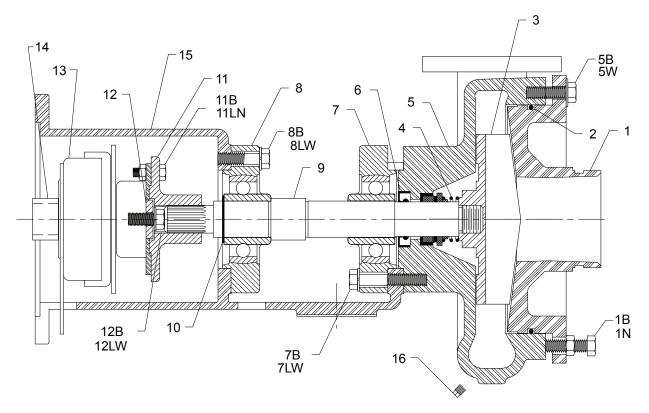


Figure 6 – Pump Assembly Components

HYDRAULIC SYSTEM

The hydraulic system on your FINN HydroSeeder[®] is designed to give trouble-free service, when properly maintained. The most important areas of maintenance are the hydraulic oil and filtration. The reservoir holds 6 gal (23 L) of ISO Grade 46 Hydraulic Oil. The hydraulic oil should be replaced per the lubrication schedule or if the oil becomes milky or gives off a burnt odor. The hydraulic oil filter must be replaced on schedule with a 5 absolute micron filter (FINN part number 023914). The hydraulic system relief is factory-set at 2,250 psi (15,513 kPa).

PUMP MAINTENANCE

NOTE:



Refer to Figure 6 on page 22 for callouts on pages 23 and 24.

Pump maintenance to be done only while engine is not running, and battery cables are disconnected. Failure to comply could result in death or serious injury.

A. FACTORY TOLERANCES

 To check pump tolerances, loosen the two clamps on pump suction piping and remove inlet elbow. Through the pump suction hole, insert a feeler gauge between the pump impeller (3) and the pump suction cover (1). This measurement on a new pump is from 0.030 to 0.045 in. (0.762 to 1.14 mm).



Tightening of the bolts should be performed in a criss-cross pattern. DO NOT TIGHTEN OVER 15 lb-ft (20 N•m). Overtightening will crack the flange of the pump suction cover.

B. IMPELLER CLEARANCE – TO BRING THE PUMP BACK TO PROPER TOLERANCE, PROCEED AS FOLLOWS:

- 1. Loosen four bolts (1B) and push pump suction cover (1) into pump casing (5) until pump suction cover hits the pump impeller (3). Pump impeller should be in full contact with pump suction cover.
- 2. Tighten eight bolts (5B), finger-tight. Pump impeller should rub the pump suction cover and not turn easily through one revolution.
- 3. Tighten four bolts (1B), hand-tight, until they touch the pump casing (5).
- 4. Back off eight bolts (5B) 3/4 turn.
- 5. Tighten four bolts (1B) 3/4 turn to 15 lb-ft (20 N•m) and tighten four nuts (1N) to 15 lb-ft (20 N•m).
- 6. Tighten eight bolts (5B) to 15 lb-ft (20 N•m). Clearance gap should be about 0.040 in. (1.00 mm). Check to see if pump impeller turns freely through one revolution.

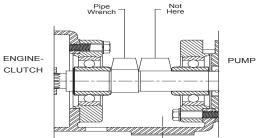


Figure 7 – Pump Impeller Removal

C. CLEANING

- 1. To clean pump impeller (3), loosen the two Victaulic pipe clamps and remove suction pipe assembly. The eye of the pump impeller can then be seen through the pump suction cover (1) and is readily accessible for cleaning.
- 2. To further access pump impeller, remove eight bolts (5B) that hold pump suction cover (1) in place. Remove pump suction cover, being careful not to damage O-ring (2).
- 3. To remove pump impeller, take the pump impeller wrench, which is stored in the tool box, and position it so the hole is aligned with any of the eight tapped holes in the front of the pump casing (5). The 90-degree leg of the pump impeller wrench should face inward, toward the pump impeller and be positioned between any two of the pump impeller fins. Bolt pump impeller wrench securely in place with one of the pump suction cover bolts (5B). Using a pipe wrench on the pump shaft (9), unscrew pump impeller, turning pump shaft in a clockwise direction. Be careful not to unscrew pump impeller too far before removing the impeller wrench.

D. INSTALLING NEW SEAL ASSEMBLY

NOTE: Do not unwrap new seal assembly until you are ready to install. All parts of seal assembly are packed in sequence of installation.

- 1. To replace seal assembly (4), perform the steps under CLEANING, and remove pump casing (5) by removing four bolts (7B) that hold the pump casing and pump casing bearing (7) to pump frame (15).
- 2. After cleaning all parts, including pump shaft, begin reassembly of pump. Install seal grease retainer (6) with the cavity portion of the seal facing inward. Rebolt pump casing and pump casing bearing (7) onto the clutch housing using four bolts (7B). Using a light oil lubricant (such as 3-in-1 oil), install the ceramic seat with its neoprene holder into the seal recess, making sure it is square with the pump shaft. Lubricate the inside of the bellows assembly with a light oil and check to make sure the steel ring is stuck (glued) to the end of the assembly. Slide the bellows assembly onto the shaft and push until the steel ring is against the ceramic seat.
- 3. Install the seal spring on the hub of the impeller. After coating the threads on the pump shaft with an antiseize compound, install the impeller, seating it securely.
- 4. Utilizing the O-ring (2), reinstall pump suction cover using eight bolts (5B). At this time, check to see that the pump runs freely. If pump impeller rubs the pump cover plate, either the pump impeller is not tight on the pump shaft or the suction cover plate needs readjusted (see IMPELLER CLEARANCE on page 23). Tighten bolts uniformly using 15 lb-ft (20 N•m) on the torque wrench.
- 5. After reinstalling the suction pipe assembly, lubricate, and tighten the two Victaulic clamps. Service the automatic pressure lubricator. See page 8.

TROUBLESHOOTING YOUR HYDROSEEDER[®]

Because of the tremendous work load usually placed upon the HydroSeeder[®], minor malfunctions will occur from time to time. If not remedied immediately, they could lead to degraded performance and damage to the equipment. This section describes possible problems and the action to correct them.

1. Foam in the tank and air entrainment:

The mixture of dry materials with water will sometimes cause excessive foaming, while other materials will cause air entrainment. This is exhibited by erratic discharge and/or a drop in pressure and distance. Some solutions are:

- A. As the slurry level drops in the tank, slow the agitator.
- B. Add 2 to 3 oz (59 to 89 ml) of an anti-foaming agent to the tank.
- C. If you can determine which additive is causing the air problem, either add it last or not at all unless it is the water.
- D. Limit recirculation time as much as possible.
- 2. Plugging or clogging:



Turn off engine and disconnect battery cables before working on equipment. Failure to comply will result in death or serious injury.

Sometimes, when a stoppage occurs, you will not be able to find anything in the line. When this happens, it means that the system became airbound instead of plugged. To remedy this, see FOAMING OF SOLUTION AND LACK OF DISTANCE on page 27. Plugging can occur in any one of four places, the valve and recirculation nozzle, the discharge nozzle, the pump area, and the sump area. The plugging is caused by either foreign objects or dewatered mulch.

- A. Obstruction in the discharge nozzle is determined by a change or stoppage of spray pattern:
 - 1. Disengage (turn off) clutch.
 - 2. Remove discharge nozzle.
 - 3. Clean the discharge nozzle. To clean the discharge nozzle, use the nozzle cleaning rod attached to the underside of the guard rail. Insert the nozzle cleaning rod into nozzle to push any buildup out of the nozzle. Repeat procedure until nozzle is completely cleaned. (Platform option only.)



Before loosening any clamps, determine if the pipe is hot. If so, let it cool before attempting to perform repairs. Failure to comply will result in death or serious injury.

- B. If the recirculation system is not working:
 - 1. Disengage (turn off) clutch and shut down engine.
 - 2. Remove clamp attaching recirculation valve.
 - 3. Slide rubber seal back and remove valve assembly.
 - 4. Check valve assembly, recirculation nozzle in the discharge pipe, and the recirculation pipe going into the tank. Clear any obstructions.
 - 5. Replace valve assembly and slide seal back into place. Lubricate outside of seal.
 - 6. Replace clamp.

- C. Obstruction in pump can be indentified by a drop in pressure. If a drop in pressure is accompanied by a frothy or whitish discharge stream, blockage is in suction line or sump area. To clear the pump:
 - 1. Disengage (turn off) clutch and stop engine. Perform proper lockout/tagout procedures.
 - 2. Loosen suction pipe clamps. If material is in the tank, stuff a rag into the suction piping.
 - 3. Remove clamp closest to pump.

NOTE: If no water comes out, it means the obstruction is in sump area.

- 4. Reach into pump and remove obstruction. If jammed, the pump suction cover may need to be removed.
- 5. Reassemble, removing rag plugging the suction piping.
- D. Obstruction in sump area, which is located at the bottom of the tank on the inside where the suction pipe is attached. There are three methods that can be used to remove an obstruction in the sump area. Use one of the methods described below:
 - 1. Clear the sump by backflushing through the discharge plumbing with the water supply hose. This is the easiset method.
 - 2. Remove the drain plug and run a long pole through the opening and into the sump area. Remove the obstruction and replace the drain cap.
 - 3. Use a pipe or pole through the loading hatch opening to dislodge the obstruction.

Do not turn the shaft backward with a pipe wrench. This will unscrew pump impeller from pump shaft. Consequently, when clutch is engaged (turned on), the pump impeller will screw onto pump shaft with a force great enough to break pump impeller. Failure to comply could result in minor or moderate personal injury. Failure to comply could also result in product or property damage.

TROUBLESHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
LEAKS:		
Tank Bearing	Lack of lubrication – seal worn	Replace seal and follow lube schedule.
	Bolts not tightened	Tighten uniformly to 25 lb–ft (34 N•m).
Pressure Pipe Clamps	Rubber seal cracked, pinched, or torn.	Replace, always grease seal before clamping shut.
Suction Pipe Clamps	Rubber seal cracked, pinched, or torn	Replace, always grease seal before clamping shut.
Discharge Swivels	Not greased often enough	Rebuild swivels w/repair kit (part number 012397, qty. 2 required).
Pump Shaft	Pressure lubricator not serviced	Replace pump seal. Service auto- matic pressure lubricator daily. See page 8.
Pump Suction Cover	O-ring bad	Replace O-ring; use grease when replacing.
Discharge Boom or Nozzle Camlock Fittings	Worn or no gasket	Replace gasket.
MACHINE JUMPS DURING OP	ERATION:	
Agitator	Agitator bent by heavy object fall- ing on it	Straighten agitator or shim so it runs true.
Bent Paddles	Loading wood fiber mulch into tank before tank is half full	Straighten agitator paddle; realign agitator to run true.
FOAMING OF SOLUTION AN	ID LACK OF DISTANCE:	
Pump loses prime – lacks distance – leaves excessive amount in tank –100 gal (378 L) or more	Sucking air in suction lines	Check all suction connections to see that rubber seals are in good shape. Grease seals before replac- ing clamps.
	Air entrainment	See TROUBLESHOOTING step 1 on page 25.
	Low engine RPM (Below 2,750 RPM – No load)	Check throttle cable and linkage. See authorized engine dealer.
	Soft water	Slow the agitator.
	Too much agitation	Slow the agitator.
	Pump worn	Reset pump tolerance. See page 23.
	Suction partially plugged	Clean out machine. See page pages 24.
	Nozzle worn or plugged	Clean nozzles; replace if neces- sary
	Fertilizer	Change type.
	Clutch slippage	Readjust clutch; See clutch man- ual.

TROUBLESHOOTING YOUR HYDROSEEDER®:

Problem	Probable Causes	Suggested Solutions
VALVE:		
Valve stuck	Frozen	Thaw out ice and lubricate; leave in discharge position during storage.
Constant plugging during operation	Foreign material in slurry	Drain and clean out tank; check storage for foreign materials.
Constant plugging during loading and discharging	Loading HydroSeeder® before tank is half full of water	Reinstruct your operator. See pages 12 and 13.
	Incorrect loading procedure	See pages 12 and 13.
	Improper operation by operator	Reinstruct your operator. Review OPERATOR'S MANUAL.
	Clutch slipping	Readjust clutch. See manual.
	Not moving valve handle far enough	Valve should be fully open.
	Machine not being flushed out prior to reloading	See pages 12 and 13.
	Machine not being run at correct RPM during loading	Reinstruct your operator. See pages 12 and 13.
Extension hose plugs after use	Letting water run out, leaving wood fiber mulch to dry out	If hose has to be uncoupled, seal ends, to keep water in hose and prevent wood fiber mulch from dry- ing out.
CLUTCH:		
Does not pull load or overheats	Out of adjustment	Readjust clutch. See manual.
Jumps out of engagement	Too loose or too tight	Readjust clutch. See manual.
PUMP:		
Excessive wear	Fertilizer with highly abrasive fillers	Change fertilizer – avoid abrasive fillers.
	Overloading machine with dry material	Load machine to recommended capacities.
	Too much time allowed between loading and discharging	After loading and mixing has been completed, set agitator at 1/2 speed in reverse and disengage pump.
	Recirculating all the time	Close recirculation valve when dis- charging through the boom.
Will not turn	Frozen	Warm housing to melt ice.
	Jammed with fertilizer or lime	Remove cover and clean interior.


Impeller rusted to suction cover

plate

Pull cover and remove rust.

T30 HydroSeeder® Parts Manual

Model MO

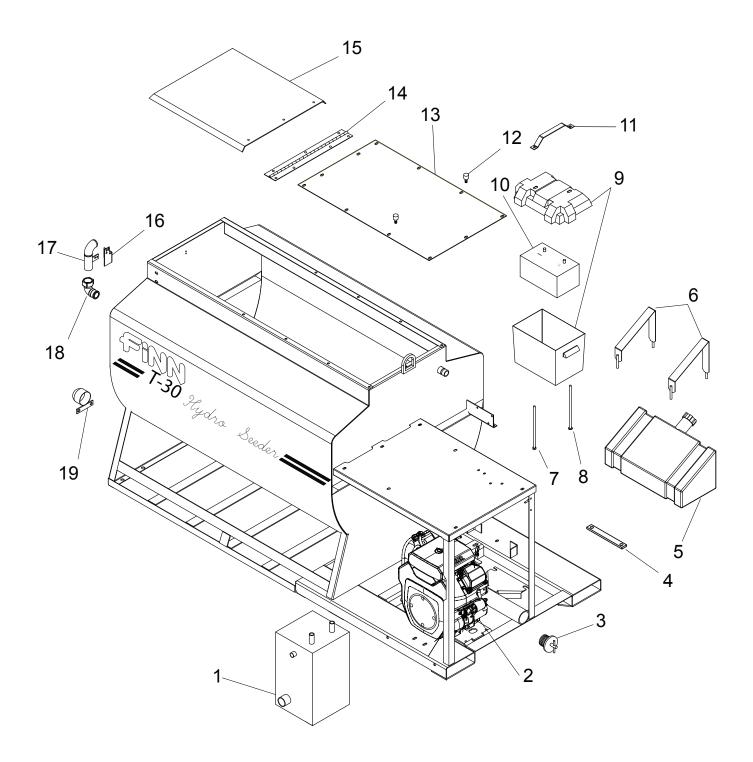




Ref. No.	Part Number	Description	No. Required
1	085145	Hydraulic Reservoir	1
2	085262	Kohler 18 HP Gasoline Engine (See Page 4	2) 1
3	004593	Drain Plug	1
4	085265	Pump Isolator	1
5	035142	Fuel Tank	1
	035123V	Fuel Tank Shut-Off Valve	1
	035123G	Fuel Tank Shut-Off Valve Grommet	1
6	F30-0009	Fuel Tank Strap	2
7	005495-22	Battery Bolt (w/ Nut)	1
8	085266	Battery Bolt (w/ Flat Washer)	1
9	080223	Battery Box	1
10	002256-12	12V Battery - Interstate Battery #MT34	1
11	080220	Battery Tie-Down Strap	1
12	085152	Rubber Stud Mount	2
13	085127	Tank Top	1
14	085132-01	Hatch Lid Hinge	1
15	085126	Hatch Lid	1
	005433	Soft Latch	1
16*	F60-0013	Fill Port Bracket	1
17*	080636	Fill Port Weldment	1
18*	080638	90° Polypropylene Elbow	1
19	005399	Agitator Shaft Guard	1

NOTE:

* Denotes Optional Attachment



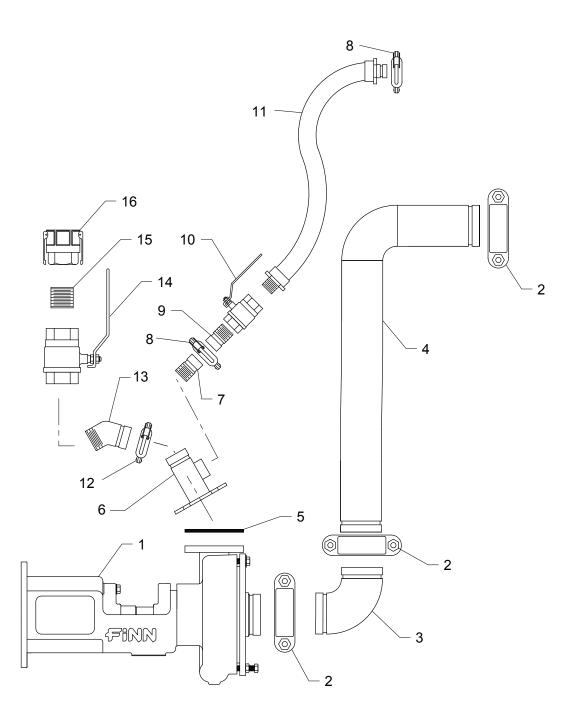




SUCTION, DISCHARGE, AND RECIRCULATION PIPING

Ref. No.	Part Number	Description	No. Required
1	085160	Clump Assembly (See Pages 34-35 for parts breakdow	n) 1
2	080366	Pipe Clamp	3
	002439	Clamp Gasket	1 per
3	002868	90° Grooved Elbow	1
4	085210	Suction Pipe Weldment	1
5	008469	Discharge Pipe Gasket	1
6	080558-01	Discharge Pipe Weldment	1
7	005083-07	Recirculation Nozzle	1
8	005156	Pipe Clamp	2
	005183	Clamp Gasket	1 per
9	005083-08	Recirculation Nozzle	1
10	021559	Ball Valve	1
11	085269	Recirculation Hose	1
12	006252	Pipe Clamp	1
	006253	Clamp Gaske	1 per
13	080679	45° Discharge Elbow	1
14	007710	Ball Valve	1
15	160309	Close Nipple	1
16	080377	Female Nyglass Coupler	1
	006515	Coupler Gasket	1 per



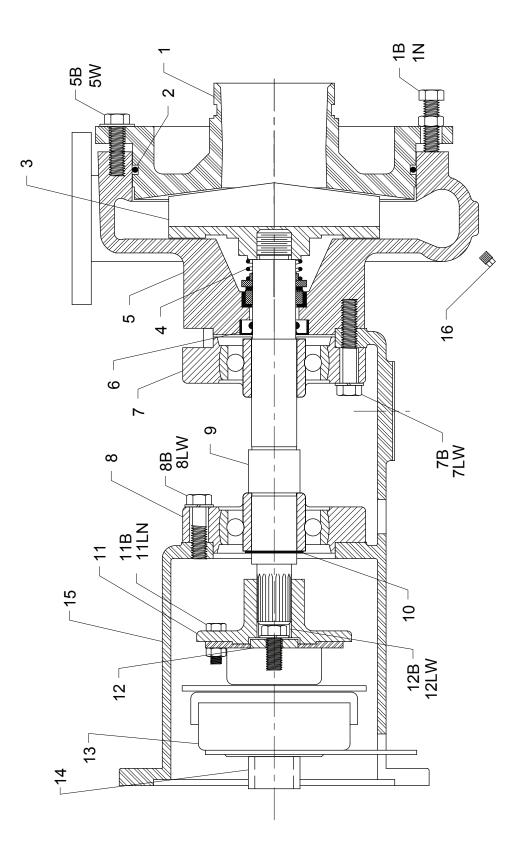

Ref. No	Part Number	Description	No. Required
	085160	Clump Assembly	1
1	080489	Pump Suction Cover	1
1B	0X0720	Pump Suction Cover Bolt	4
1N	000Y07	Pump Suction Cover Nut	4
2	080499	O-ring	1
3	085159	Pump Impeller	1
4	080485	Mechanical Seal	1
5	080487	Pump Casing	1
5B	0X0720	Suction Cover Bolt	8
5W	000W07	Suction Cover Washer	8
6	080493	Radial Lip Seal	1
7	080498	Pump Casing Bearing	1
7B	0X0740	Bearing Bolt	4
7LW	00W07L	Bearing Lockwasher	4
8	080498	Pump Frame Bearing	1
8B	0X0728	Bearing Bolt	4
8LW	00W07L	Bearing Lockwasher	4
9	080491	Pump Shaft	1
10	080497	External Retaining Ring	1
11	080490	Drive Hub	1
11B	0X0516	Drive Hub Bolt	2
11LN	00Y05L	Drive Hub Locknut	2
12	080590-07	Clump Washer	1
12B	080741	Locking Bolt	1
12LW	00W07L	Retainer Lockwasher	1
13	035084	Electric Clutch	1
14	080590-08	Clump Spacer	1
15	080486	Pump Frame	1
16	160232	Pump Drain Plug	1
		NOT SHOWN	

CLUTCH/PUMP ASSEMBLY

WHEN ORDERING PARTS, BE SURE TO STATE SERIAL NUMBER OF MACHINE

Pressure Lubricator


Clump Guard

002383

F60-0022-01


1

1

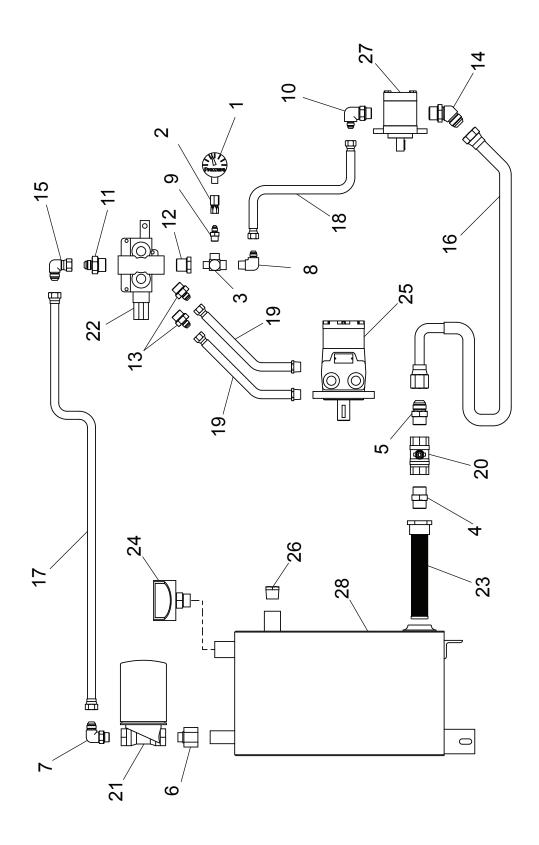

HYDRAULIC SYSTEM


085247 Hydraulic Hose and Fittings Kit (<i>Items 1–18</i>) 1 1 012044 Pressure Gauge 1 2 012874 Straight Male Adapter 1 3 022301 Street Tee 1 4 023186 Straight Male Adapter 1 5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055359 Straight Male Adapter 1 11 055359 Straight Male Adapter 2 14 08769 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 2 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17	Ref. No.	Part Number	Description	No. Required
1 012044 Pressure Gauge 1 2 012874 Straight Male Adapter 1 3 022301 Street Tee 1 4 023186 Straight Male Adapter 1 5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 10 023913				
2 012874 Straight Male Adapter 1 3 022301 Street Tee 1 4 023186 Straight Male Adapter 1 5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 1 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Presure Hose 1 19 0852	4			,
3 022301 Street Tee 1 4 023186 Straight Male Adapter 1 5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 22 08074			e e e e e e e e e e e e e e e e e e e	
4 023186 Straight Male Adapter 1 5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 023120 <				
5 023616 Straight Male Adapter 1 6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Bail Valve 1 21 023913 Hydrac Filter Assembly 1 22 080743 4-Way Hydraulic Valve 1 023120				
6 023911 Straight Female Adapter 1 7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 05539 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 10 023913 Hydrac Filter Assembly 1 120 020658 Ball Valve 1 22 080743 4-Way Hydraulic Valve 1 23 080474 Hiter Element 1 24 023120			•	
7 055230 Male 90° Adapter Elbow 1 8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydraulic Motor Hose 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 05F311 Knob for Valve 1			•	
8 055234 Male 90° Adapter Elbow 1 9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 023914 Filter Element 1 023914 023120 Seal Kit for Hydraulic Valve 1 023470 Handle For Valve 1 023470 Handle for Valve 1 05F311 Knob for Valve 1			•	
9 055272 Straight Male Adapter 1 10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydrac Filter Assembly 1 22 080743 4-Way Hydraulic Valve 1 023914 Filter Element 1 023470 023120 Seal Kit for Hydraulic Valve 1 023470 Handle for Valve 1 023470 Handle for Valve 1 023470 Handle for Valve 1			-	-
10 055309 Male 90° Adapter Elbow 1 11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydraulic Motor Hose 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023914 Filter Element 1 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 0SF311 Knob for Valve 1 0SF311 Knob for Valve 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 </td <td></td> <td></td> <td>-</td> <td></td>			-	
11 055359 Straight Male Adapter 1 12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 20 020658 Ball Valve 1 21 023913 Hydraulic Motor Hose 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 023470 Handle for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydraulic Motor 1 <			•	
12 080789 Reducer Bushing 1 13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydraulic Motor Hose 1 22 080743 4-Way Hydraulic Valve 1 023914 Filter Element 1 2 023120 Seal Kit for Hydraulic Valve 1 023470 14 0SF311 Knob for Valve 1 0SF311 Knob for Valve 1 0 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydraulic Suction Strainer 1 25 080482 <t< td=""><td></td><td></td><td>-</td><td></td></t<>			-	
13 085014 Straight Male Adapter 2 14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Presure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 023914 Filter Element 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydraulic Motor 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump 1			•	1
14 085157 45° Male Adapter 1 15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydra Filler / Breather Cap 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump 1			5	
15 FW71870 90° Union Elbow 1 16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydra Filler / Breather Cap 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump				2
16 085153 Suction Hose 1 17 085154 Return Hose 2 18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023914 Filter Element 1 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 1 023470 Handle Bracket for Valve 1 0 0SF311 Knob for Valve 1 0 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 1 23 004618 Hydraulic Suction Strainer 1 1 24 005793 Hydac Filler / Breather Cap 1 1 25 080482 Hydraulic Motor			-	1
17 085154 Return Hose 2 18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydraulic Assembly 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 05F311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydac Filler / Breather Cap 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump 1		FW71870		1
18 085156 Pressure Hose 1 19 085227 Hydraulic Motor Hose 1 20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 023914 Filter Element 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 023470 Handle for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydraulic Motor 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump 1				
19085227Hydraulic Motor Hose120020658Ball Valve121023913Hydac Filter Assembly1023914Filter Element1220807434-Way Hydraulic Valve1023120Seal Kit for Hydraulic Valve1023470Handle Bracket for Valve1023470Handle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	17	085154	Return Hose	2
20 020658 Ball Valve 1 21 023913 Hydac Filter Assembly 1 023914 Filter Element 1 22 080743 4-Way Hydraulic Valve 1 023120 Seal Kit for Hydraulic Valve 1 023470 Handle Bracket for Valve 1 023470 Handle for Valve 1 0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydraulic Motor 1 25 080482 Hydraulic Level Sight Gauge 1 26 080534 Hydraulic Pump 1	18	085156	Pressure Hose	1
21023913Hydac Filter Assembly1023914Filter Element1220807434-Way Hydraulic Valve1023120Seal Kit for Hydraulic Valve1023470Handle Bracket for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	19	085227	Hydraulic Motor Hose	1
023914Filter Element1220807434-Way Hydraulic Valve1023120Seal Kit for Hydraulic Valve1023470Handle Bracket for Valve1023470Handle for Valve10SF310BHandle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	20	020658	Ball Valve	1
220807434-Way Hydraulic Valve1023120Seal Kit for Hydraulic Valve1023470Handle Bracket for Valve1SF310BHandle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	21	023913	Hydac Filter Assembly	1
023120Seal Kit for Hydraulic Valve1023470Handle Bracket for Valve1023470Handle Bracket for Valve1SF310BHandle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1		023914	Filter Element	1
023470Handle Bracket for Valve1SF310BHandle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	22	080743	4-Way Hydraulic Valve	1
SF310BHandle for Valve10SF311Knob for Valve10SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1		023120	Seal Kit for Hydraulic Valve	1
0SF311 Knob for Valve 1 0SF312 Roll Pin for Valve - 1/8 in. x 1-3/8 in. 1 23 004618 Hydraulic Suction Strainer 1 24 005793 Hydac Filler / Breather Cap 1 25 080482 Hydraulic Motor 1 26 080534 Hydraulic Level Sight Gauge 1 27 080642 Hydraulic Pump 1		023470	Handle Bracket for Valve	1
0SF312Roll Pin for Valve - 1/8 in. x 1-3/8 in.123004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1		SF310B	Handle for Valve	1
23004618Hydraulic Suction Strainer124005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1		0SF311	Knob for Valve	1
24005793Hydac Filler / Breather Cap125080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1		0SF312	Roll Pin for Valve - 1/8 in. x 1-3/8 in.	1
25080482Hydraulic Motor126080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	23	004618	Hydraulic Suction Strainer	1
26080534Hydraulic Level Sight Gauge127080642Hydraulic Pump1	24	005793	Hydac Filler / Breather Cap	1
27080642Hydraulic Pump1	25	080482	Hydraulic Motor	1
27080642Hydraulic Pump1	26	080534	Hydraulic Level Sight Gauge	1
28085145Hydraulic Reservoir1	27	080642	Hydraulic Pump	1
	28	085145	Hydraulic Reservoir	1

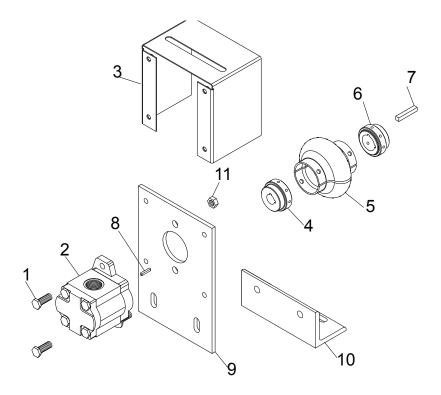

HYDRAULIC PUMP DRIVE ASSEMBLY

Ref. No.	Part Number	Description	No. Required
1	0X0616	3/8-16 x 1" Lg. Hex Hd. Bolt	2
2	080642	Hydraulic Pump	1
3	F30-0001	Hydraulic Pump Coupling Guard	1
4	080807	Coupling Half 5/8" Bore w/ Keyway	1
5	080809	Coupling Sleeve	1
6	080808	Coupling Half 1" Bore	1
7	190123-24	1/4" Sq. Key x 1-1/2" Lg.	1
8	080642-A	Pump Key	1
9	085133	Hydraulic Pump Mounting Plate	1
10	F30-0014	Hydraulic Pump Mounting Angle	1
11	00Y06L	3/8" Locknut	2



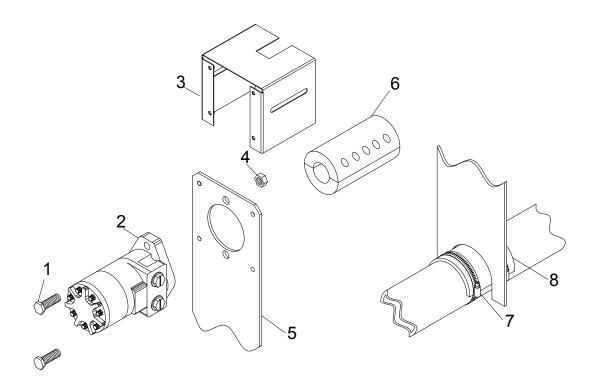


HYDRAULIC AGITATOR DRIVE ASSEMBLY

Ref. No.	Part Number	Description	No. Required
1	0X0824	1/2-13 x 1-1/2" Lg. Hex Hd. Bolt	2
2	080482	Hydraulic Motor	1
3	F60-0022-02	Agitator Coupling Guard	1
4	00Y08L	1/2-13 Locknut	2
5	085128-01	Torque Arrestor Plate	1
6	080523	2-Piece Rigid Coupling	1
7	022657	Worm Gear Clamp (This is 4" Clamp)	2
8	085150	Torque Arrestor Pad	1




BEARING ASSEMBLY

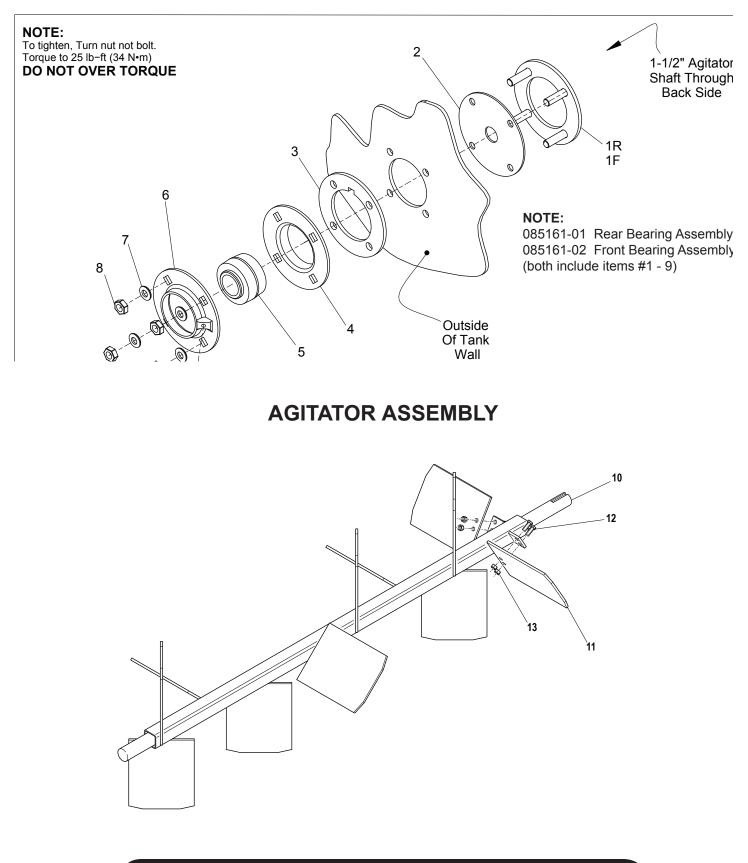

AGITATOR AND BEARING ASSEMBLY


Ref. No.	Part Number	Description	No.Required
	085161-01	Rear Bearing Assembly (Includes #1 thru #9)	1
	085161-02	Front Bearing Assembly (Includes #1 thru #9)	1
1R	085162-01	Rear Clamping Ring	1 per
1F	085162-02	Front Clamping Ring	1 per
2	007416	Agitator Rotary Gasket	1 per
3	006975	Agitator Bearing Gasket	1 per
4	007212-02	Flangette	1 per
5	003022	Bearing	1 per
6	007211-02	Flangette w/ Lube Coupling	1 per
7	012605	Bevel Sealing Washer	4 per
8	0Y08SS	Agitator Nut	4 per
9	007705	Grease Fitting	2
		AGITATOR ASSEMBLY	
10	085131	Agitator Weldment	1
11	085130-01	Agitator Paddle w/Holes	2
12	0X0616	Agitator Paddle Bolt	2 per
13	00Y06L	Agitator Paddle Nut	2 per



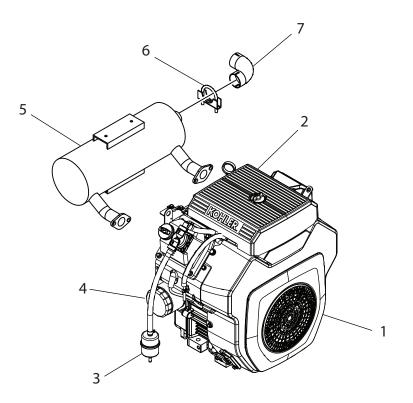


ENGINE PARTS

Ref. No.	Part Number	Description	No. Required
1	085262	Kohler 18 HP Engine	1
2	KL4708303	Air Filter	1
3	080105	Fuel Filter	1
4	KL1205001	Oil Filter	1
5	KL2406817	Muffler	1
6	031421	Muffler Clamp	1
7	031420	Muffler Elbow	1
		NOT SHOWN	
	085142	Throttle Cable	1
	080567	Choke Cable	1

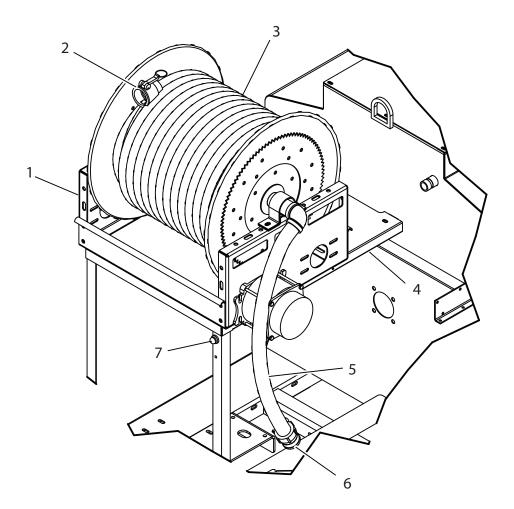

HOSE REEL PARTS


Ref. No.	Part Number	Description	No. Required
1	085246	Electric Hose Reel Assembly (See Pa	ages 48 – 49) 1
2	080261	Female Nyglass Coupler	1
3	003308-10	1-1/4" Hose x 100'	1
4	F30-0005	Hose Reel Mount Tray	1
5	085252	Lead-In Hose	1
6	080378	Male Nyglass Coupler	1
7	020886	Push Button	1
8	080800	Hose Roller and Spool Guide	1

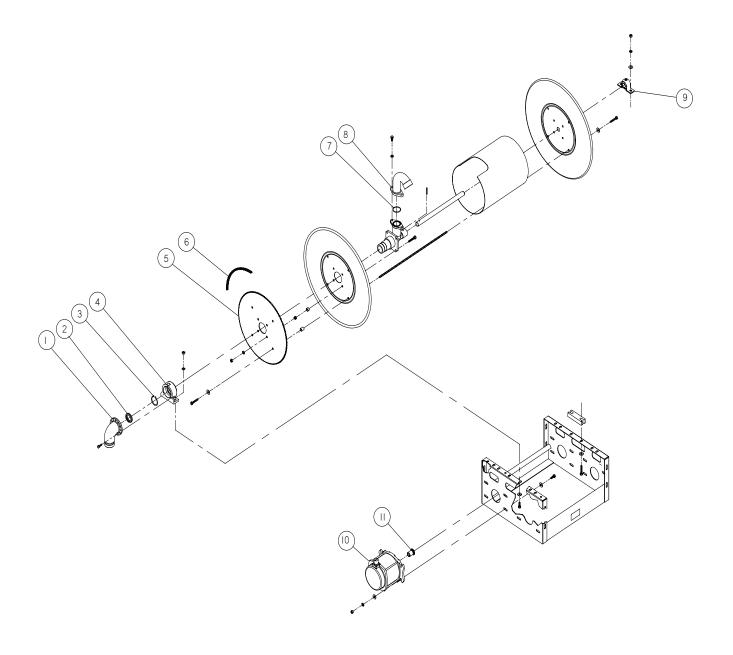



Ref. No	Part Number	Description	No. Required
	085246	Electric Hose Reel Assembly	1
1	080801-6	Inlet Pipe	1
2	080801-14	Seal and Ring Assembly	1
3	080801-07	Snap Ring	1
4	080801-03	Bearing Housing Sub-Assembly	1
5	080801-10	Sprocket	1
6	080801-12	Chain Assembly	1
7	080801-08	O-ring	1
8	080801-11	Gooseneck	1
9	080801-09	RHP Ball Bearing	1
10	008188	Electric Motor	1
11	085246-01	Sprocket	1



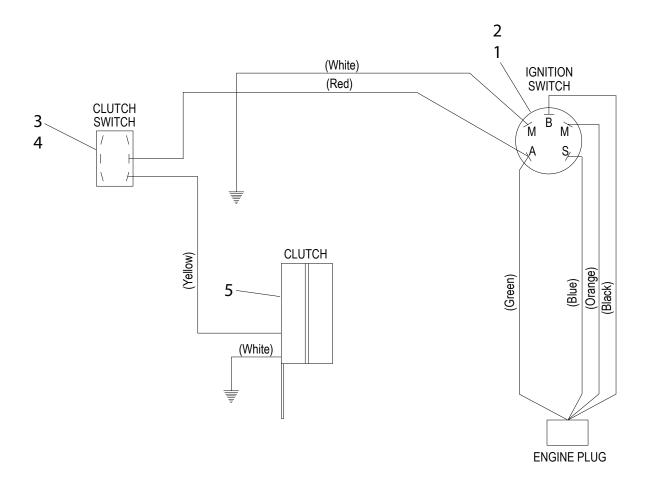

CONTROL PANEL WIRING

Ref. No.	Part Number	Description	No. Required
	085267	Control Panel Assembly	1
1	080654	Ignition Switch	1
2	080654-K	Ignition Key	1
3	010531	Clutch Toggle Switch	1
4	080526	Clutch Toggle Switch Dust Boot	1
5	035084	Electric Clutch	1
	085164	Control Panel Wiring Harness	1
Control	Panel Wiring Harnes	s not in current BoM. Used Part# from the T60 BoM	


TOOL KIT

Part Number	Description	No. Required
		_
000698	Automatic Pressure Lubricator Grease, 1 lb (16 oz) Can	1
005220	Impeller Wrench	1
080273	Long Distance Nozzle Assembly	1
080131	Long Distance Nozzle	1
080260	Male Nyglass Adapter	1
160749	Reducer Bushing	1
080394	Wide Fan Nozzle Assembly	1
006605	Wide Fan Nozzle	1
080260	Male Nyglass Adapter	1
160750	Reducer Bushing	1
080395	Narrow Fan Nozzle Assembly	1
006604	Narrow Fan Nozzle	1
080260	Male Nyglass Adapter	1
160750	Reducer Bushing	1
004593	Expansion Plug	1
006515	Coupler Gasket	1
012681A	FINN Beige Aerosol Paint	1
012305	Adhesive Label (Remove Aerosol Can)	1
080535	Remote Valve Assembly	1
012083	Full Port Ball Valve	1
080260	Male Nyglass Adapter	1
080261	Female Nyglass Coupler	1
160307	Close Nipple	1
160520	Nipple	1
	Engine Parts Manual	1
	HydroSeeder [®] Parts/Operator's Manual	1

SEAL REPAIR KITS

Part Number	Description	No. Required
023120	Seal Kit for Hydraulic Valve #022850	
080615	Seal Kit for Hydraulic Motor #080482	
080616	Seal Kit for Hydraulic Pump #080642	



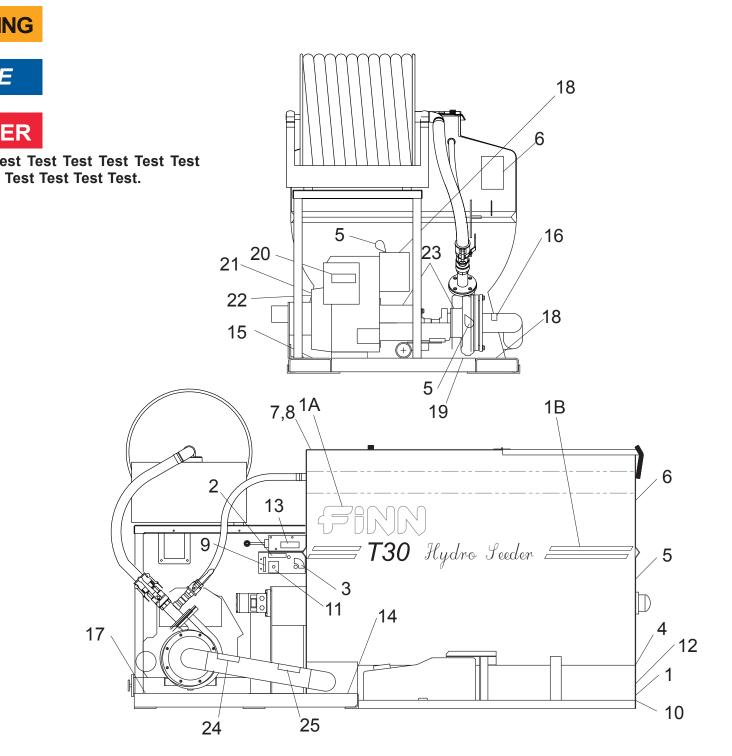

Ref. No.	Part Number	Description	No. Required
	080699	Decal Sheet	1
*1	011690	FINN Nameplate	1
*1A	031235	Decal "FINN"	2
*1B	085158	Decal "T30 HydroSeeder"	2
2	KL2511317	Decal "STOPPING INSTRUCTIONS"	1
3	KL2411303	Decal "IGNITION SWITCH"	1
4	011662	Decal "U.S. Patent Numbers"	1
5	007230	Decal "Service Daily"	3
6	023519	Decal "CAUTION! Wear Eye Protection "	2
7	008097	Decal "DANGER! Do Not Enter Tank"	1
8	085078	Decal "Operating Instructions"	1
9	007535	Decal "Throttle"	1
*10	012260	"IMPORTANT" Metal Plate	1
11	085137	Decal "Pump On/Off"	1
12	020976	Decal "Patent Infringement"	1
13	008286	Decal "Agitator Speed"	1
14	031331	Decal "Gasoline"	1
15	022357	Decal "WARNING! Turn Off Engine"	1
16	012180	Decal "To Avoid Damage To Suction Cover"	' 1
17	011567	Decal "DANGER! Do Not Aim"	1
18	012179	Decal "WARNING! Do Not Operate"	2
19	006869	Decal "Pressure Lubricator"	1
20	012278	Decal "DANGER! Hot Exhaust"	1
21	012272	Decal "Hydraulic Fluid"	1
22	021665	Decal "Hydraulic Instructions"	1
23	007231	Decal "Service Weekly"	2
24	005216	Decal "DANGER! Open Recirculation"	1
25	008209	Decal "DANGER! Before Loosening Clamp'	' 1

DECALS

* NOTE:

All of the decals depicted and listed on Pages 46-47 (except those identified with an asterisk) are shown for location purposes only. To order replacements you must order T30 Decal Kit (part# 080699). Replacement decals and plates for those identified with an asterisk are not part of the decal kit and must be ordered separately.

